

*R. Field **
2B-418

5253B FREQUENCY CONVERTER

SN- 513-09231

OPERATING AND SERVICE MANUAL

HEWLETT  PACKARD

CERTIFICATION

The Hewlett-Packard Company certifies that this instrument was thoroughly tested and inspected and found to meet its published specifications when it was shipped from the factory. The Hewlett-Packard Company further certifies that its calibration measurements are traceable to the U.S. National Bureau of Standards to the extent allowed by the Bureau's calibration facility.

WARRANTY AND ASSISTANCE

All Hewlett-Packard products are warranted against defects in materials and workmanship. This warranty applies for one year from the date of delivery, or, in the case of certain major components listed in the operating manual, for the specified period. We will repair or replace products which prove to be defective during the warranty period. No other warranty is expressed or implied. We are not liable for consequential damages.


For any assistance contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.



OPERATING AND SERVICE MANUAL

MODEL 5253B FREQUENCY CONVERTER

SERIALS PREFIXED: 513-

This manual applies directly to  Model 5253B Frequency Converters having serial number prefix 513-.

OLDER INSTRUMENTS

This manual with changes provided in Appendix I also applies to models having serial prefix numbers 450, 321, and 311.

MODEL 5253A

This manual with information provided in Appendix II also applies to Model 5253A Frequency Converters having serial prefix numbers 238 and 226.

Copyright HEWLETT-PACKARD COMPANY 1963
1501 PAGE MILL ROAD, PALO ALTO, CALIFORNIA, U.S.A.

TABLE OF CONTENTS

Section	Page	Section	Page
I GENERAL	1-1	V MAINTENANCE (cont'd)	
1-1. Description	1-1	5-10. Repair and Replacement	5-1
1-5. Specifications	1-1	5-12. Printed Circuit Component	
1-7. Accessory	1-1	Replacement	5-3
1-9. Instrument Identification	1-1	5-14. Video Amplifier Assembly	
1-11. Cooling	1-1	Replacement	5-3
II PREPARATION FOR USE	2-1	5-16. Mixer Diode Replacement	5-3
2-1. Unpacking and Mechanical Inspection	2-1	5-18. Meter Replacement Procedure	5-3
2-3. Electrical Inspection	2-1	5-20. Harmonic Generator Adjustment	5-4
2-5. Storage and Reshipment	2-1	5-22. Low Pass Filter Adjustment	5-4
2-8. Installation	2-1	5-25. Mechanical Adjustment of Meter	
2-11. Power Requirements	2-1	Zero	5-5
2-13. Electrical Connections	2-1	5-28. Sensitivity Check	5-5
III OPERATION	3-1	5-29. Meter Accuracy Check	5-5
3-1. Front Panel	3-1	5-30. Low Pass Filter Check	5-5
3-3. Maximum Input Voltages	3-1	5-31. In-Cabinet Performance Check	5-6
3-5. Operating Procedures	3-1		
3-6. Normal Range Measurements	3-1	VI REPLACEABLE PARTS	6-1
3-8. Extended Range Measurements	3-1	6-1. Introduction	6-1
3-12. Double-Checking Frequency		6-4. Ordering Information	6-1
Measurement Result	3-1		
3-14. Aid to Rapid Tuning	3-3	APPENDIX I - Manual Changes	IA-1
IV PRINCIPLES OF OPERATION	4-1	APPENDIX II - Model 5253A	IIA-1
4-1. General	4-1	IIA-1. Introduction	IIA-1
4-5. Harmonic Generator (A2, A3), and		IIA-3. Description	IIA-1
Harmonic Selector Cavity	4-1	IIA-7. Operating Procedure	IIA-1
4-7. Mixer (A4)	4-2	IIA-8. Normal Range Measurements	IIA-1
4-9. Video Amplifier Assembly (A1)	4-2	IIA-10. Extended Range Measurements	IIA-1
4-11. Level Indicator Meter	4-2	IIA-14. Video Amplifier Assembly (A1)	IIA-3
V MAINTENANCE	5-1	IIA-16. Level Indicator Meter	IIA-3
5-1. General	5-1	IIA-18. Harmonic Generator Adjustment	IIA-3
5-2. Introduction	5-1	IIA-20. Low Pass Filter Adjustment	IIA-3
5-4. Periodic Maintenance	5-1	IIA-22. Meter Adjustment	IIA-3
5-6. Test Equipment	5-1	IIA-23. Mechanical Adjustment of	
5-8. Troubleshooting	5-1	Meter Zero	IIA-5
		IIA-26. Sensitivity Check	IIA-5
		IIA-27. Meter Accuracy Check	IIA-5
		IIA-28. Low Pass Filter Check	IIA-5
		IIA-29. In-Cabinet Performance Check	IIA-6


LIST OF ILLUSTRATIONS

Figure	Page	Figure	Page
1-1. Model 5253B	1-0	5-4. Top View - Test Points	5-9
3-1. Front Panel	3-0	5-5. Schematic Diagram	5-9
3-2. Frequency Measurement Procedure	3-2	6-1. Mechanical Parts Location - 5253B	6-2
3-3. Typical Frequency Measurements	3-3	6-2. Mechanical Parts Location - 5253B	6-3
4-1. Block Diagram	4-0	APPENDIX	
4-2. Harmonic Generator (A2, A3)	4-0	IA-1. Schematic Diagram	IA-2
4-3. Harmonic Selector Cavity	4-1	IIA-1. Frequency Measurement Procedure	IIA-2
4-4. Balanced Mixer (A4)	4-2	IIA-2. Video Amplifier (A6)	IIA-4
4-5. Video Amplifier (A1)	4-3	IIA-3. Level Indicator Meter Circuit	IIA-4
4-6. Level Indicator Meter Circuit	4-3	IIA-4. Top View	IIA-6
5-1. A1 Video Amplifier Component Location	5-6	IIA-5. Left Side View	IIA-7
5-2. Left Side View	5-7	IIA-6. Right Side View	IIA-8
5-3. Right Side View	5-8	IIA-7. Top View - Test Points	IIA-9
		IIA-8. Schematic Diagram	IIA-11

LIST OF TABLES

Table	Page	Table	Page
1-1. Specifications	1-1	6-2. Replaceable Parts	6-7
3-1. Frequency Resolution	3-1	APPENDIX	
5-1. Recommended Test Equipment	5-1	IA-1. Reference Designation Index	IA-3
5-2. Resistance Troubleshooting Aid	5-1	IIA-1. Specifications	IIA-1
5-3. Troubleshooting Procedure	5-2	IIA-2. Troubleshooting Procedure	IIA-10
5-4. Adjustments after Repair	5-4	IIA-3. Reference Designation Index	IIA-12
6-1. Reference Designation Index	6-4	IIA-4. Replaceable Parts	IIA-14

5253B frequency converter

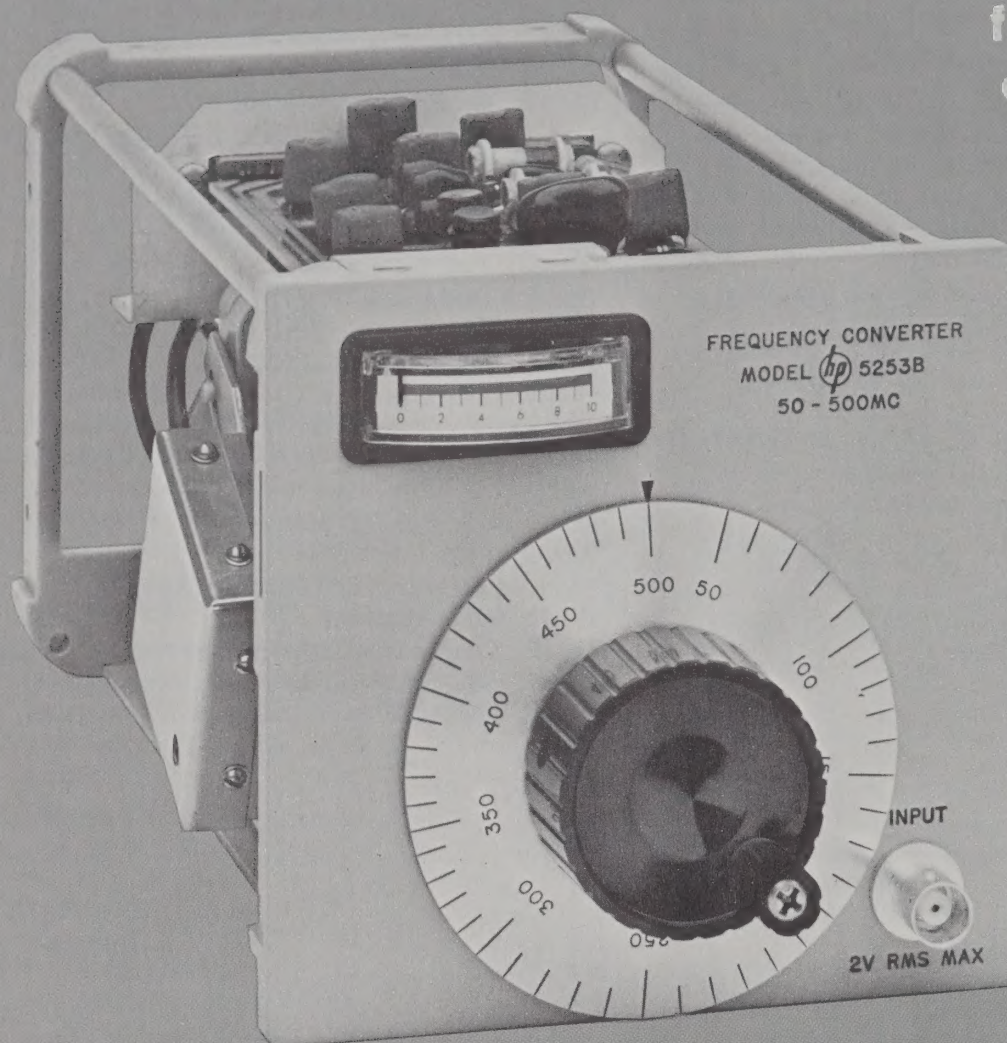

BNC-BNC cable

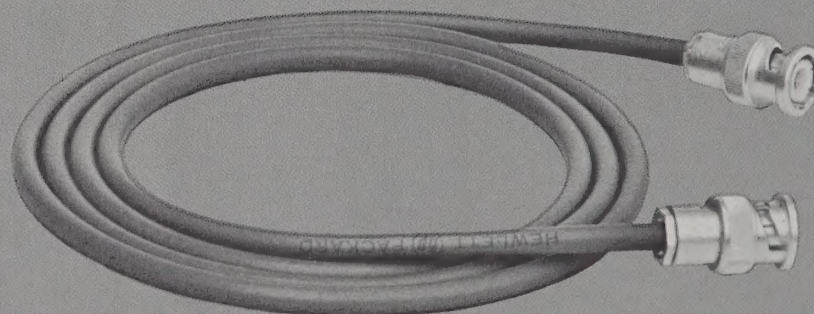


Figure 1-1. Model 5253B and Accessory

SECTION I

GENERAL

1-1. DESCRIPTION.

1-2. The Hewlett-Packard Model 5253B Frequency Converter is a plug-in unit which converts a Hewlett-Packard Model 5243L or 5245L Electronic Counter into a direct reading counter from 50 to 512 Mc.

1-3. The stability and accuracy of the basic counter are retained by multiplying a 10-Mc signal, derived from the 1-Mc internal time base of the counter, to a selectable harmonic frequency between 50 and 500 Mc. This known harmonic of 10 Mc is then heterodyned with the INPUT signal. If the resulting difference frequency is between 100 kc and 12 Mc (bandwidth of amplifier in plug-in), it is counted and displayed by the counter. The frequency of the INPUT signal is then indicated by the combination of the MIXING FREQUENCY control (in megacycles; front panel of plug-in) and the digital display of the counter (in megacycles).

1-4. A front panel meter, by monitoring the difference-frequency output of the plug-in to the counter, aids in selecting the desired MIXING FREQUENCY and also in determining if INPUT signal amplitude is adequate for accurate frequency measurement.

1-5. SPECIFICATIONS.

1-6. Table 1-1 contains all technical specifications for the Model 5253B when operated in the Model 5243L

or Model 5245L Electronic Counter. Test specifications given in the Maintenance Section (Section V) of this manual, for the purposes of troubleshooting and adjustment, do not represent the technical specifications of the instrument.

1-7. ACCESSORY.

1-8. A 50-ohm coaxial cable, 48 inches long, male BNC to male BNC, is furnished with the Model 5253B.

1-9. INSTRUMENT IDENTIFICATION.

1-10. Hewlett-Packard identifies each Model 5253B with a two-section, eight-digit serial number. If the first three digits of the serial number of your instrument do not agree with those on the title page of this manual, change sheets supplied with the manual will define the differences between your instrument and the Model 5253B described in this manual.

1-11. COOLING.

1-12. The Model 5253B is cooled by the ventilation system of the counter in which it is installed. See operating and service manual of counter for cooling system maintenance instructions.

Table 1-1. Specifications*

RANGE: As converter for 5243L or 5245L counter, 50 Mc to 512 Mc, using mixing frequencies of 50 Mc to 500 Mc in 10 Mc steps.

ACCURACY: Retains accuracy of 5243L or 5245L counter

INPUT VOLTAGE RANGE: 50 mv to 1 v RMS


MAXIMUM INPUT: 2 v RMS or 100 vdc will not damage the instrument

INPUT IMPEDANCE: Approximately 50 ohms

LEVEL INDICATOR: Meter aids frequency selection; indicates output voltage level to counter

REGISTRATION: Counter display is added to the converter dial reading

WEIGHT: Net 5-1/2 lbs, shipping 9 lbs

ACCESSORY FURNISHED:  10503A (AC-16K) Cable, 4 feet long, male BNC connectors

*When installed in Hewlett-Packard Model 5243L or Model 5245L Electronic Counter.

SECTION II

PREPARATION FOR USE

2-1. UNPACKING AND INSPECTION.

2-2. If the shipping carton is damaged, ask that the carrier's agent be present when the instrument is unpacked. Inspect the instrument for damage (scratches, dents, broken knobs, etc). If the instrument is damaged or fails to meet specifications, notify the carrier and the nearest Hewlett-Packard field office immediately (field offices are listed at the back of this manual). Retain the shipping carton and the padding material for the carrier's inspection. The field office will arrange for the repair or replacement of your instrument without waiting for the claim against the carrier to be settled.

2-3. ELECTRICAL INSPECTION.

2-4. The performance check procedure (Paragraph 5-31) may be used to verify proper electrical operation as part of an incoming quality control inspection.

2-5. STORAGE AND RESHIPMENT.

2-6. PACKAGING. To protect valuable electronic equipment during storage or reshipment, always use the best packaging methods available. Your Hewlett-Packard field engineer can provide packing materials similar to those used for original factory packaging. Here are two recommended packing methods:

a. Original. Place instrument in original container. Replace each packing pad and filler in the exact position that it originally occupied.

b. Alternate. Cover panel with soft wrapping paper. Wrap corrugated cardboard completely around instrument and place in strong corrugated cardboard container (350 lb/sq in. bursting test). Insert filler material between wrapped instrument and container to obtain a snug fit on all surfaces. Filler should be rubberized hair (2 in. thick), excelsior (6 in. thick), or equivalent.

2-7. ENVIRONMENT. Conditions during storage and shipment should normally be limited as follows:

a. Maximum altitude 20,000 feet (6,096 meters).

b. Minimum temperature -40°F (-40°C).

c. Maximum temperature 167°F (75°C).

CAUTION

TURN COUNTER POWER OFF BEFORE
INSTALLING OR REMOVING FREQUENCY
CONVERTER.

2-8. INSTALLATION.

2-9. The Model 5253B plugs into the rectangular compartment at the right-hand side of the front panel of the Model 5243L or 5245L Electronic Counter. To install unit in counter, first check that retaining screw (see Figure 3-1) is turned fully counterclockwise, then push unit firmly into compartment until front panel of plug-in is flush with front panel of counter. Then turn retaining screw clockwise until it is tight.


2-10. To remove unit from counter, turn retaining screw counterclockwise to its stop. Then grasp mixing frequency selector (see Figure 3-1) and firmly pull unit from counter. If any difficulty is encountered with installation or removal, check that retaining screw is fully counterclockwise.

2-11. POWER REQUIREMENTS.

2-12. All electrical power required to operate the Model 5253B is supplied by the counter in which the unit is installed.

2-13. ELECTRICAL CONNECTIONS.

2-14. INPUT connector on front panel of plug-in (see Figure 3-1) is the only external electrical connection to the unit. All other connections are made through the 50-pin connector at the rear of plug-in when installed in counter.

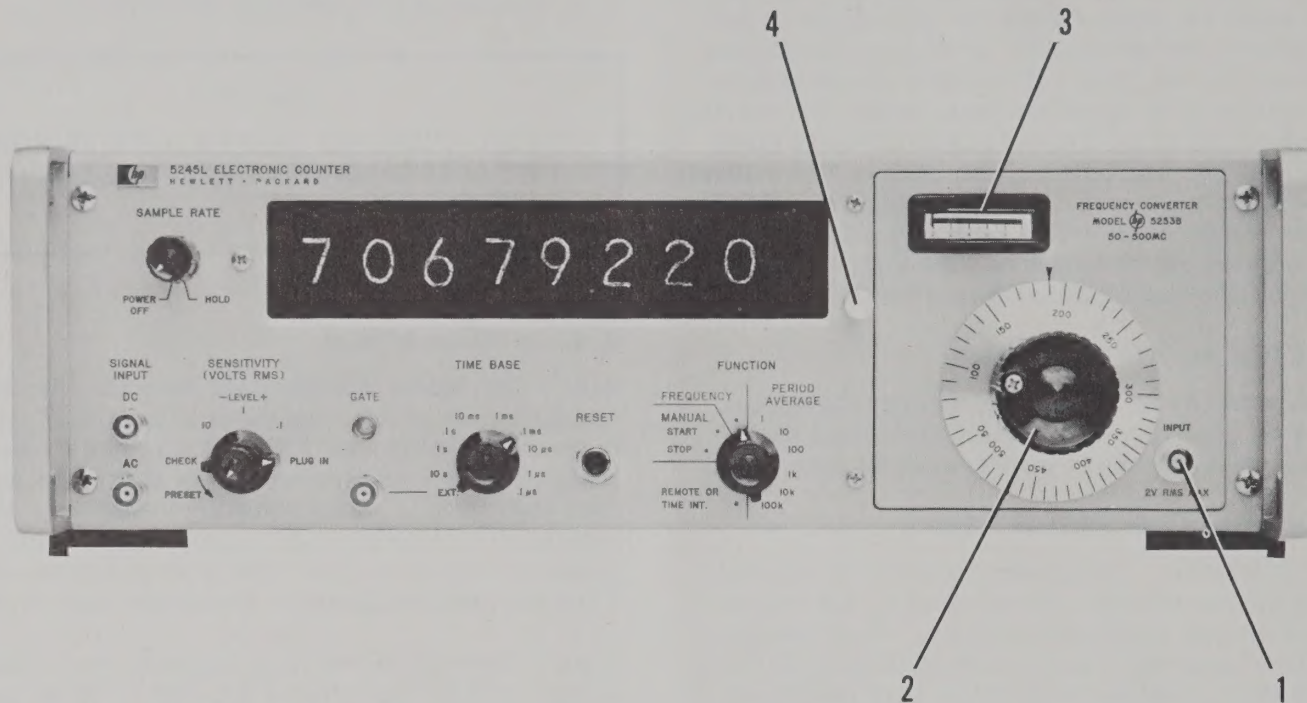

1. INPUT signal connector.
2. MIXING FREQUENCY SELECTOR. Calibrated in mc, this control tunes the internal cavity to select a harmonic of 10 mc to be heterodyned with the INPUT signal.
3. LEVEL INDICATOR METER. The meter circuit continuously monitors the level of the

difference-frequency output of converter to counter. When meter reads in the green portion of its scale, INPUT signal amplitude is adequate for accurate frequency measurement.

4. RETAINING SCREW. The screw which holds the converter in place is located on the front panel of the counter. To tighten, turn fully clockwise. To loosen, turn fully counter-clockwise.

Figure 3-1. Front Panel

SECTION III

OPERATION

3-1. FRONT PANEL.

3-2. The functions of the front panel control, meter, connector, and retaining screws are given in Figure 3-1.

3-3. MAXIMUM INPUT VOLTAGES.

3-4. Damage to the converter may result if an AC signal greater than 2 v RMS or a DC voltage greater than 100 v is applied to converter INPUT connector.

3-5. OPERATING PROCEDURES.

3-6. NORMAL RANGE MEASUREMENTS.

3-7. Figure 3-2 is the procedure to be used for measurement of frequencies from 50.1 to 512 Mc with INPUT signal amplitudes from 50 mv to 1 v RMS.

3-8. EXTENDED RANGE MEASUREMENTS.

3-9. The frequency of signals not within the normal range of 50.1 to 512 Mc, 50 mv to 1 v RMS, may be measured using the following procedures:

3-10. 50 TO 50.1 MC, 50 MV TO 1 V RMS. Perform steps 1 through 5 of Figure 3-2. Then:

- a. Set mixing frequency control to slightly more than 60 Mc.
- b. Turn mixing frequency control slowly clockwise until level indicator meter first reaches a maximum reading in the green portion of its scale.
- c. Subtract counter display (in Mc) from reading of mixing frequency control (in Mc) for frequency of INPUT signal.

3-11. 50 TO 512 MC, AMPLITUDE LESS THAN 50 MV RMS. The front panel level indicator meter indicates in the green portion of its scale only when converter is properly tuned and amplitude of INPUT signal is adequate for accurate frequency measurement. However, because of conservative specifications of both the converter and counter, frequencies may often be accurately measured when meter reads in the red portion of its scale. To make these extended range measurements:

a. Follow normal procedure (Figure 3-2 or Paragraph 3-10, depending upon frequency range) except that mixing frequency control should be tuned for first maximum reading on the level indicator meter, regardless of the color of region maximum.

b. Check frequency measurement result as described in Paragraph 3-12, or

c. Insert an external variable attenuator (such as Hewlett-Packard Model 355A or 355C) in the transmission line between the converter and the source of INPUT signal. Vary attenuation from 0 to 1 db during final step of frequency measurement procedure. If counter display does not change more than momentarily (during switching of attenuator), INPUT signal is above noise threshold and frequency measurement result is valid.

3-12. DOUBLE-CHECKING FREQUENCY MEASUREMENT RESULT.

3-13. Because of the heterodyne action of the converter, frequency measurement results obtained at any one setting of the mixing frequency control may be checked at other settings. See Figure 3-3 for examples.

Table 3-1. Frequency Resolution

INPUT SIGNAL FREQUENCY = 151.1223344 Mc MIXING FREQUENCY CONTROL set to 140 Mc		
Time Base Setting	Counter Display	Measurement Resolution
.1 μ s	* (no display)	
1 μ s	1 1. Mc	1 5 1. Mc
10 μ s	1 1.1 Mc	1 5 1.1 Mc
.1 ms	1 1.1 2 Mc	1 5 1.1 2 Mc
1 ms	1 1 1 2 2. kc	1 5 1.1 2 2 Mc
10 ms	1 1 1 2 2.3 kc	1 5 1.1 2 2 3 Mc
.1 s	1 1 1 2 2.3 3 kc	1 5 1.1 2 2 3 3 Mc
1 s	1 1 1 2 2.3 3 4 kc	1 5 1.1 2 2 3 3 4 Mc
10 s	1 1 2 2.3 3 4 4 kc	1 5 1.1 2 2 3 3 4 4 Mc



1. Turn SAMPLE RATE control slightly out of POWER OFF position.
2. Set SENSITIVITY to PLUG IN.
3. Set TIME BASE to .1 ms.*
4. Set FUNCTION to FREQUENCY.
5. Connect signal whose frequency is to be measured to INPUT of converter.
6. Set mixing frequency control to read slightly less than 50 Mc.

7. Slowly turn mixing frequency control counter-clockwise until level indicator meter first reaches a maximum reading in the green portion of its scale.
8. Add counter display (in Mc) to mixing frequency control reading (in Mc) for frequency of INPUT signal.

* TIME BASE setting may vary, depending on desired resolution of INPUT signal frequency. See Table 3-1.

Figure 3-2. Frequency Measurement Procedure

3-14. AID TO RAPID TUNING

3-15. To easily obtain an indication of the proper MIXING FREQUENCY when rapidly tuning the Model 5253B through its frequency range in search of an unknown INPUT frequency, set counter FUNCTION control to MANUAL START. This allows the counter to

totalize each cycle of any difference frequency produced during rapid tuning. When counter display changes, indicating that the MIXING FREQUENCY is heterodyning with the INPUT frequency and producing a difference frequency within the frequency range of the basic counter, set counter FUNCTION control to FREQUENCY and proceed with measurement.

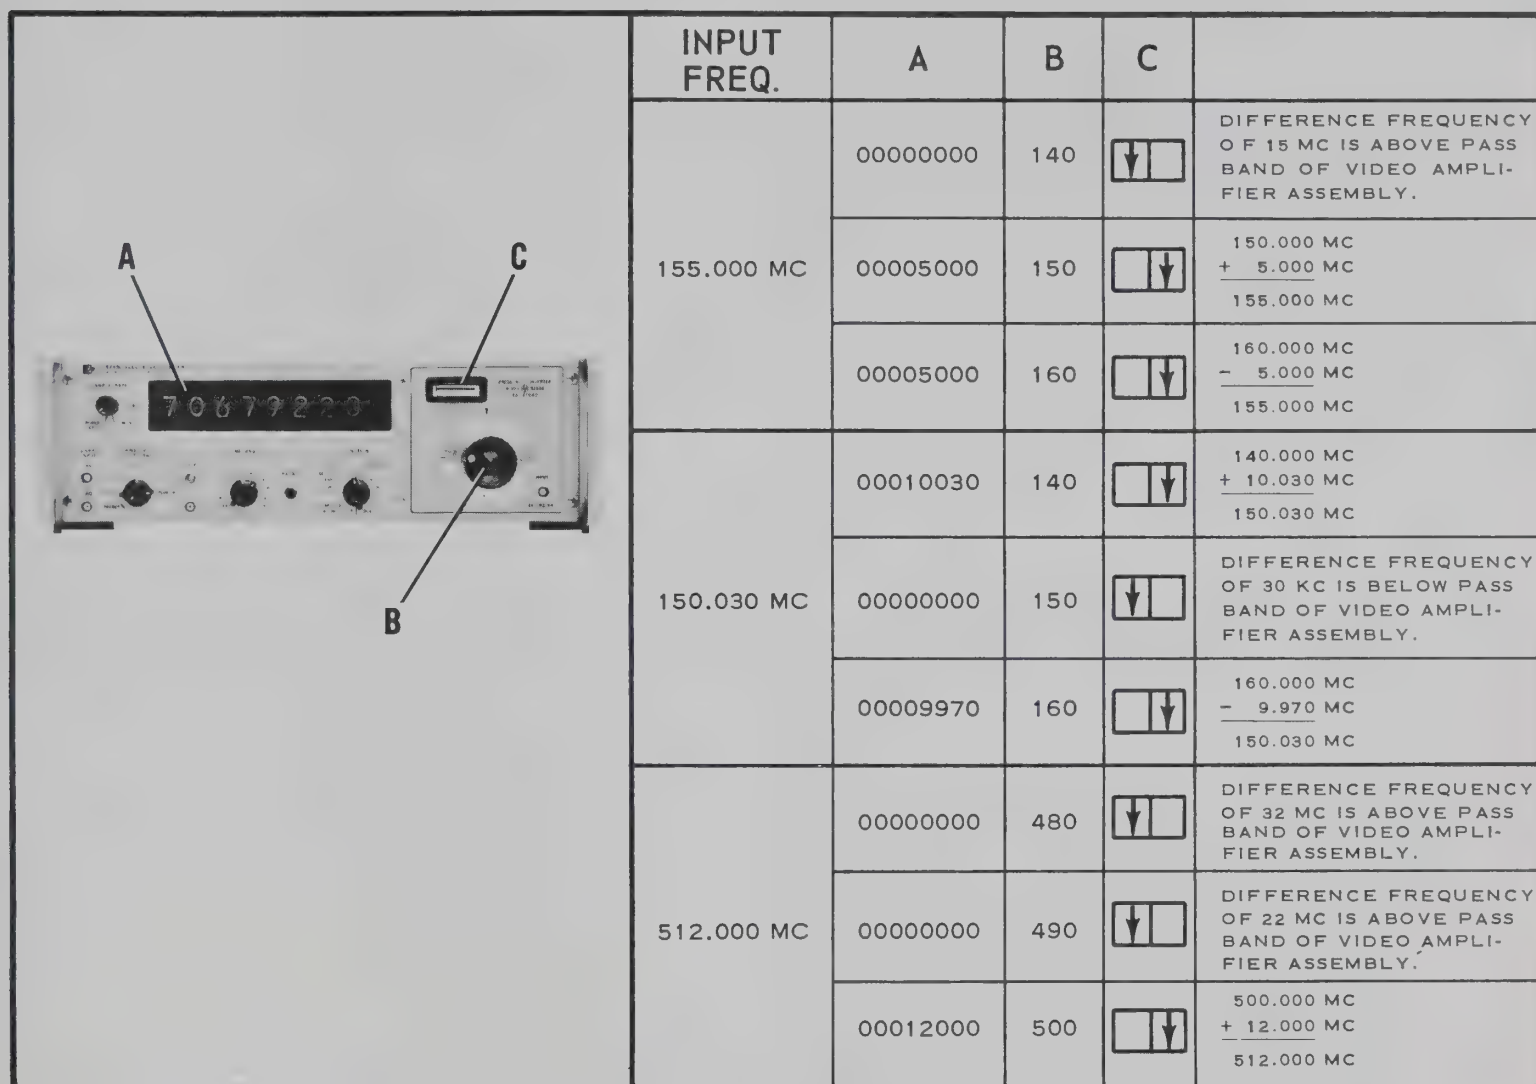


Figure 3-3. Typical Frequency Measurements

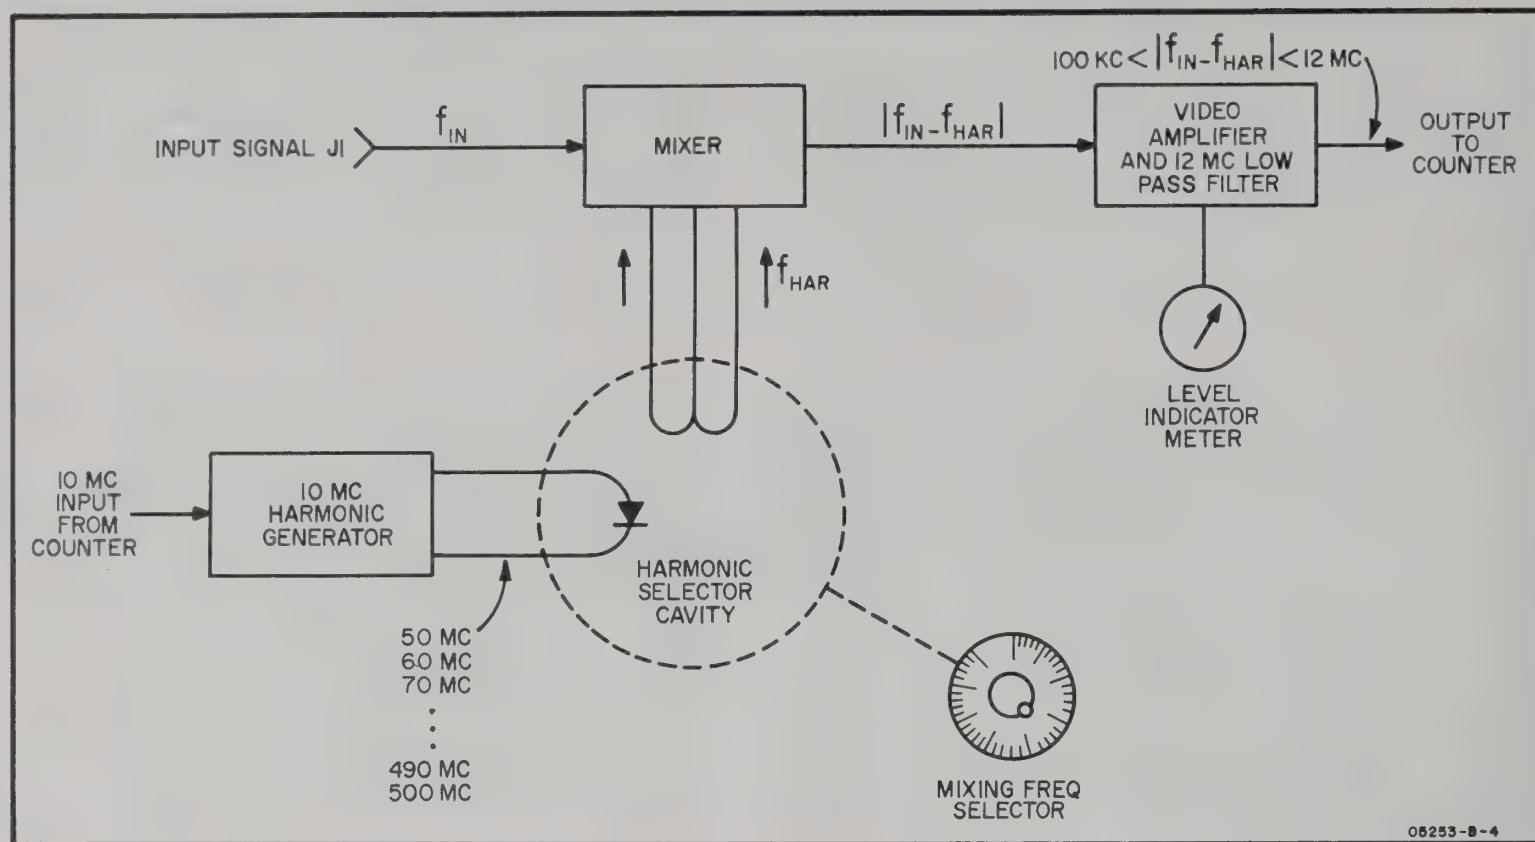


Figure 4-1. Block Diagram

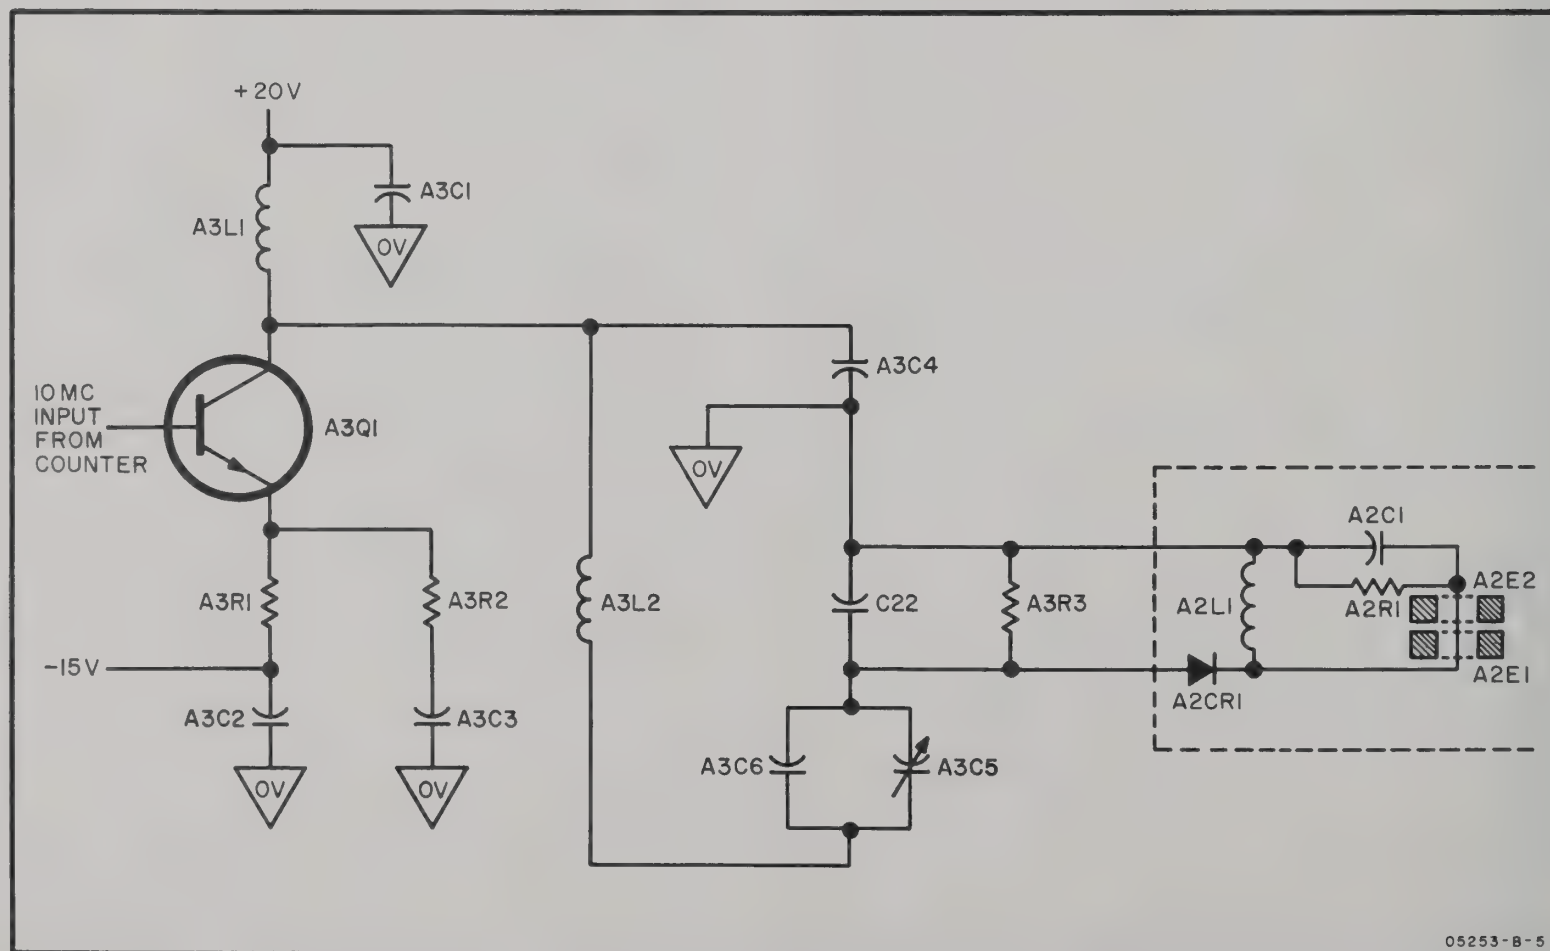


Figure 4-2. Harmonic Generator (A2, A3)

SECTION IV

PRINCIPLES OF OPERATION

4-1. GENERAL

4-2. The Model 5253B is a heterodyne frequency converter designed to extend the range of frequency measurement of the Model 5243L and 5245L Electronic Counters to 512 Mc.

4-3. The converter contains four basic functional sections: harmonic generator, harmonic selector cavity, mixer, and video amplifier (see Figure 4-1).

4-4. In normal operation, the harmonic generator produces all of the harmonics of 10 Mc between 50 and 500 Mc. The harmonic selector cavity is tuned to select one of these harmonics to be supplied to the mixer. The mixer output is the difference frequency produced by the mixing of the INPUT frequency and the frequency supplied by the harmonic selector cavity. This difference frequency is amplified by the video amplifier and supplied to the counter input circuit. A low-pass filter within the video amplifier prevents all difference frequency signals above approximately 12 Mc from reaching the counter input circuit. The output of the video amplifier is monitored by a meter circuit which indicates when difference frequency output amplitude is greater than minimum signal required by counter input circuit.

4-5. HARMONIC GENERATOR (A2,A3), AND HARMONIC SELECTOR CAVITY

4-6. A 10-Mc signal, supplied by the Counter, is amplified by A3Q1 to cause a tuned circuit, composed of A3L2, A3C4, A3C5, A3C6, and C22, to oscillate at 10-Mc (Fig. 4-2). Step-recovery diode*, A2CR1, takes energy from this tuned circuit during a portion of each cycle of the 10-Mc oscillation and produces a sharp step in the current following in the input loop of the harmonic selector cavity. This current step makes available, inside the cavity, all harmonics of 10 Mc from 10 Mc (fundamental) to over 500 Mc (fiftieth harmonic). The remaining components of the step-recovery diode network (Assembly A2) are used to maintain the sensitivity of the counter across its frequency range. The harmonic selector cavity is tuned to resonate at a particular harmonic of 10 Mc between 50 and 500 Mc so that energy at that frequency is coupled from the input loop to the output loops providing one of the two inputs to the mixer circuit (Fig. 4-4).

*-hpa- Application Note #1 (The Step Recovery Diode; Circuit Design and Performance), -hpa- Application Note #2 (Harmonic Generation, Rectification, and Lifetime Evaluation with the Step Recovery Diode; reprinted from the PROCEEDINGS OF THE IRE, VOL. 50, NO. 7, JULY 1962); available from -hp associates-, 620 Page Mill Road, , Palo Alto, California.

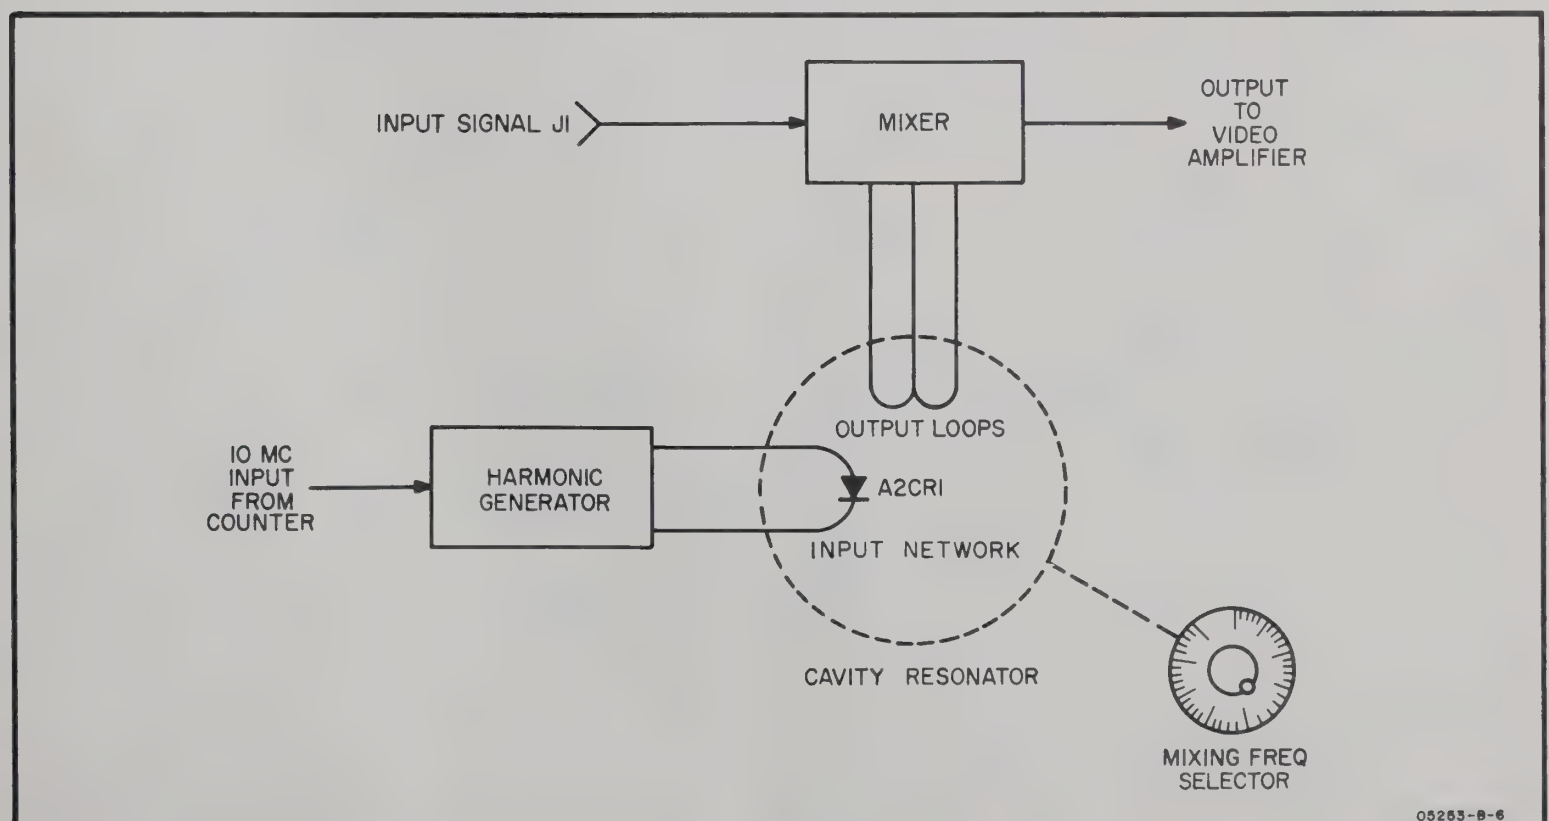


Figure 4-3. Harmonic Selector Cavity

4-7. MIXER (A4)

4-8. Matched diodes are used in a balanced mixer circuit in order to minimize the generation of even-order harmonics of both the INPUT signal and the selected mixing frequency. The balanced input signal required by the circuit is accomplished by grounding the junction of the two resistors of equal value, A4R1 and A4R2, and installing ferrite rings (E1, E2, and E3) around the input coaxial cable (see Figure 4-4). Both sides of resistor A4R1 are returned to common for DC currents. However, for AC currents in the frequency range of 50 to 512 Mc, the impedance of the input signal path is large, due to the inductance provided by the ferrite rings E1, E2, and E3, causing a balanced AC signal condition at the mixer diodes. Limiting diode A4CR2 prevents INPUT signals of high amplitude from overloading the mixer circuit. The output of the mixer diodes, during normal operation when the converter is properly tuned, is a complex signal containing the INPUT signal frequency, the frequency of the harmonic of 10 Mc to which the harmonic selector cavity is tuned, the frequency that is the sum of these two frequencies, and the frequency that is the difference between these two frequencies. Inductor A4L1 reduces the amplitude of any signal with a frequency above approximately 15 Mc before the signal reaches the input to the video amplifier. The output of the mixer circuit is then essentially composed of the difference frequency signal.

4-9. VIDEO AMPLIFIER ASSEMBLY (A1)

4-10. The output of the mixer circuit is amplified by transistors A1Q1 and A1Q2 and is fed to the 12-Mc low-pass filter network (see Figure 4-5). This filter passes any signal frequency below approximately 12 Mc and attenuates all higher frequency signals. The lowpass filter output is amplified by A1Q3 and A1Q4 and fed to the last transistor amplifier, A1Q5, which provides both the output to the counter and the drive for the level indicator meter. The limiter diode, A1CR1, prevents the amplitude of the video amplifier output signal from exceeding approximately 300 mv RMS so that counter input circuits will not be overloaded. The low frequency limit of the video amplifier, determined by the bypass and interstage coupling networks, is approximately 100 kc. The converter output signal to the counter, when converter is properly tuned, will be between approximately 100kc and 12Mc and will have an amplitude that is less than approximately 300 mv RMS.

4-11. LEVEL INDICATOR METER

4-12. The DC current supply for the meter is produced by metering detector A1CR3 and smoothed by capacitor A1C16 (see Figure 4-6). The value of shunt resistor A1R20 is selected to make level indicator meter M1 read at red-green border when amplitude of converter output to counter is in excess of the 100-mv RMS minimum signal amplitude normally required by the counter for accurate frequency measurement.

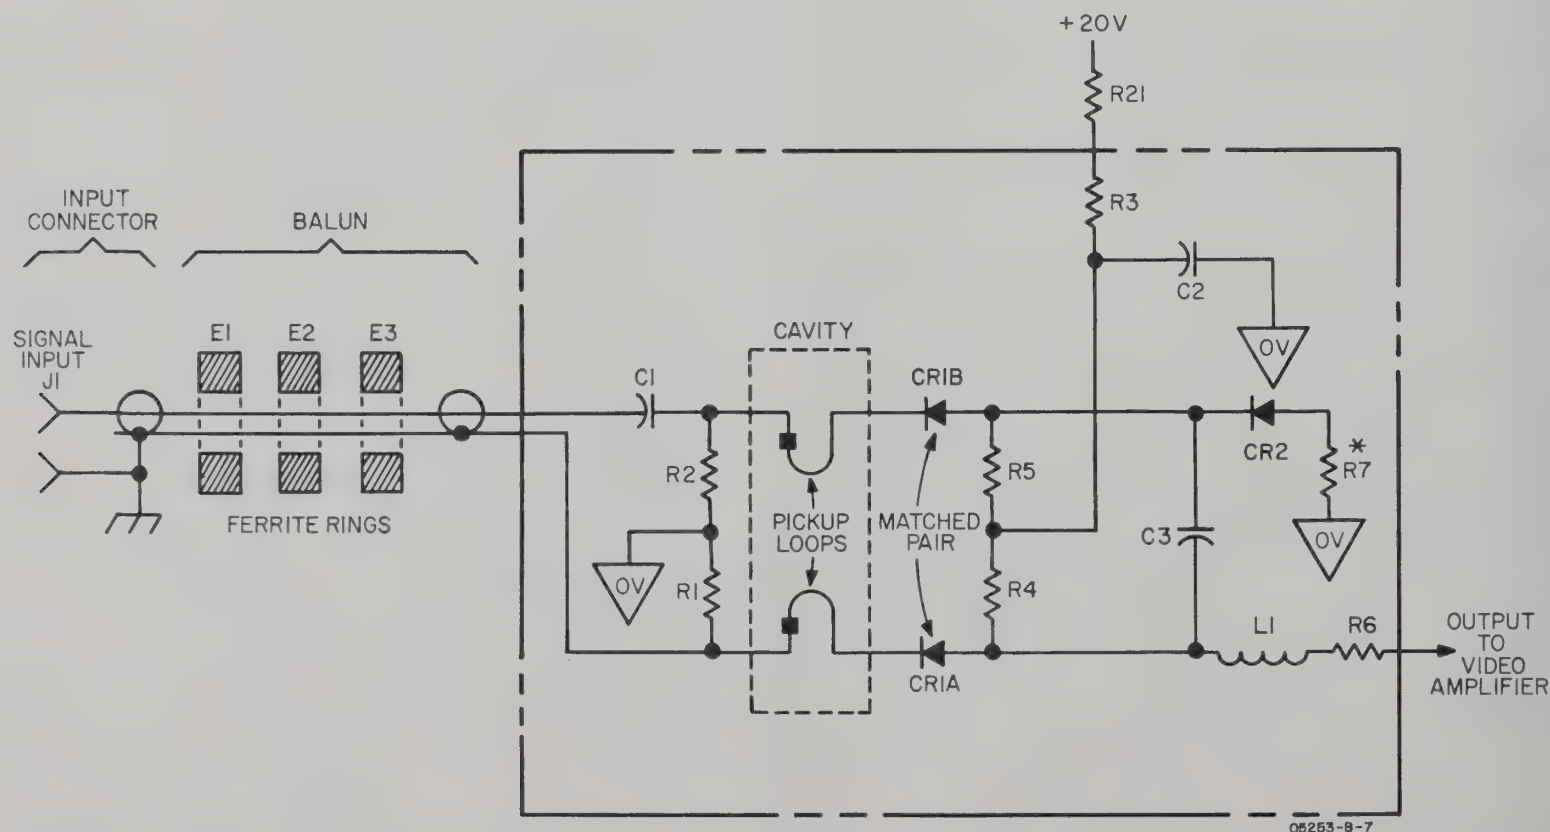


Figure 4-4. Balanced Mixer (A4)

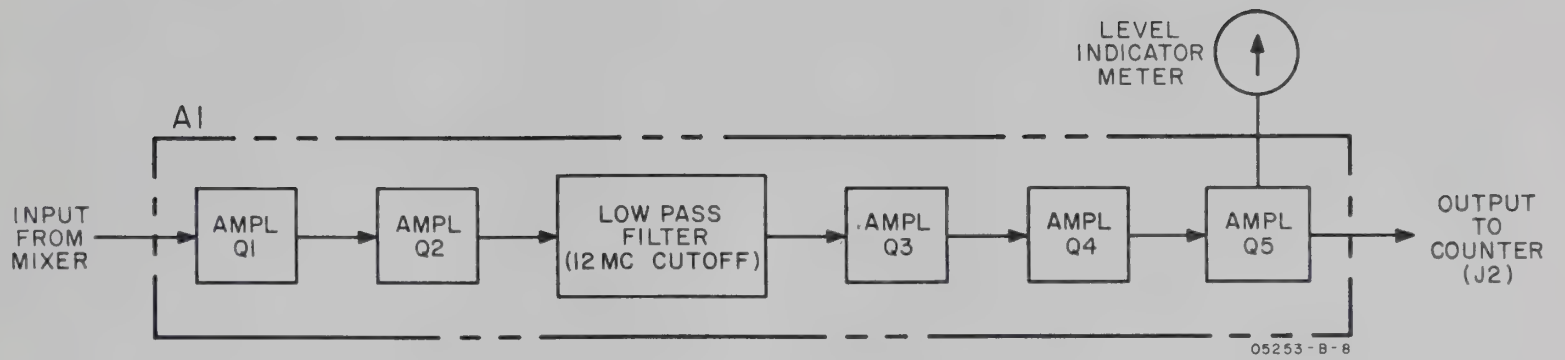


Figure 4-5. Video Amplifier (A1)

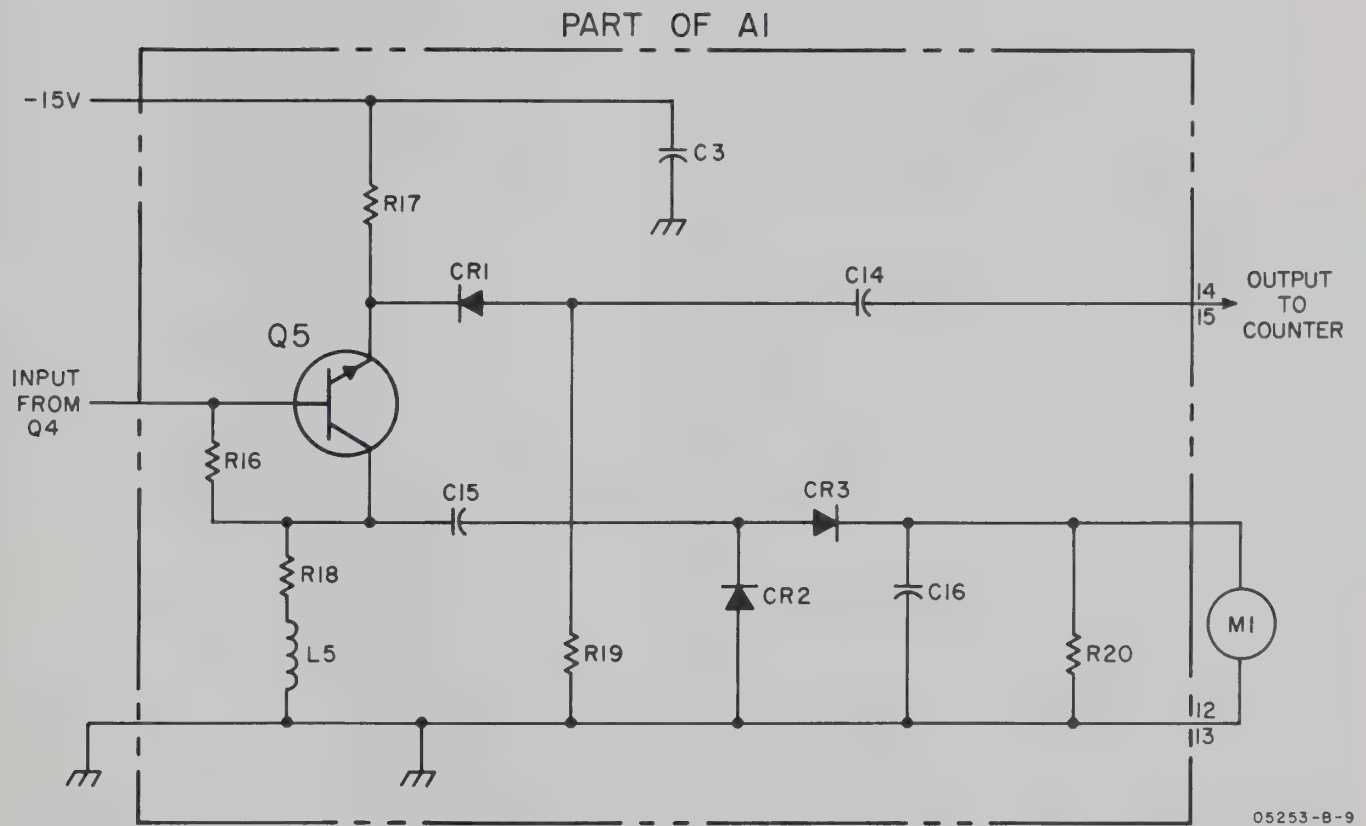


Figure 4-6. Level Indicator Meter Circuit

SECTION V

MAINTENANCE

5-1. GENERAL.

5-2. INTRODUCTION.

5-3. This section contains information concerning periodic maintenance, troubleshooting and recommended test equipment, repair, circuit adjustments, and performance testing. A complete schematic diagram of the converter is at the rear of this section (Figure 5-5).

5-4. PERIODIC MAINTENANCE.

5-5. No special maintenance procedures are required when the converter is operated in normal environments. However, if unit is subjected to operation in extremely dusty environments, periodically clean all gears with a lint-free cloth and apply a coating of light, petroleum base, open-gear grease to all gear teeth.

5-6. TEST EQUIPMENT.

5-7. All test instruments required for performance testing, troubleshooting, and circuit adjustment after repair are listed in Table 5-1. Instruments having equivalent specifications may be substituted for the specific instruments recommended.

5-8. TROUBLESHOOTING.

5-9. Table 5-2 lists resistances from connecting pins on connector J1 to chassis (when unit is not connected to counter) to aid in troubleshooting. Table 5-3 is a suggested troubleshooting procedure which lists circuit conditions at Test Points throughout the converter. These Test Points are keyed to the component

location drawings, Figures 5-1, 5-2, 5-3 and 5-4, and also to the schematic diagram, Figure 5-5. Voltages listed in Table 5-3 are approximate and may vary widely between instruments, due to variations in component values. Table 5-4 lists recommended adjustments to be made after repair of any section of the converter.

Table 5-2. Resistance Troubleshooting Aid

Location	Resistance (to Chassis)*
J2 - Pin 1	> 100 megohms
J2 - Pin 15	1 K ohms $\pm 20\%$
J2 - Pin 20	140 K ohms $\pm 20\%$
J2 - Pin 25	125 K ohms $\pm 20\%$

*Unit not connected to counter.

5-10. REPAIR AND REPLACEMENT.

5-11. Paragraphs 5-12 through 5-19 are replacement procedures to aid in repair of the converter. Detailed procedures for replacement of all the individual components of the unit are beyond the scope of this manual. In-field repair is, for the most part, simple and straightforward. However, do not attempt adjustment of the gearing arrangement, the harmonic selector cavity or the step-recovery diode. Should gear, cavity, or step recovery diode problems arise, please contact your Hewlett-Packard field office to arrange for repair.

Table 5-1. Recommended Test Equipment




 








Instrument	Required Characteristics	Use	Instrument Recommended
Electronic Counter		Supply Power, Visual Operational Indicator	 Model 5243L or  Model 5245L
RF Millivoltmeter	1 Mc to 20 Mc 10 mv to 10 vdc 10 mv resolution	Circuit Adjustment, Troubleshooting	 Model 411A with Pen Type Probe Tip,  11022A (formerly  411A-21B)
DC VTVM and Ohmmeter	0 to +25 vdc 0.1 v resolution 0 to 100 M ohms	Circuit Adjustment, Troubleshooting	 Model 412A
VHF Signal Generator	50 Mc to 480 Mc 10 mv to 1 v	Circuit Adjustment, Troubleshooting	 Model 608C
Oscilloscope	15 Mc bandwidth	Circuit Adjustment, Troubleshooting	 Model 175A with  Model 1752A High Gain Amplifier and  Model 1780A Aux Unit
Extension Cable	50 pin straight-thru connections	Circuit Adjustment, Troubleshooting	 10506A (formerly  AC-16Y)

Table 5-3. Troubleshooting Procedure

All voltages given are approximate and may vary from instrument to instrument because of variations in component characteristics.

TEST EQUIPMENT: hp Model 411A RF Millivoltmeter with hp 11022A (formerly 411A-21B) Pen Type Probe Tip,
 hp Model 412A DC VTVM

REMOVE hp 5253B FROM COUNTER; SELF-CHECK COUNTER	See counter manual for self-check procedure.
CONNECT hp 5253B TO COUNTER WITH EXTENSION CABLE, hp 10506A (formerly AC-16Y)	Extension cable available from hp ; see parts list.
1 +20 VDC 2 -15 VDC	Checks power supplied to plug-in from counter; see counter manual for power supply adjustment procedure.
3 + 6 VDC 2 VAC	Checks 10-Mc drive of harmonic generator.
4 + 2 VDC - 2 VAC	Checks generator diode drive. Voltages vary widely because of both the detuning effect of voltmeter probe and the variable value of A3R3. DC voltage may be either + or -, depending upon factory determined generator diode orientation.
5 +100 MV DC 6 +100 MV DC	Voltages vary widely because of diode characteristics. Voltages are 0 VDC when diode shorted, and +20 VDC when diode open. Voltages should be approximately equal because of matched characteristics.

CONNECT SIGNAL GENERATOR TO hp 5253B.
SET GENERATOR TO 52 MC, CW, 100 MV.
SET COUNTER CONTROLS AND 5253B TO
MEASURE FREQUENCY OF INPUT SIGNAL.

7 5 MV RMS	This voltage is total harmonic energy output of mixer and varies widely.
8 -11.3 VDC 30 MV RMS	Checks bias and amplification of A1Q2 and A1Q1.
9 -12.3 VDC 17 MV RMS	General check of low pass filter section
10 -9.3 VDC 360 MV RMS	Checks bias and amplification of A1Q3 and A1Q4
11 -7.1 VDC 300 MV RMS	Checks operation of A1Q5
12 0 VDC 190 MV RMS	Checks operation of limiter, A1CR1
13 0 MV DC WHEN METER READS AT LEFT END OF SCALE; 50 MV DC WHEN METER READS FULL SCALE; 15 MV DC WHEN TEST POINT #12 IS 100 MV RMS, AND METER READS AT RED-GREEN BORDER.	Checks accuracy of meter circuit in relation to output to counter

5-12. PRINTED CIRCUIT COMPONENT REPLACEMENT.

5-13. Component lead-holes in the Model 5253B circuit boards have plated walls to insure good electrical contact between conductors on the opposite sides of the board. To prevent damage to this plating and also to the replacement component, apply heat sparingly and work carefully. The following replacement procedure is recommended:

- a. Remove defective component.
- b. Melt solder in component lead-holes. Use clean, "dry" soldering iron to remove excess solder. Clean holes with toothpick or wooden splinter. Do not use metal tool for cleaning as this may damage the through-hole plating.
- c. Bend leads of replacement component to the correct shape and insert component leads in component lead-holes. Using heat and solder sparingly, solder leads in place. Heat may be applied to either side of board as is convenient. A heat sink (long-nose pliers, commercial heat-sink tweezers, etc.) should be used when replacing transistors and diodes in order to prevent excessive heat from being conducted by the leads from the soldering iron to the component.
- d. Through-hole plating breaks are indicated by the separation from the board of the round conductor-pad on either side of the board. To repair breaks, press conductor-pads against board and solder replacement component lead to conductor-pad on both sides of the board.

5-14. VIDEO AMPLIFIER ASSEMBLY REPLACEMENT.

5-15. If video amplifier printed circuit board requires replacement, follow this procedure:

- a. Remove the converter from counter.
- b. Unscrew and remove small screw (MP1; see Figure 5-4) which holds video amplifier A1 in place. Remove screws which secure supporting bracket to front panel. Remove supporting bracket.
- c. Firmly grasp assembly at component-free end and pull out of socket using a slight back-and-forth sideways movement.
- d. Check that the connecting terminals of replacement assembly are clean. Push replacement assembly firmly into socket and check for proper seating. Replace supporting bracket and all screws.
- e. All replacement video amplifier assemblies are adjusted and inspected at the factory for optimum performance. However, if a general operational check is desired, perform the in-cabinet performance check given in Paragraph 5-31.

5-16. MIXER DIODE REPLACEMENT.

5-17. If either of the matched pair of mixer diodes (A4CR1A or A4CR1B) is found to be defective, both

diodes should be replaced. The recommended replacement procedure is as follows:

- a. Remove mixer-assembly shield cover (see Figure 5-3).
- b. Remove diodes from spring clips, noting orientation.
- c. Install replacement diodes with same orientation.
- d. Replace mixer-assembly shield cover.
- e. Perform the sensitivity check (Paragraph 5-28) to insure that converter operation is within specifications.

5-18. METER REPLACEMENT PROCEDURE.

5-19. If the level indicator meter requires replacement, follow this procedure:

- a. Remove converter from counter.
- b. Unscrew and remove small retaining screw (MP1; see Figure 5-4) which holds video amplifier board A1 in place. Remove screws which secure supporting bracket to front panel. Remove supporting bracket.
- c. Firmly grasp video amplifier board at the component-free end and pull board out of socket using a slight back-and-forth sideways movement.
- d. Place converter on bench with bottom plate resting on bench surface and with the front panel facing to the rear of the bench.
- e. Remove screw (MP2) which holds aluminum spacer-rod (MP3) to plastic rear-support (MP4; see Figure 5-2). Grasp spacer-rod and turn counterclockwise to remove rod from front support.
- f. Cut connecting wires at meter terminals.
- g. Remove screws (MP5, 6; see Figure 5-4) from meter bezel at sides of meter. Push bezel forward as far as possible.
- h. Remove screws (MP7, 8) on top of meter bracket.
- i. Grasp meter and gently pull meter (and bracket) backwards out of front panel hole, at the same time twisting rear of meter slightly sideways to the right and pulling up.
- j. Remove bracket and hardware from meter and install in identical manner on replacement meter. Hardware which may come from the manufacturer with the replacement meter may be discarded.
- k. Place meter (with bracket) in unit by reversing removal procedure.
- m. Replace screws on top of meter bracket.
- n. Replace meter bezel at sides of meter.

p. Check that meter terminals are not close to front bearing-block. Bend terminals away from block if necessary.

q. Strip 1/4-inch insulation from ends of each connecting wire and solder to meter terminals. Black wire goes to inside terminal and white wire goes to outside terminal.

r. Replace aluminum spacer-rod. Tighten only "finger-tight" as excessive torque may break end of rod.

s. Replace screw which holds spacer-rod to rear-support.

t. Replace video amplifier assembly, supporting bracket, and all screws.

5-20. HARMONIC GENERATOR ADJUSTMENT.

5-21. To adjust the harmonic generator assembly, proceed as follows:

a. Remove converter from counter and reconnect to counter with Extension Cable, $\text{CP}10506\text{A}$.

b. Connect VHF Signal Generator to converter INPUT and set to 472 Mc, CW, at 100 mv.

c. Connect RF Millivoltmeter to Test Point #12 (see Figure 5-4).

d. Set converter mixing frequency control to 470 Mc, and tune for maximum reading on RF Millivoltmeter.

e. Vary output of VHF Signal Generator to make converter level indicator meter read at red-green border.

f. Using plastic tuning tool, tune A3C5 (see Figure 5-2) for maximum reading on RF Millivoltmeter. Tune A3C5 through hole in harmonic generator assembly shield cover.

5-22. LOW PASS FILTER ADJUSTMENT.

5-23. To adjust the low pass filter in the video amplifier assembly, proceed as follows:

a. Remove converter from counter and reconnect to counter with Extension Cable, $\text{CP}10506\text{A}$.

b. Connect VHF Signal Generator to converter INPUT and set to 110 Mc, CW, at 50 mv.

c. Connect RF Millivoltmeter to Test Point #12 (see Figures 5-4 and 5-5).

d. Set converter mixing frequency control to 100 Mc and tune for maximum reading on RF Millivoltmeter.

e. Set Signal Generator to 116.2 Mc, CW, at 1 v.

f. Using plastic tool, adjust variable inductor A1L4 (see Figures 5-1 and 5-5) for minimum reading of RF Millivoltmeter.

g. Set Signal Generator to 120.2 Mc, CW, at 1 v.

h. Using plastic tool, adjust variable inductor A1L3 (see Figures 5-1 and 5-5) for minimum reading of RF Millivoltmeter.

i. Set Signal Generator to 115 Mc, CW, at 1 v.

j. Reading of RF Millivoltmeter should be less than 100 mv. If reading is above 100 mv, troubleshoot video amplifier assembly.

Table 5-4. Adjustments after Repair

AFTER REPLACING COMPONENT IN THIS SECTION:	PERFORM:
Harmonic generator (A3)	Harmonic generator adjustment (Paragraph 5-20)
Mixer (A4)	Sensitivity check (Paragraph 5-28)
A1Q1	Sensitivity check (Paragraph 5-28)
A1Q2	Sensitivity check (Paragraph 5-28), and Low pass filter adjustment (Paragraph 5-22)
Low Pass Filter	Sensitivity check (Paragraph 5-28), and Low pass filter adjustment (Paragraph 5-22)
A1Q3	Sensitivity check (Paragraph 5-28), and Low pass filter adjustment (Paragraph 5-22)
A1Q4	Sensitivity check (Paragraph 5-28), and Low pass filter adjustment (Paragraph 5-22)
Meter circuit	Meter accuracy check (Paragraph 5-29)

5-24. METER CALIBRATION ADJUSTMENT. (pri.)

a. Turn counter power off, remove converter from counter, and reconnect to counter with Extension Cable, Φ 10506A.

b. Set VHF Signal Generator to 102 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Set counter controls as shown in Figure 3-2. Counter should display approximately 2 Mc.

d. Vary VHF Generator output to make level indicator meter read at red-green border.

e. Using RF Millivoltmeter, measure voltage at Test Point #12. Voltage should be between 100 mv and 130 mv. If not, change value of resistor A1R19 to change voltage to between 100 mv and 130 mv. If voltage is too high, increase value of A1R19. If voltage is too low, decrease value of A1R19. Repeat steps d and e after changing value of A1R19.

5-25. MECHANICAL ADJUSTMENT OF METER ZERO.

5-26. TRUE SIGNAL LEVEL INDICATION. Level indicator meter is adjusted at the factory for proper mechanical zero. However, normal aging of meter components may change indicated zero level. To insure accuracy of input signal level indication, periodic adjustment of meter zero may be necessary.

5-27. ZERO-SET. When meter is properly zero-set, pointer rests over the zero calibration mark at the left-hand end of meter scale when converter is (1) at normal operating temperature, (2) in normal operating position, and (3) without power. Proceed as follows:

a. Allow counter and converter to operate for one hour to permit meter movement to reach normal operating temperature.

b. Turn counter off and allow one minute for all capacitors to discharge.

c. Remove converter from counter to enable access to rear of meter.

d. Remove adhesive-backed-paper cover from meter zero-adjustment access hole on top-rear of meter.

e. Carefully insert small tool in access hole and engage adjustment fork.

f. Vary setting of adjustment fork until meter reads zero.

g. Remove tool and replace adhesive-backed-paper cover on access hole. This completes meter zero adjustment procedure.

5-28. SENSITIVITY CHECK.

a. Turn counter power off, remove converter from counter, and reconnect to counter with Extension Cable, Φ 10506A.

b. Set VHF Signal Generator to 52 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Adjust controls as shown in Figure 3-2.

d. Set converter mixing frequency control to 50 Mc. Counter should display approximately 2 Mc.

e. Using RF Millivoltmeter, measure output of converter at Test Point #12 (see Figures 5-4 and 5-5). Voltage should be at least 100 mv.

f. Repeat above steps c, d, and e with VHF Generator frequency of 472 Mc and converter mixing frequency control set to 470 Mc. Converter output to counter, as measured by RF Millivoltmeter, should be at least 100 mv.

g. A similar check may be made at any frequency within the range of the Model 5253B. Converter output to counter should be at least 100 mv when difference frequency is between 100 kc and 12 Mc and converter is properly tuned.

5-29. METER ACCURACY CHECK.

a. Turn counter power off, remove converter from counter, and reconnect to counter with Extension Cable, Φ 10506A.

b. Set VHF Signal Generator to 102 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Set controls as shown in Figure 3-2. Set converter mixing frequency control to 100 Mc. Counter should display approximately 2 Mc.

d. Vary output of VHF Signal Generator for converter level indicator to make meter read at red-green border.

e. Using RF Millivoltmeter, measure converter output to counter at Test Point #12. Voltage should be between 100 mv and 130 mv. If not, see Paragraph 5-24 for meter calibration adjustment procedure.

5-30. LOW PASS FILTER CHECK.

a. Turn counter power off, remove converter from counter and reconnect to counter with Extension Cable, Φ 10506A.

b. Set VHF Signal Generator to 110 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Set controls as shown in Figure 3-2. Set converter mixing frequency control to 100 Mc. Counter should display approximately 10 Mc.

d. Connect RF Millivoltmeter to Test Point #12. Vary output of VHF Signal Generator for RF Millivoltmeter reading of 100 mv. Note output level of VHF Signal Generator.

e. Set VHF Signal Generator to 115 Mc at same output level as noted in step d above. Converter output to counter, as shown on RF Millivoltmeter, should not exceed 50 mv. If converter output to counter is greater than 50 mv, see Paragraph 5-23 for low pass filter adjustment procedure.


5-31. IN-CABINET PERFORMANCE CHECK.

a. Turn counter power off and install converter.

b. Set VHF Signal Generator to 52 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Set controls as shown in Figure 3-2. Counter should display approximately 2 Mc.

d. Set VHF Signal Generator to any frequency between 50 Mc and 512 Mc with output of 50 mv. Counter should display correct frequency at any frequency within this range.

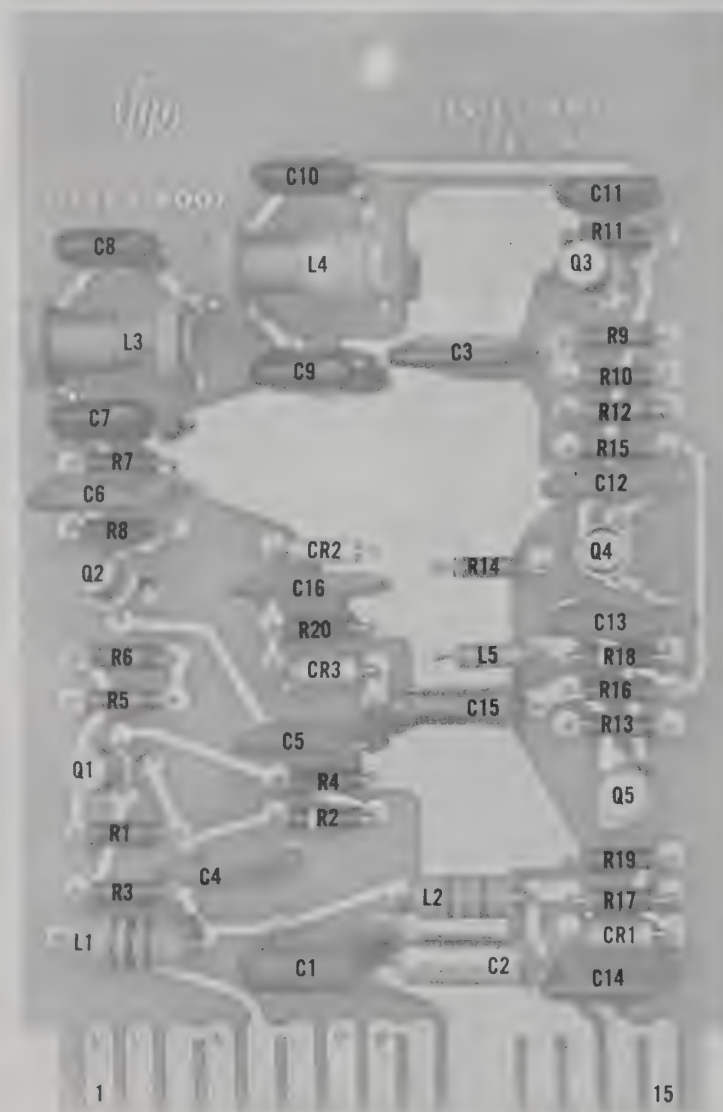

05253-A-12

Figure 5-1. Video Amplifier Assembly A1 Component Location

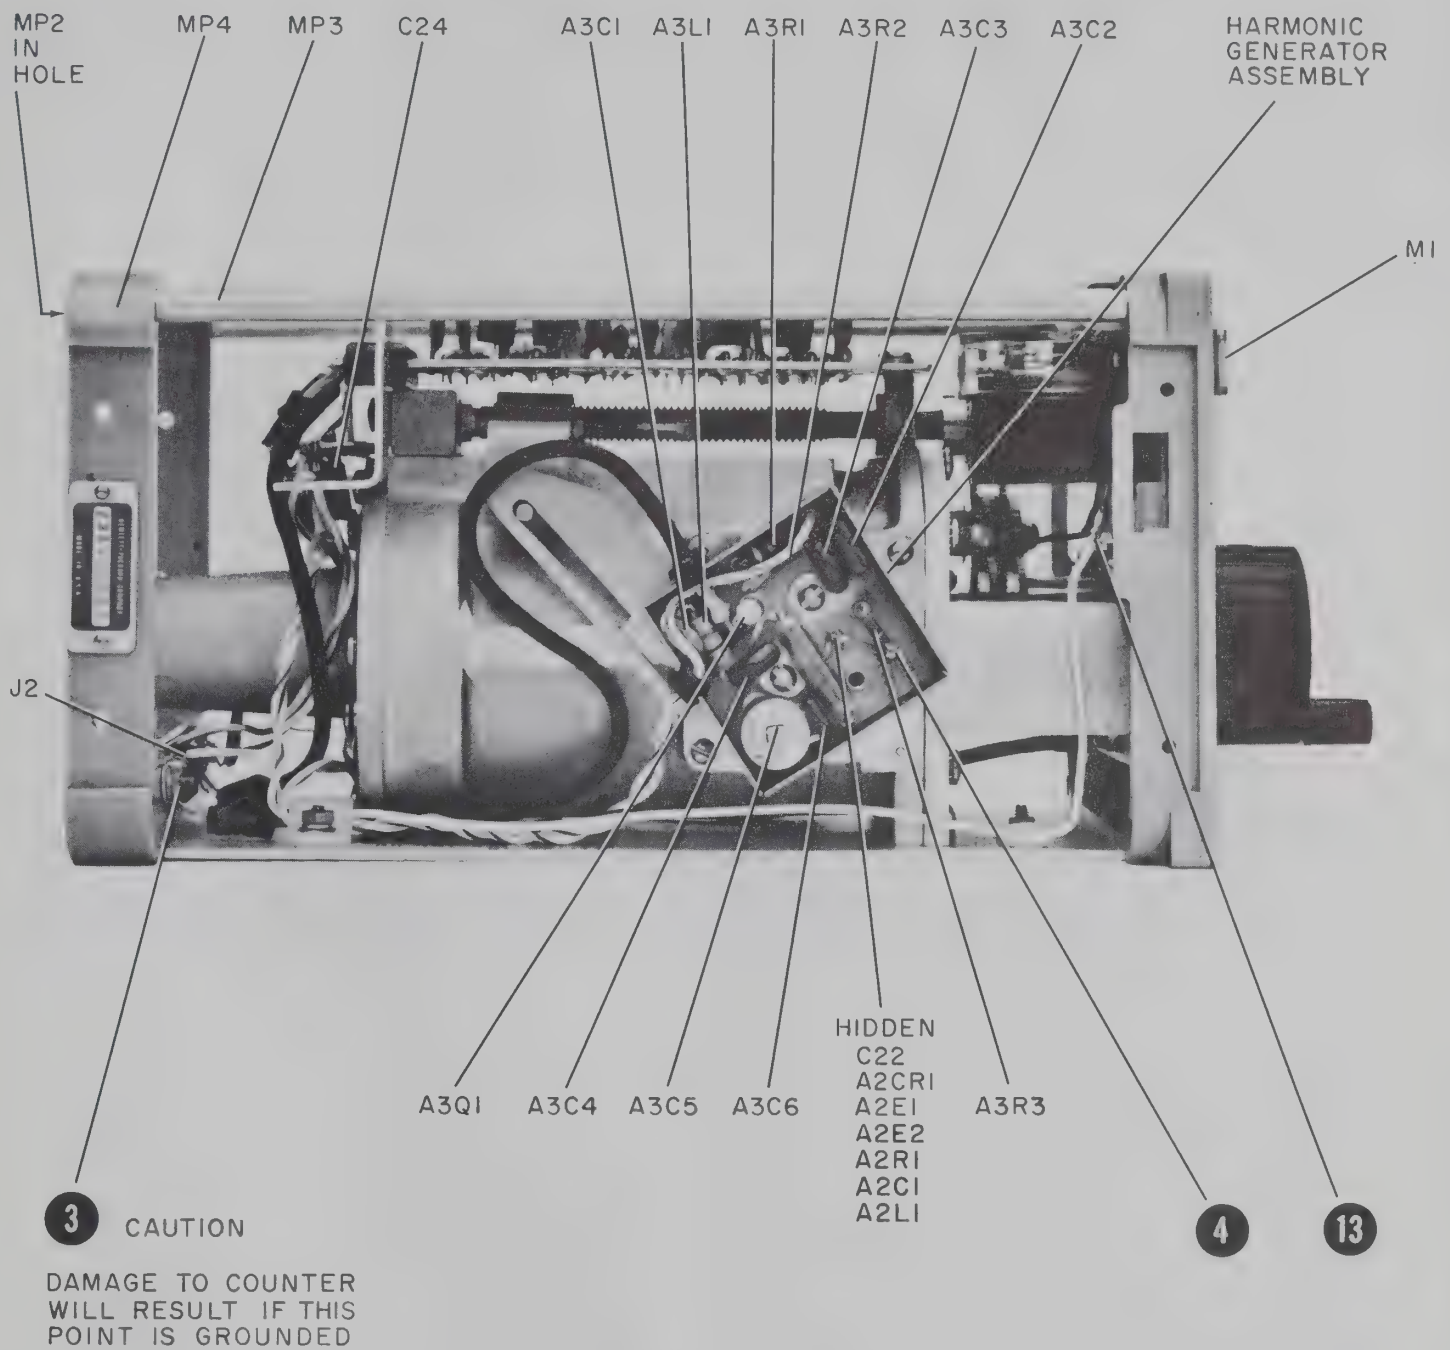


Figure 5-2. Left Side View

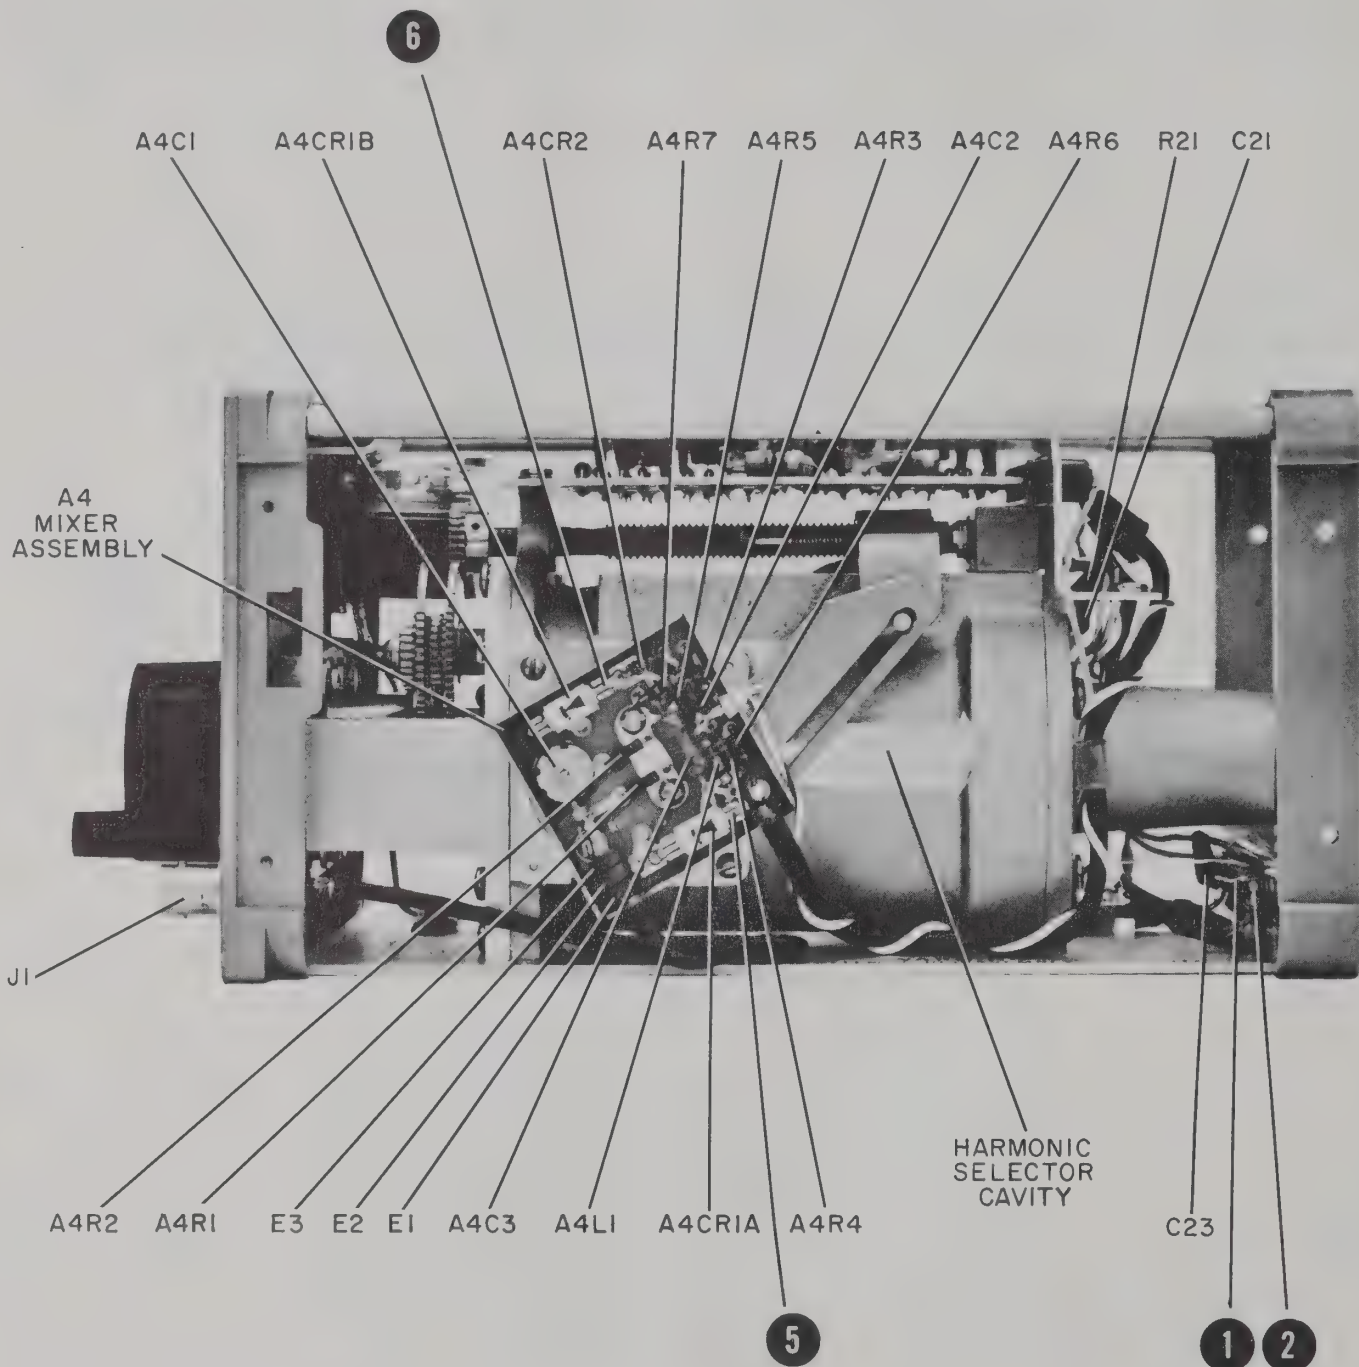


Figure 5-3. Right Side View

MI
MI



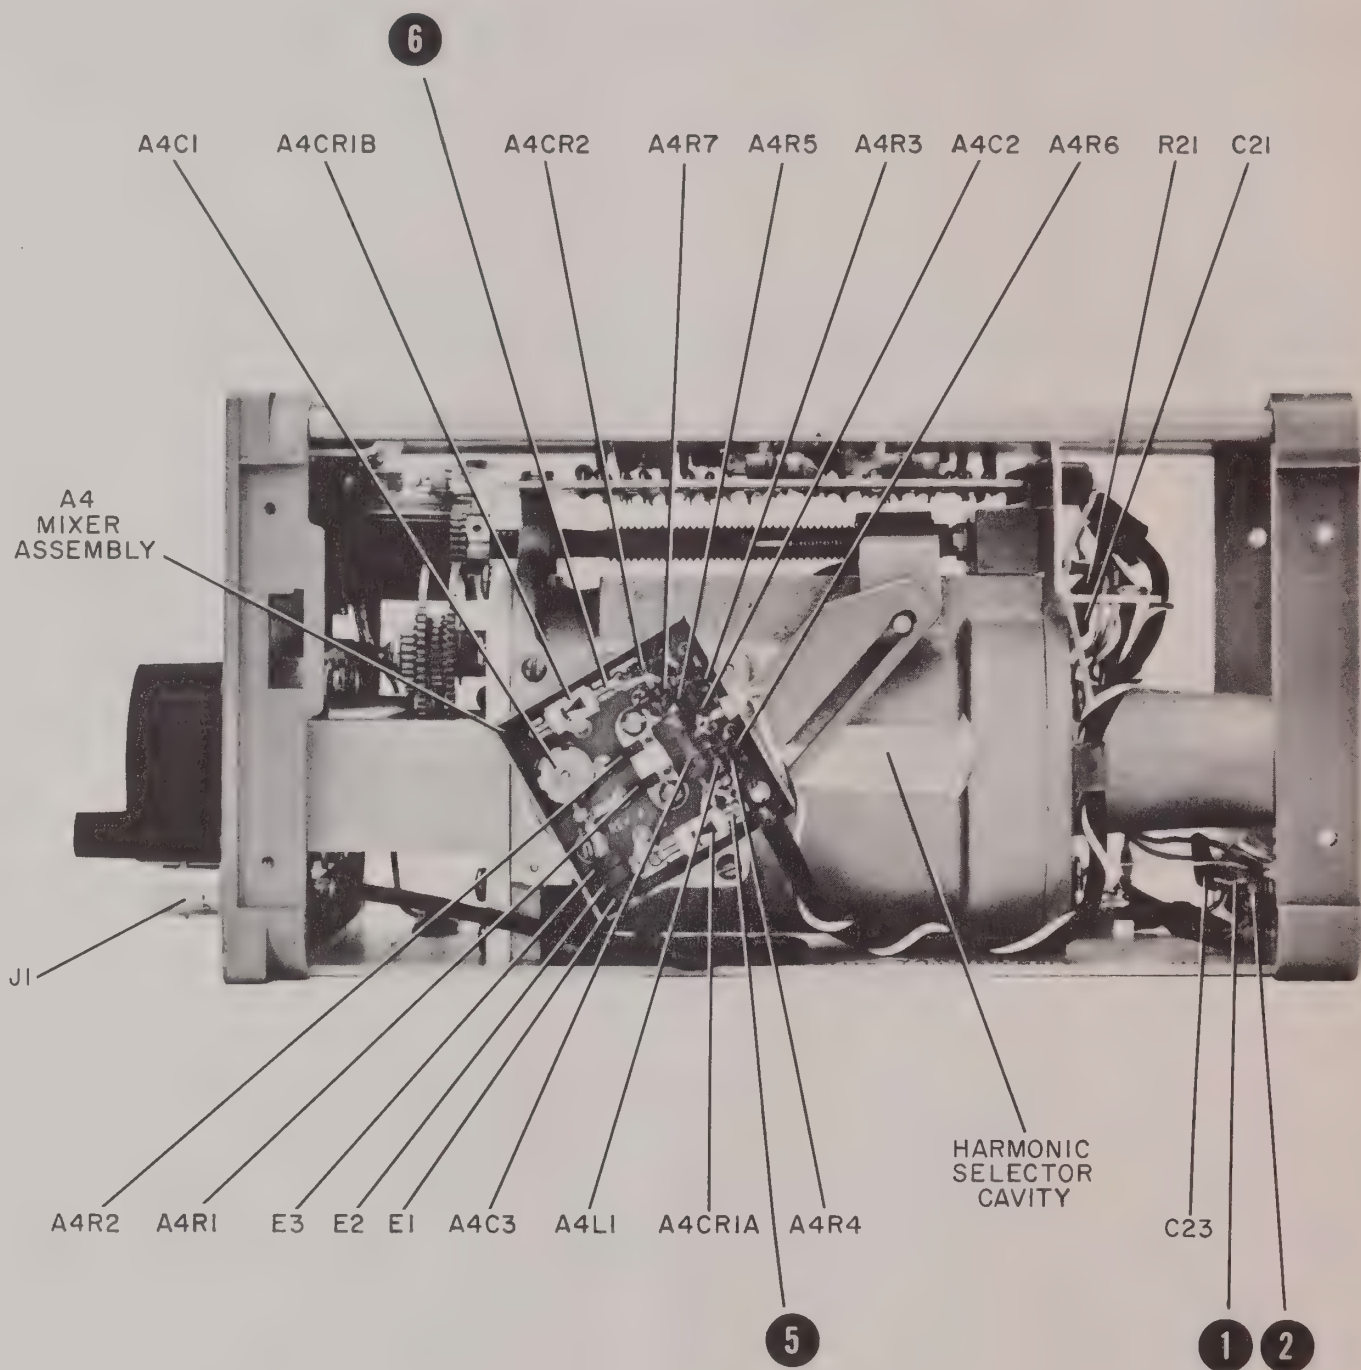


Figure 5-3. Right Side View

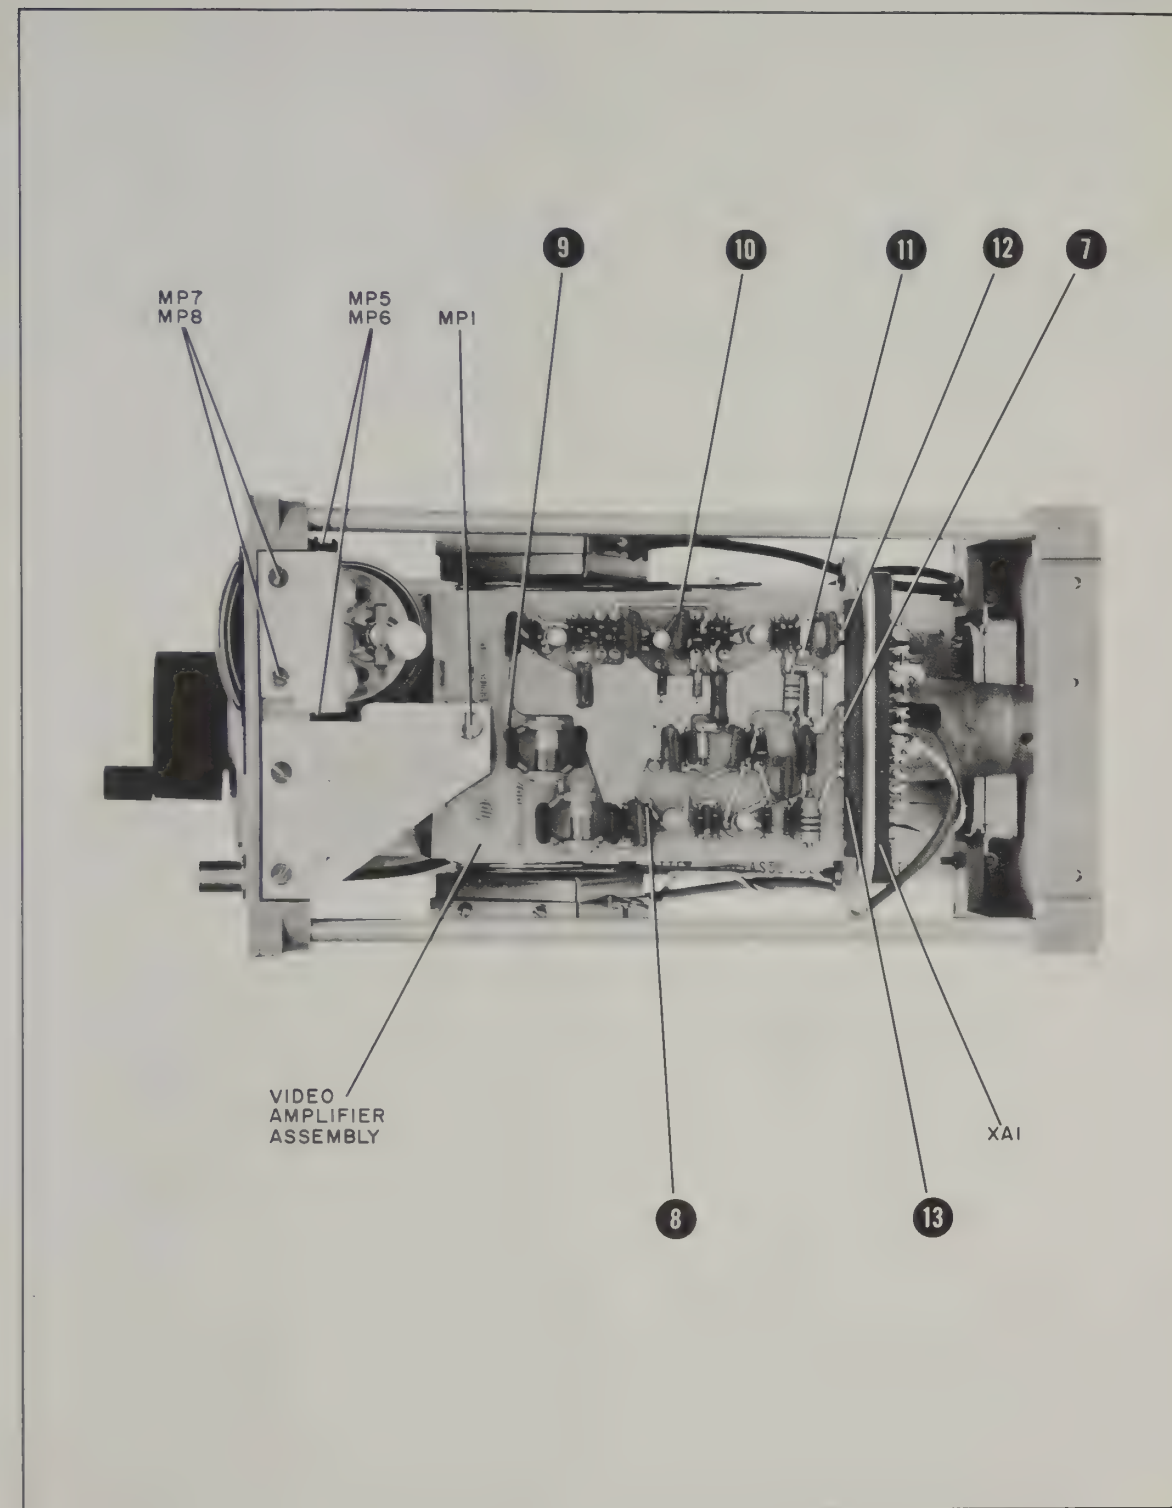


Figure 5-4. Top View - Test Points

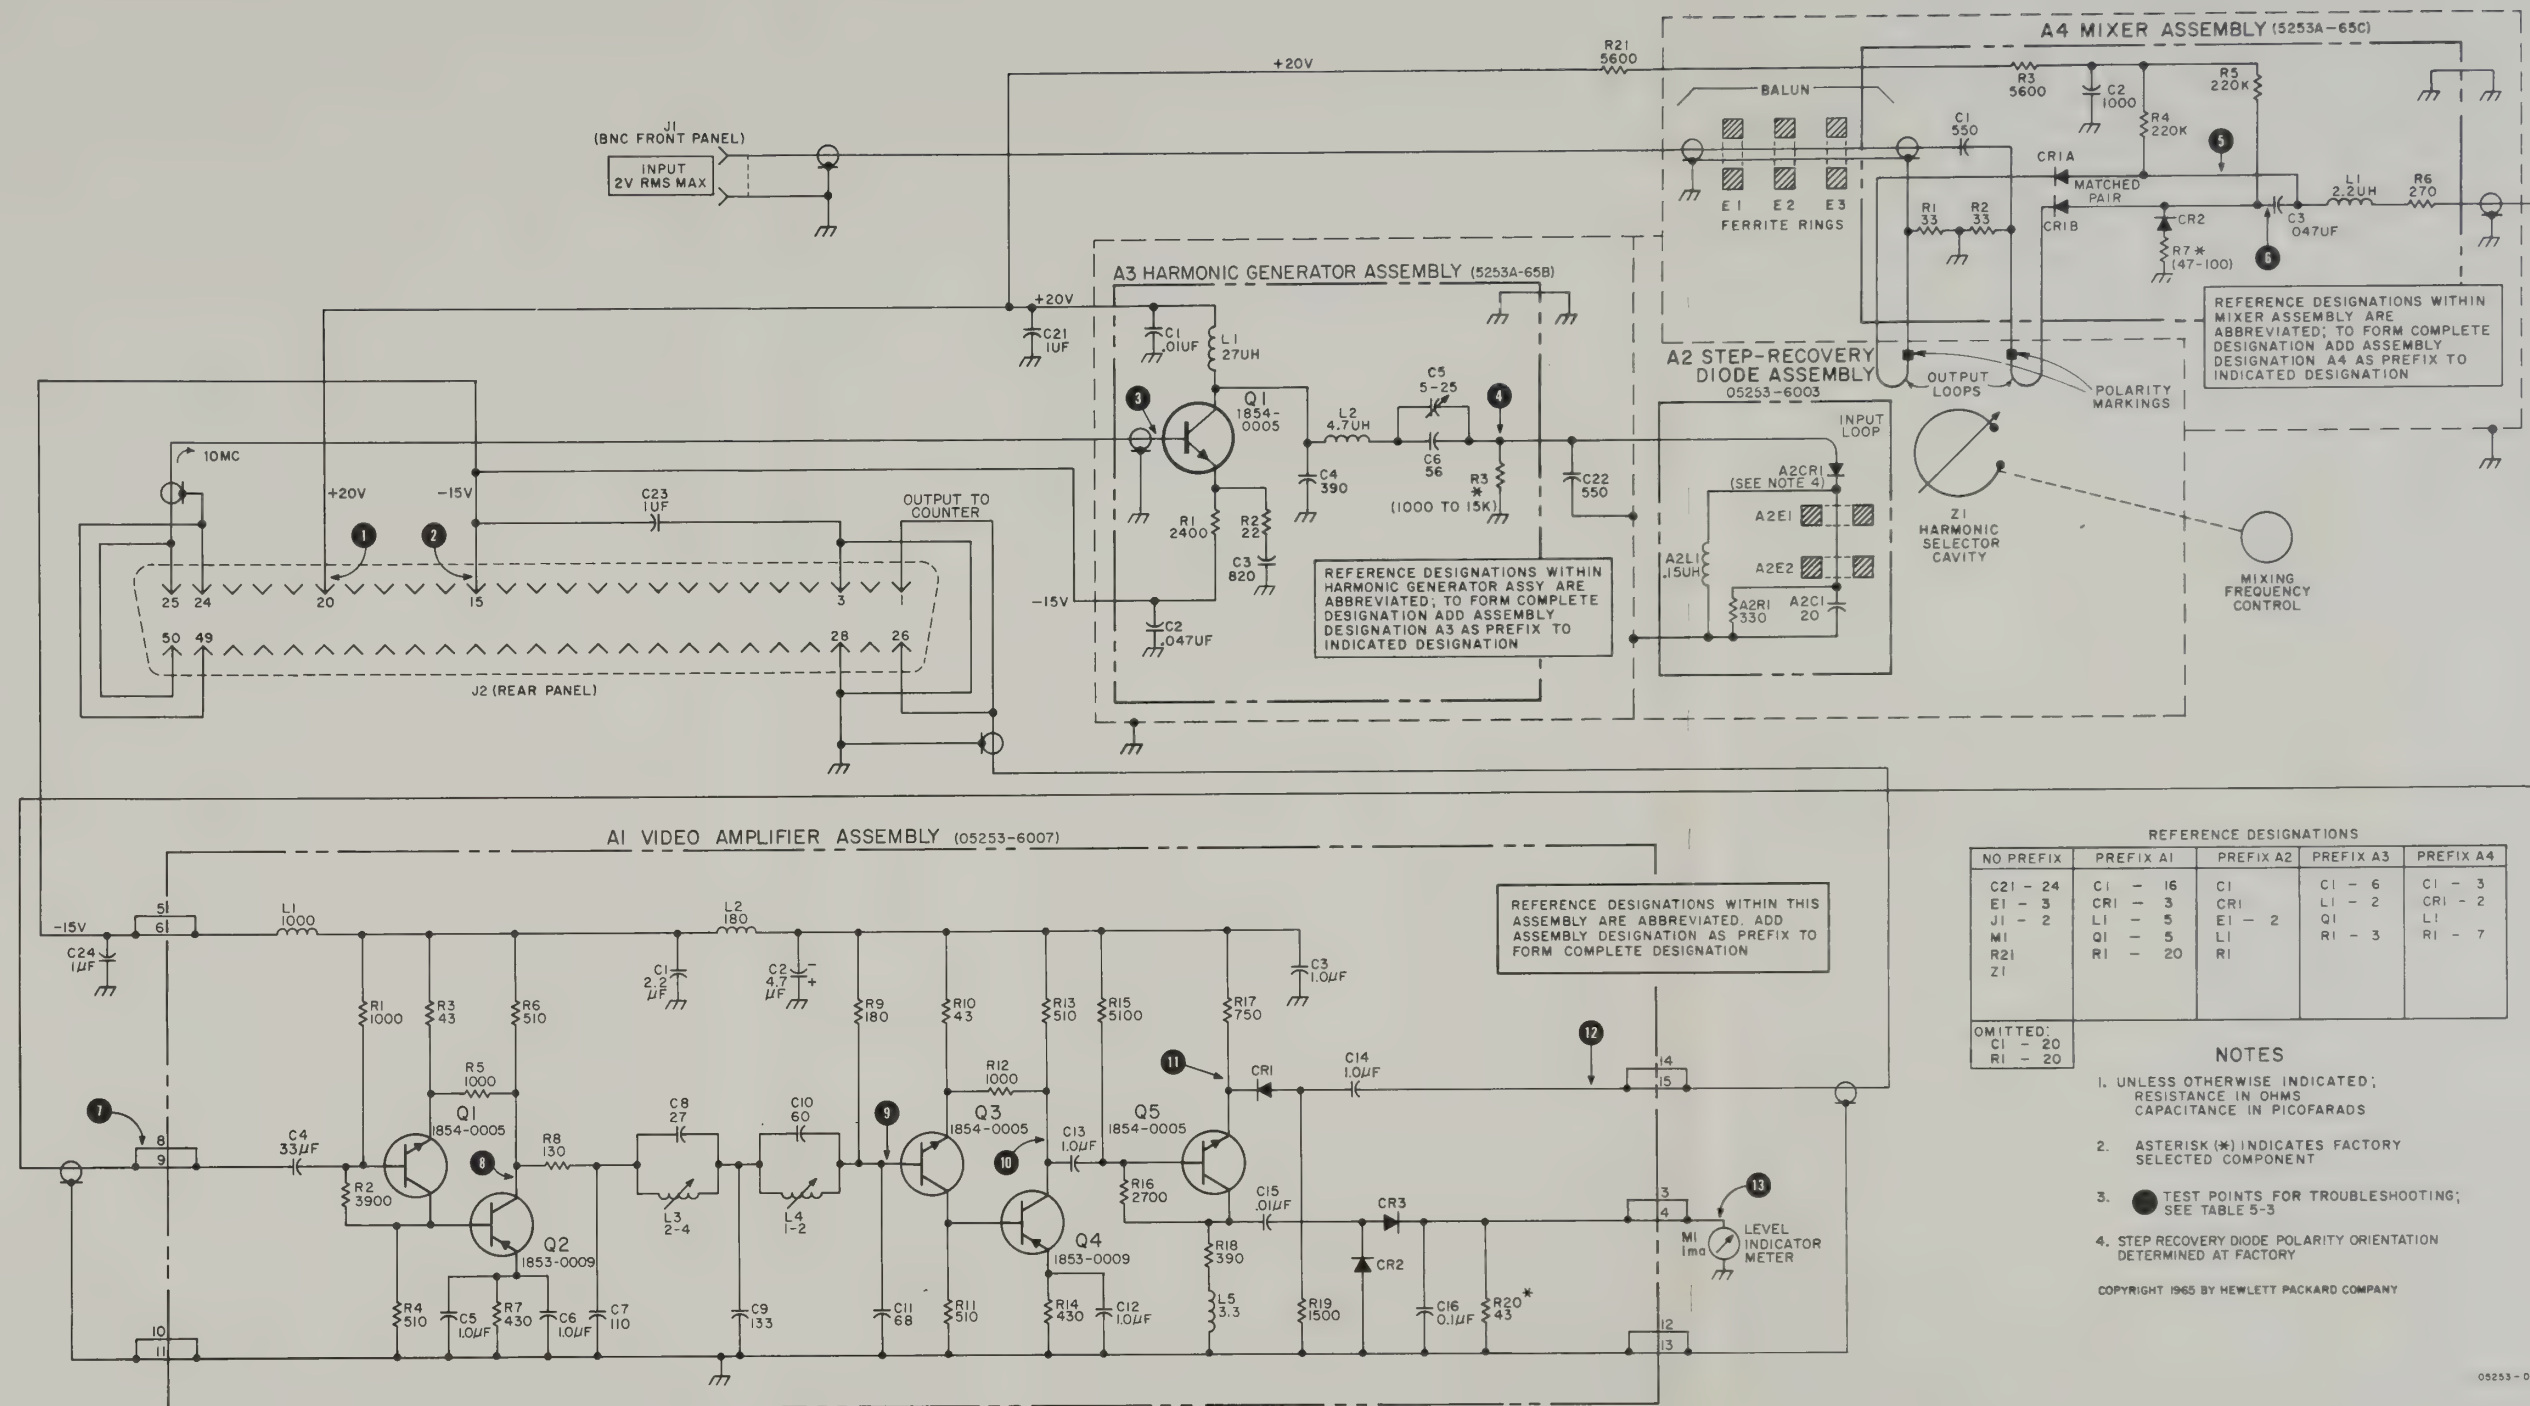


Figure 5-5. Schematic Diagram

SECTION VI

REPLACEABLE PARTS

6-1. INTRODUCTION.

6-2. This section contains information for ordering replacement parts. Table 6-1 lists parts in alpha-numerical order of their reference designators and indicates the description and ϕ stock number of each part, together with any applicable notes. Table 6-2 lists parts in alpha-numerical order of their ϕ stock number and provides the following information on each part:

- a. Description of the part (see list of abbreviations below).
- b. Typical manufacturer of the part in a five-digit code; see list of manufacturers in Table 6-3.
- c. Manufacturer's part number.
- d. Total quantity used in the instrument (TQ column).

6-3. Miscellaneous parts are listed at the end of Table 6-1.

6-4. ORDERING INFORMATION.

6-5. To obtain replacement parts, address order or inquiry to your local Hewlett-Packard Field Office (see lists at rear of this manual for addresses). Identify parts by their Hewlett-Packard stock numbers.

6-6. To obtain a part that is not listed, include:


- a. Instrument model number.
- b. Instrument serial number.
- c. Description of the part.
- d. Function and location of the part.

REFERENCE DESIGNATORS

A	= assembly	E	= misc electronic part	MP	= mechanical part	TB	= terminal board
B	= motor	F	= fuse	P	= plug	TP	= test point
C	= capacitor	FL	= filter	Q	= transistor	V	= vacuum tube, neon bulb, photocell, etc.
CP	= coupling	J	= jack	R	= resistor	W	= cable
CR	= diode	K	= relay	RT	= thermistor	X	= socket
DL	= delay line	L	= inductor	S	= switch	Y	= crystal
DS	= device signaling (lamp)	M	= meter	T	= transformer		


ABBREVIATIONS

A	= amperes	GE	= germanium	N/C	= normally closed	RMO	= rack mount only
A.F.C	= automatic frequency control	GL	= glass	NE	= neon	RMS	= root-mean-square
AMPL	= amplifier	GRD	= ground(ed)	NI PL	= nickel plate		
B.F.O.	= beat frequency oscillator	H	= henries	N/O	= normally open	S-B	= slow-blow
BE CU	= beryllium copper	HEX	= hexagonal	NPO	= negative positive zero (zero temperature coefficient)	SCR	= screw
BH	= binder head	HG	= mercury	NRFR	= not recommended for field replacement	SE	= selenium
BP	= bandpass	HR	= hour(s)	NSR	= not separately replaceable	SECT	= section(s)
BRS	= brass	IF	= intermediate freq	OB	= order by description	SEMICON	= semiconductor
BWO	= backward wave oscillator	IMPG	= impregnated	OH	= oval head	SI	= silicon
CCW	= counter-clockwise	INCD	= incandescent	OX	= oxide	SIL	= silver
CER	= ceramic	INCL	= include(s)			SL	= slide
CMO	= cabinet mount only	INS	= insulation(ed)			SPL	= special
COEF	= coefficient	INT	= internal			SST	= stainless steel
COM	= common	K	= kilo = 1000			SR	= split ring
COMP	= composition	LIN	= linear taper	P	= peak	STL	= steel
CONN	= connector	LK WASH	= lock washer	PC	= printed circuit	TA	= tantalum
CP	= cadmium plate	LOG	= logarithmic taper	PF	= picofarads = 10 ⁻¹² farads	TD	= time delay
CRT	= cathode-ray tube	LPF	= low pass filter	PH BRZ	= phosphor bronze	TGL	= toggle
CW	= clockwise	M	= milli = 10 ⁻³	PHL	= Phillips	TI	= titanium
DEPC	= deposited carbon	MEG	= meg = 10 ⁶	PIV	= peak inverse voltage	TOL	= tolerance
DR	= drive	METFLM	= metal film	P/O	= part of	TRIM	= trimmer
ELECT	= electrolytic	MFR	= manufacturer	POLY	= polystyrene	TWT	= traveling wave tube
ENCAP	= encapsulated	MINAT	= miniature	PORC	= porcelain	U	= micro = 10 ⁻⁶
EXT	= external	MOM	= momentary	POS	= position(s)	VAR	= variable
F	= farads	MTG	= mounting	POT	= potentiometer	VDCW	= dc working volts
FH	= flat head	MY	= "mylar"	PP	= peak-to-peak		
FIL H	= fillister head	N	= nano (10 ⁻⁹)	PT	= point	W/	= with
FXD	= fixed			RECT	= rectifier	W	= watts
				RF	= radio frequency	WW	= wirewound
				RH	= round head	W/O	= without

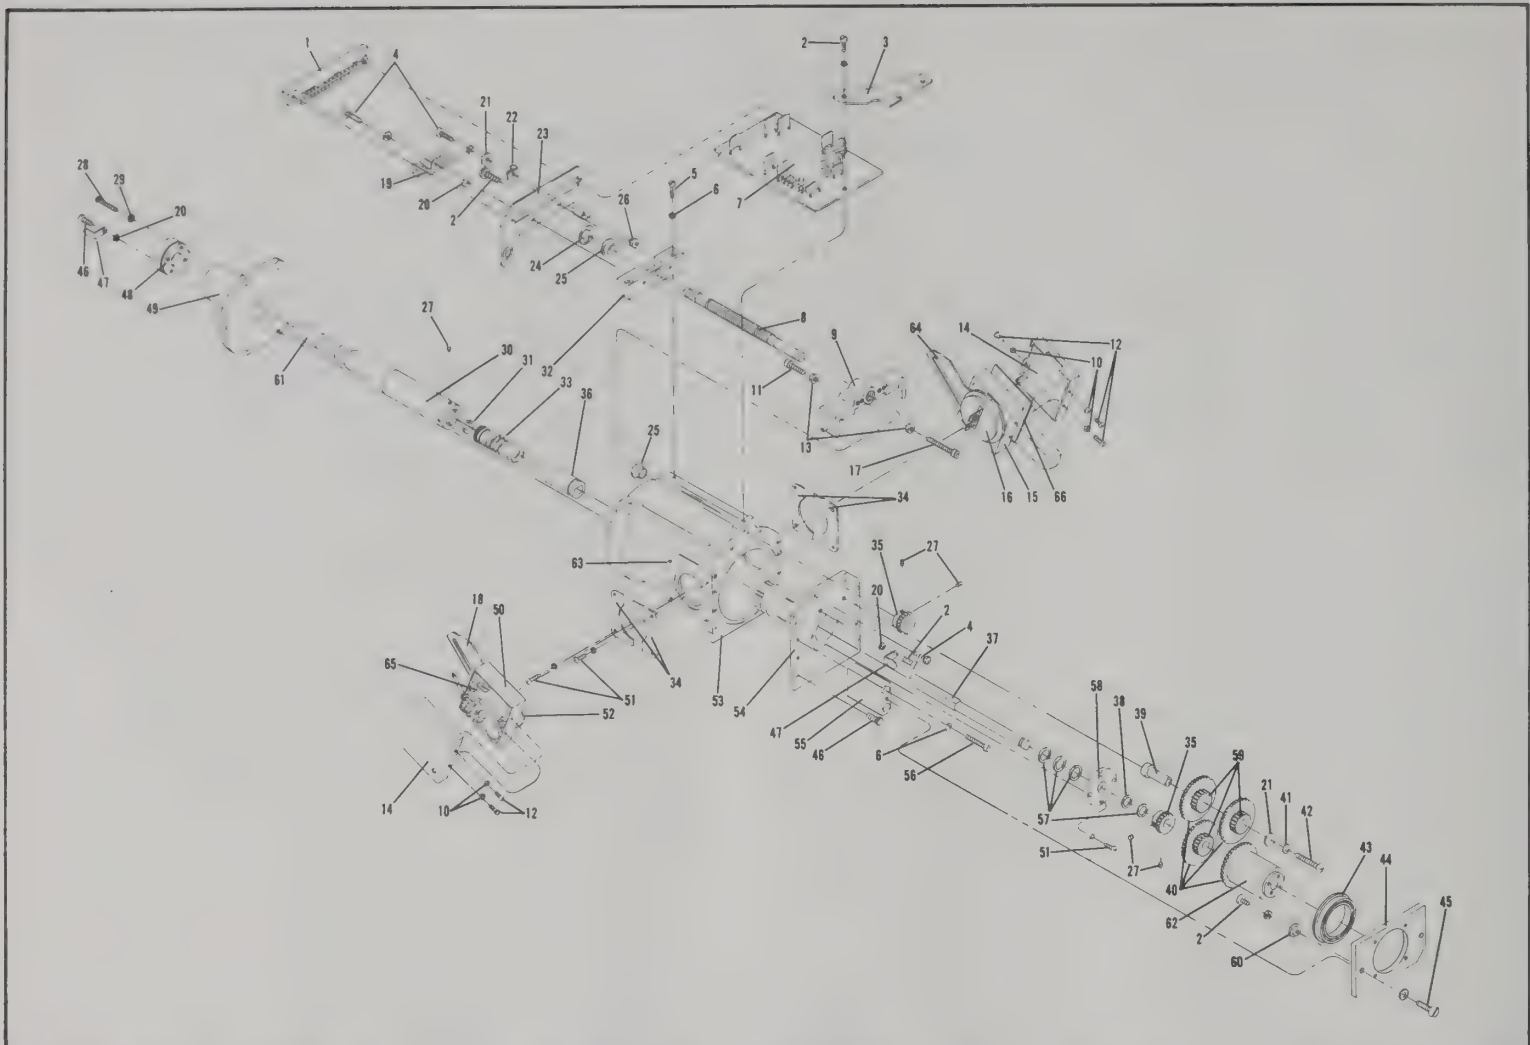

REF.	STOCK NO.	DESCRIPTION	QTY.	REF.	STOCK NO.	DESCRIPTION	QTY.	REF.	STOCK NO.	DESCRIPTION	QTY.
1	1251-0135	Connector, Printed Crt. 15	1	21	3050-0066	Washer Brass .375 OD .147 ID	2	42	2360-0013	Screw RH SS 6-32 x 1	1
2	2390-0007	Screw BH SS 6-32 x .312 with Lock	7	22	1400-0053	Clamp Cable for .188 Dia. Cable	1	43	1410-0021	Bearing Ball 1.5 OD 1.063 Bore	1
3	05253-0006	Bracket, Panel	1	23	5253A-12D	Bracket, Connector	1	44	5253A-17D	Holder	1
4	2390-0009	Screw BH SS 6-32 x .375 with Lock	4	24	0510-0083	Ring Retain Ext .025 Thk	1	45	2550-0009	Screw Mach BH SS 8-32 x .5 with Lock	2
5	2380-0003	Screw Fil H SS 6-32 x .5	2	25	1410-0047	Bushing Flanged .252 ID 25 LG	2	46	2390-0001	Screw BH SS 6-32 x .5	12
6	2190-0046	Washer Lock Split No. 6.141 ID	6	26	0510-0001	Fastener Steel .281 Dia. .063 Thk	1	47	0360-0042	Solder Lug - Brs .144 Mtg Hole 90 Deg Bend	2
7	05253-6007	Ass'y, Vidio Amplifier	1	27	3030-0022	Screw-Set Stl 6-32 x 1/8 HD LSS Hex Drive	8	48	05253-2002	Collar, Rear	1
8	525C-37A	Shaft, Loop Drive	1	28	2200-0009	Screw Mach RH SS 4-40 .5 LG	4	49	05253-2011	Flange, Cavity	1
9	5253A-12A	Yoke, Loop Drive	1	29	2190-0004	Washer Lock Internal No. 4	4	50	5253A-55B	Shield	1
10	2190-0014	Washer Lock Internal No. 2	6	30	05253-2004	Probe	1	51	2200-0004	Screw Mach RH SS 4-40 with Lock .250 LG	8
11	3030-0003	Screw Cap 6-32 x .375	2	31	5-25C-71E	Collar, Spring	1	52	05253-6004	Generator Bushing Ass'y	1
12	0520-0025	Screw Mach RH 2-56 .125 LG	6	32	5253A-17A	Bearing	1	53	5253A-20A	Cavity	1
13	2500-0001	Nuts - Hex BRS 6-32 x 1/4 x 3/32 In.	4	33	1460-0082	Spring Comp 1.5 LG .484 OD	1	54	05253-6001	Ass'y, Probe Positioning	1
14	5253A-41B	Cover	2	34	5253A-12B	Retainer	4	55	5253A-47B	Support	2
15	5253A-55A	Shield	1	35	525C-24B	Gear, Drive	2	56	2380-0004	Screw Fil H SS 6-32 x .750	4
16	5253A-17C	Bushing	1	36	525C-17A	Order 525C-25A	1	57	3050-0028	Washer Brass .4375 OD .25 ID	4
17	3030-0078	Screw Cap Hex Dr 6-32 x 1.125	2	37	5253A-37A	Shaft	1	58	05253-2009	Bushing, Probe Support	1
18	525C-108- AL	Left Cam	1	38	3050-0017	Washer Phos Br .375 OD .26 ID	1	59	525C-24C	Gear, Idler	3
19	0360-0018	Board-Terminal 4 Ins. 1 GRD Term A1A1GA1A1	1	39	5253A-37B	Shaft	1	60	565A-17A	Retainer, Bearing	4
20	2190-0008	Washer Lock External No. 6	3	40	5253A-24A	Gear	4	61	05253-6006	Ass'y Support Capacitor	1
				41	2190-0006	Washer Lock Split Ring No. 6	1	62	5253A-40A	Hub	1
								63	1480-0061	Pin Cross .06 ID .312 LG	4
								64	525C-108- AR	Right Cam	1
								65	5253A-65B	Board Ass'y, Circuit	1
								66	5253A-65C	Board Ass'y, Circuit	1

Figure 6-1. Mechanical Parts Location - 5253B

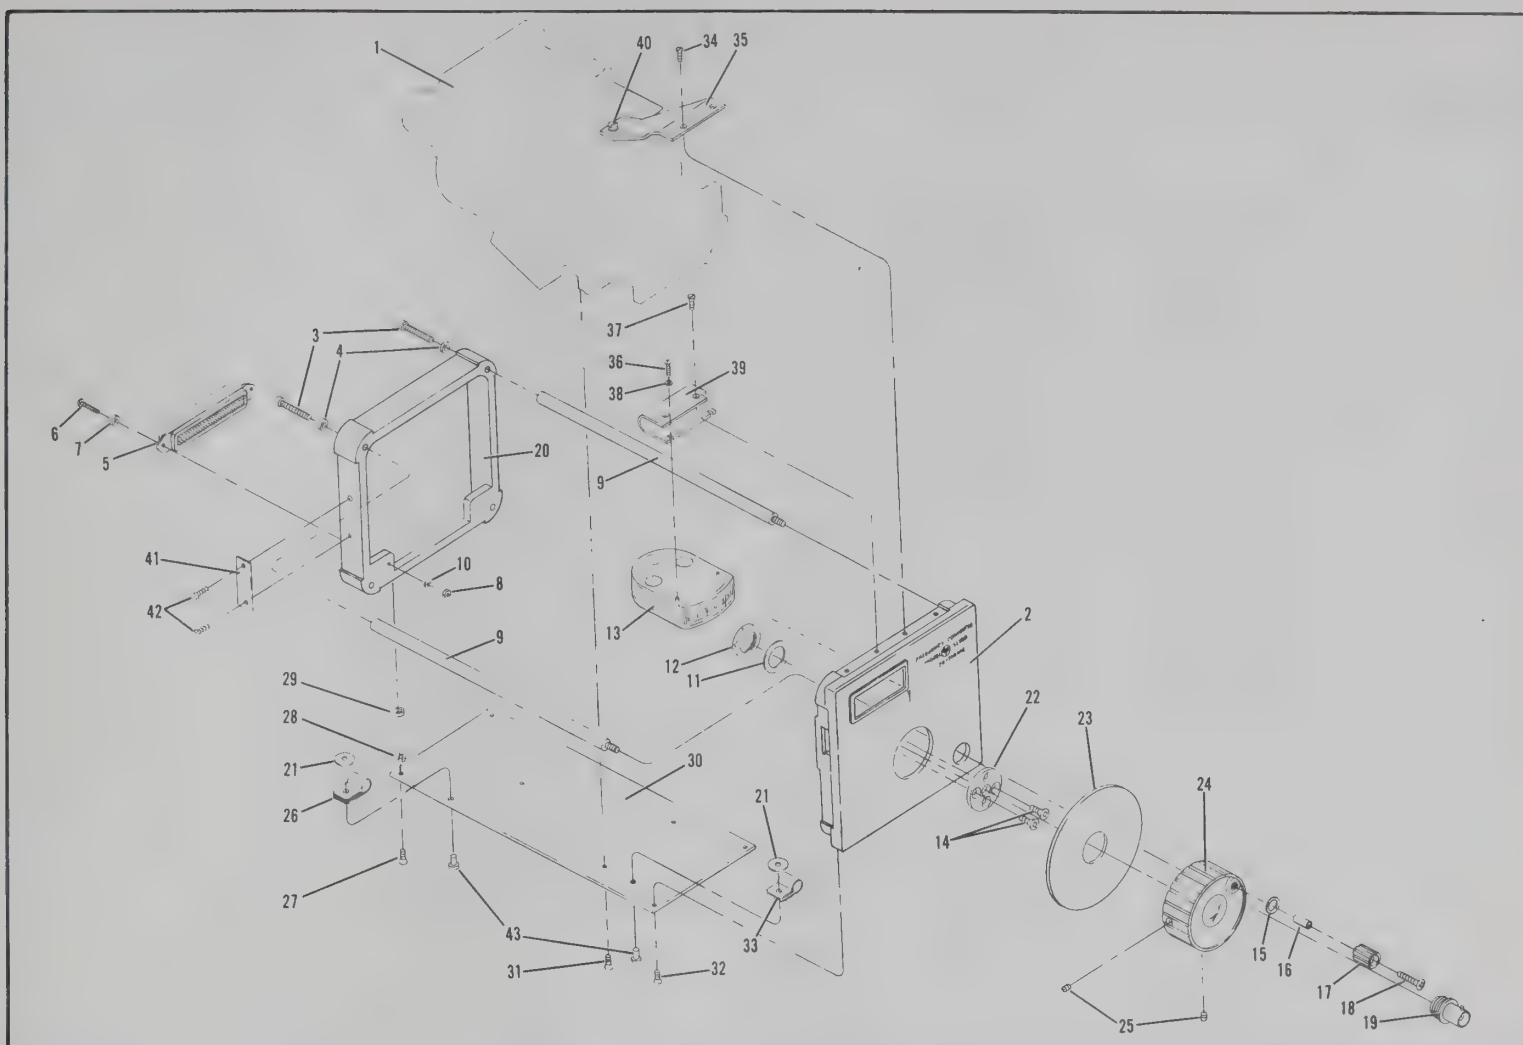

REF.	STOCK NO.	DESCRIPTION	QTY.	REF.	STOCK NO.	DESCRIPTION	QTY.	REF.	STOCK NO.	DESCRIPTION	QTY.
1		See Figure No. 6-1		17	0370-0050	Knob - Round 3/8 OD .221 ID .525 LG	1	30	05253-0005	Plate, Bottom	1
2	05253-2014	Panel, Front	1			BLK		31	2210-0002	Screw - Mach FH SS 4-40 .250 LG	3
3	2380-0004	Screw Fil H SS 6-32 x .750	2	18	2410-0001	Screw OH SS 6-32 x .625	1	32	2210-0018	Screw - Mach SS 4-40 x 3/16 100 Deg FH SD	2
4	2190-0046	Washer Lock Split No. 6 .141 ID	2	19	1250-0102	Cable Jack-Blk HD Mtg. Series BNC	1	33	1400-0082	Clamp Cable .375 WD .125 ID	1
5	1251-0099	Connector Male 50 Pin	1	20	5262A-83A	Guide, Plastic 4-3/16 In. x 4-3/8 In.	1	34	2210-0018	Screw - Mach SS 4-40 x 3/16 100 Deg FH SD	2
6	0525-0003	Screw - Mach BD H 3-56 .50 LG	2	21	3050-0066	Washer Brass .375 OD .147 ID	2	35	05253-0006	Bracket, Panel	1
7	2190-0031	Washer Lock Internal No. 3	2	22	05253-2012	Plate, Frequency Dial	1	36	0520-0022	Screw - Mach RH 2-56 .50 LG	2
8	0615-0001	Nut-Hex SS 3-36 Thrd .1875 WD	2	23	5000-0062	Dial Blank - Alum 1.75 ID 2.875 OD	1	37	2210-0018	Screw - Mach SS 4-40 x 3/16 100 Deg FH SD	2
9	5262A-47A	Rod, 7-9/16 In. Long	2	24	0370-0126	Knob - Crank 1-5/8 D 1/4 Shaft Blk	1	38	2190-0014	Washer Lock Internal No. 2	2
10	2190-0019	No. 4 Split Lock	2	25	3030-0001	Screw Set Stl Hex Dr 8/32 x .1875 LG	2	39	05251-0002	Bracket, Meter	1
11	2190-0068	Washer - Lock Int .630 OD .512 ID	1	26	1400-0024	Clamp Cable for .25 Dia Cable	1	40	2390-0007	Screw BH SS 6-32 x .312	1
12	2950-0054	BNC Hex Nut Brs	1	27	2210-0003	Screw - Mach FH SS 4-40 .375 LG	2	41	7122-0097	Plate Name Serial Dwg 50 MM 1874	1
13	1120-0140	Meter 0-1 Ma Edge View Per. Spec.	1	28	2190-0019	Washer Lock Split Ring No. 4	2	42	3040-0006	Screw Drive RH SS 0 x .1875	2
14	2370-0012	Screw - Mach FH SS 6-32 x 1-4	2	29	2340-0001	Nut Hex BNP 4-40 .188 WD	2	43	0361-0011	Rivet - Semi Tub, Alum OH 1/8 Dia 1/4 LG	2
15	3050-0017	Washer Phos Br .375 OD .26 ID	1								
16	1410-0033	Bushing Knob .219 OD .140 ID	1								

Figure 6-2. Mechanical Parts Location - 5253B

Table 6-1. Reference Designation Index

Reference Designation	Stock No.	Description #	Note
A1	05253-6007 05253-2007	ASSY:AMPLIFIER BOARD:BLANK P.C.	
A1C1	0160-0128	C:FXD CER 2.2UF 20% 25VDCW	
A1C2	0180-0100	C:FXD ELECT TA 4.7UF 10% 35VDCW	
A1C3	0160-0127	C:FXD CER 1UF 20% 25VDCW	
A1C4	0160-0137	C:FXD CER 0.33UF 20% 25VDCW	
A1C5	0160-0127	C:FXD CER 1UF 20% 25VDCW	
A1C6	0160-0127	C:FXD CER 1UF 20% 25VDCW	
A1C7	0140-0194	C:FXD MICA 110 PF 5% 300 VDCW	
A1C8	0160-0178	C:FXD MICA 27PF 5% 300VDCW	
A1C9	0160-0332	C:FXD MICA 133PF 1%	
A1C10	0140-0214	C:FXD MICA 60PF 5% 300VDCW	
A1C11	0140-0192	C:FXD MICA 68PF 5% 300VDCW	
A1C12	0160-0127	C:FXD CER 1UF 20% 25VDCW	
A1C13	0160-0127	C:FXD CER 1UF 20% 25VDCW	
A1C14	0160-0127	C:FXD CER 1UF 20% 25VDCW	
A1C15	0160-0161	C:FXD MY 0.01 UF 10% 200VDCW	
A1C16	0150-0121	C:FXD CER 0.1UF +80%-20% 50VDCW	
A1CR1	1910-0022	SEMICON DEVICE:DIODE GE 100MA 6PIV 3.5NS	
A1CR2	1910-0022	SEMICON DEVICE:DIODE GE 100MA 6PIV 3.5NS	
A1CR3	1910-0022	SEMICON DEVICE:DIODE GE 100MA 6PIV 3.5NS	
A1L1	9140-0137	COIL:FXD RF 1000UH	
A1L2	9140-0138	COIL:FXD RF 180UH 5%	
A1L3	9140-0126	COIL:VAR 1.76-4.02	
A1L4	9140-0125	COIL:VAR 0.9-1.9 UH	
A1L5	9140-0143	COIL:FXD RF 3.3 UH	
A1Q1	1854-0005	TRANSISTOR:2N708 NPN SILICON	
A1Q2	1853-0009	TRANSISTOR:SILICON PNP	
A1Q3	1854-0005	TRANSISTOR:2N708 NPN SILICON	
A1Q4	1853-0009	TRANSISTOR:SILICON PNP	
A1Q5	1854-0005	TRANSISTOR:2N708 NPN SILICON	
A1R1	0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	
A1R2	0683-3925	R:FXD COMP 3900 OHM 5% 1/4W	
A1R3	0683-4305	R:FXD COMP 43 OHM 5% .25W	
A1R4	0683-5115	R:FXD COMP 510 OHM 5% 1/4W	
A1R5	0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	
A1R6	0683-5115	R:FXD COMP 510 OHM 5% 1/4W	
A1R7	0683-4315	R:FXD COMP 430 OHM 5% 1/4W	
A1R8	0683-1315	R:FXD COMP 130 OHM 5% 1/4W	
A1R9	0683-1815	R:FXD COMP 180 OHM 5% 1/4W	
A1R10	0683-4305	R:FXD COMP 43 OHM 5% .25W	
A1R11	0683-5115	R:FXD COMP 510 OHM 5% 1/4W	
A1R12	0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	
A1R13	0683-5115	R:FXD COMP 510 OHM 5% 1/4W	
A1R14	0683-4315	R:FXD COMP 430 OHM 5% 1/4W	
A1R15	0683-5125	R:FXD COMP 5100 OHM 5% 1/4W	
A1R16	0683-2725	R:FXD COMP 2700 OHM 5% 1/4W	
A1R17	0683-7515	R:FXD COMP 750 OHM 5% 1/4W	

See list of abbreviations in introduction to this section

Table 6-1. Reference Designation Index (Cont'd)

Reference Designation	Stock No.	Description #	Note
A1R18 A1R19 A1R20	0683-3915 0683-1525 0683-4305	R:FXD COMP 390 OHM 5% 1/4W R:FXD COMP 1500 OHM 5% 1/4W R:FXD COMP 43 OHM 5% .25W FACTORY SELECTED COMP:TYPICAL VALUE GIVEN	
A2	05253-6003	ASSY:STEP RECOVERY DIODE	
A2C1 A2CR1	0150-0061	C:FXD CER 20 PF 100 VDCW SPECIALLY SELECTED PART NOT RECOMMENDED FOR FIELD REPLACEMENT	
A2E1 A2E2	9170-0029 9170-0029	CORE: FERRITE BEAD CORE: FERRITE BEAD	
A2L1	9140-0170	COIL:FXD .15 UH 20% 350 MA	
A2R1	0683-3315	R:FXD COMP 330 OHM 5% 1/4W FACTORY SELECTED PART:TYPICAL VALUE GIVEN	
A3	5253A-65B	ASSY:HARMONIC GENERATOR	
A3C1 A3C2 A3C3 A3C4 A3C5	0150-0093 0170-0094 0140-0151 0140-0200 0130-0016	C:FXD CER 0.01UF +80-20% 100VDCW C:FXD MY 0.047UF 20% 50VDCW C:FXD MICA 820PF 2% 300VDCW C:FXD MICA 390PF 5% 300VDCW C:VAR CER 5-25 PF NPO	
A3C6	0140-0191	C:FXD MICA 56 PF 5% 300 VDCW	
A3L1 A3L2 A3Q1 A3R1 A3R2 A3R3	9140-0107 9140-0025 1854-0005 0686-2425 0683-2205 0683-5625	COIL:FXD RF 27 UH COIL:FXD RF 4.7 UHY TRANSISTOR:SILICON NPN 2N708 R:FXD COMP 2400 OHM 5% 1/2W R:FXD COMP 22 OHM 5% 1/4W R:FXD COMP 5600 OHM 5% 1/4W FACTORY SELECTED PART:TYPICAL VALUE GIVEN	
A4	5253A-65C	ASSY:MIXER	
A4C1 A4C2 A4C3	0140-0069 0150-0030 0170-0040	C:FXD MICA 550 PF 10% 500 VDCW C:FXD CER 1000PF 600 VDCW C:FXD MY .047 UF 10% 200VDCW	
A4CR1 A4CR2	1900-0011 1910-0016	SEMICON DEVICE:DIODE 1N4168M MATCH PAIR DIODE,GERMANIUM:100MA ATO.85V 60PIV	
A4L1	9140-0142	COIL:FXD RF 2.2 UH	
A4R1 A4R2 A4R3 A4R4 A4R5	0683-3305 0683-3305 0684-5621 0683-2245 0683-2245	R:FXD COMP 33 OHM 5% 1/4W R:FXD COMP 33 OHM 5% 1/4W R:FXD COMP 5.6K OHM 10% 1/4W R:FXD COMP 220K OHM 5% 1/4W R:FXD COMP 220K OHM 5% 1/4W	
A4R6 A4R7	0683-2715 0683-6205	R:FXD COMP 270 OHM 5% 1/4W R:FXD COMP 62 OHM 5% 1/4W FACTORY SELECTED PART:TYPICAL VALUE GIVEN	
C21 C22	0160-0127 0140-0069	C:FXD CER 1UF 20% 25VDCW C:FXD MICA 550 PF 10% 500 VDCW NOT RECOMMENDED FOR FIELD REPLACEMENT	

See list of abbreviations in introduction to this section

Table 6-1. Reference Designation Index (Cont'd)

Reference Designation	Stock No.	Description #	Note
C23	0160-0127	C:FXD CER 1UF 20% 25VDCW	
C24	0160-0127	C:FXD CER 1UF 20% 25VDCW	
E1	9170-0059	MAGNETIC CORE:TOROID FERRITE	
E2	9170-0059	MAGNETIC CORE:TOROID FERRITE	
E3	9170-0059	MAGNETIC CORE:TOROID FERRITE	
J1	1250-0102	CONNECTOR:BNC	
J2	1251-0099	CONNECTOR:50 PIN MINAT	
M1	1120-0140	METER:0-1 MILLIAMPERE EDGE-VIEW	
R21	0684-5621	R:FXD COMP 5.6K OHM 10% 1/4W	
XA1	1251-0135	CONNECTOR:PRINTED CIRCUIT 15 CONTACTS	
		MISCELLANEOUS	
	05251-0002	BRACKET:METER	
	05253-0006	BRACKET:PANEL	
	05253-2014	PANEL:FRONT	
	05253-0005	PLATE:BOTTOM	

See list of abbreviations in introduction to this section

Table 6-2. Replaceable Parts

Stock No.	Description #	Mfr.	Mfr. Part No.	TQ
0130-0016	CiVAR CER 5-25 PF NPO	28480	0130-0016	1
0140-0069	CiFXD MICA 550 PF 10% 500 VDCW	00853	TYPE M 100 E10	2
0140-0151	CiFXD MICA 820PF 2% 300VDCW	04062	RDM15F821G35	1
0140-0176	CiFXD MICA 100 PF 2% 300 VDCW	04062	DM15F101G 300V	1
0140-0189	CiFXD MICA 5825 PF 2% 300 VDCW	04062	DM20F5825G	1
0140-0191	CiFXD MICA 56 PF 5% 300 VDCW	04062	RDM15E560J3C	2
0140-0192	CiFXD MICA 68PF 5% 300VDCW	04062	RDM15E680J3C	1
0140-0193	CiFXD MICA 82 PF 5% 300 VDCW	04062	DM15E820J 300V	1
0140-0194	CiFXD MICA 110 PF 5% 300 VDCW	04062	RDM15F111J3C	1
0140-0200	CiFXD MICA 390PF 5% 300VDCW	04062	RDM15F391J3C	1
0140-0203	CiFXD MICA 30PF 5% 500VDCW	04062	DM15E300J 500V	1
0140-0204	CiFXD 47PF 5% NPO 500 VDCW	04062	DM15E470J	1
0140-0214	CiFXD MICA 60PF 5% 300VDCW	04062	RDM15E600J3C	1
0150-0050	CiFXD CER 1000PF 600 VDCW	84411	TYPE E	1
0150-0061	CiFXD CER 20 PF 100 VDCW	56289	53C47	1
0150-0093	CiFXD CER 0.01UF +80-20% 100VDCW	91418	TA	1
0150-0121	CiFXD CER 0.1UF +80%-20% 50VDCW	56289	5C50A	3
0160-0127	CiFXD CER 1UF 20% 25VDCW	56289	5C13	14
0160-0128	CiFXD CER 2.2UF 20% 25VDCW	56289	5C15	1
0160-0137	CiFXD CER 0.33UF 20% 25VDCW	56289	5C10	3
0160-0161	CiFXD MY 0.01 UF 10% 200VDCW	28480	0160-0161	1
0160-0178	CiFXD MICA 27PF 5% 300VDCW	04062	RDM15E270J3S	1
0160-0332	CiFXD MICA 133PF 1%	28480	0160-0332	1
0170-0040	CiFXD MY .047 UF 10% 200VDCW	28480	0170-0040	1
0170-0094	CiFXD MY 0.047UF 20% 50VDCW	84411	TYPE 602	1
0180-0100	CiFXD ELECT TA 4.7UF 10% 35VDCW	56289	150D475X9035B2	2
0683-1025	RiFXD COMP 1000 OHM 5% 1/4W	01121	CB 1025	5
0683-1225	RiFXD 1200 OHM 5% 1/4W	01121	EB1225	4
0683-1315	RiFXD COMP 130 OHM 5% 1/4W	01121	CB 1315	1
0683-1525	RiFXD COMP 1500 OHM 5% 1/4W	01121	CB 1525	1
0683-1815	RiFXD COMP 180 OHM 5% 1/4W	01121	CB 1815	1
0683-2205	RiFXD COMP 22 OHM 5% 1/4W	01121	CB 2205	1
0683-2225	RiFXD 2.2K OHM 5% 1/4W	01121	CB2225	1
0683-2245	RiFXD COMP 220K OHM 5% 1/4W	01121	CB 2245	2
0683-2715	RiFXD COMP 270 OHM 5% 1/4W	01121	CB 2715	1
0683-2725	RiFXD COMP 2700 OHM 5% 1/4W	01121	CB-2725	1
0683-3305	RiFXD COMP 33 OHM 5% 1/4W	01121	CB 3305	3
0683-3315	RiFXD COMP 330 OHM 5% 1/4W	01121	CB 3315	1
0683-3615	RiFXD COMP 360 OHMS 5% 1/4W	01121	CB 3615	1
0683-3915	RiFXD COMP 390 OHM 5% 1/4W	01121	CB 3915	2
0683-3925	RiFXD COMP 3900 OHM 5% 1/4W	01121	CB 3925	1
0683-4305	RiFXD COMP 43 OHM 5% .25W	01121	CB 4305	3
0683-4315	RiFXD COMP 430 OHM 5% 1/4W	01121	CB 4315	2
0683-4725	RiFXD COMP 4700 OHMS 5% 1/4W	01121	CB 4725	2
0683-5115	RiFXD COMP 510 OHM 5% 1/4W	01121	CB 5115	5
0683-5125	RiFXD COMP 5100 OHM 5% 1/4W	01121	CB 5125	1
0683-5625	RiFXD COMP 5600 OHM 5% 1/4W	01121	CB 5625	1
0683-6205	RiFXD COMP 62 OHM 5% 1/4W	01121	CB 6205	1
0683-6815	RiFXD COMP 680 OHMS 5% 1/4W	01121	CB 6815	1
0683-7515	RiFXD COMP 750 OHM 5% 1/4W	01121	CB 7515	1

See list of abbreviations in introduction to this section

Table 6-2. Replaceable Parts (Cont'd)

Stock No.	Description #	Mfr.	Mfr. Part No.	TQ
0683-7525	R:FXD COMP 7500 OHMS 5% 1/4W	01121	CB 7525	1
0683-8205	R:FXD COMP 82 OHMS 5% 1/4W	01121	CB 8205	1
0684-1041	R:FXD 100 K OHM 10% 1/4 W	01121	CB 1041	1
0684-1511	R:FXD COMP 15K OHMS 10% 1/4W	01121	CB 1231	1
0684-2701	R:FXD 27 OHM 10% 1/4 W	01121	CB 2701	1
0684-5621	R:FXD COMP 5.6K OHM 10% 1/4W	01121	CB 5621	2
0686-2425	R:FXD COMP 2400 OHM 5% 1/2W	01121	EB 2425	1
1120-0140	METER:0-1 MILLIAMPERE EDGE-VIEW	28480	1120-0140	1
1250-0102	CONNECTOR:BNC	91737	7011	1
1251-0099	CONNECTOR:50 PIN MINAT	28480	1251-0099	1
1251-0135	CONNECTOR:PRINTED CIRCUIT 15 CONTACTS	95354	SD-615UR	1
1850-0091	TRANSISTOR:GERMANIUM 2N2048 PNP	87216	2N2048	4
1853-0009	TRANSISTOR:SILICON PNP	28480	1853-0009	2
1854-0005	TRANSISTOR:2N708 NPN SILICON	07263	2N708	4
1900-0011	SEMICON DEVICE:DIODE 1N4168M MATCH PAIR	93332	1N4168M	1
1901-0040	DIODE:SILICON	28480	1901-0040	3
1910-0016	DIODE:GERMANIUM:100MA ATO.85V 60PIV	28480	1910-0016	1
1910-0022	SEMICON DEVICE:DIODE GE 100MA 6PIV 3.5NS	28480	1910-0022	3
9140-0025	COIL:FXD RF 4.7 UHY	28480	9140-0025	1
9140-0107	COIL:FXD RF 27 UH	99800	1840-38	1
9140-0111	COIL:FXD RF 3.3UHY	28480	9140 0111	1
9140-0118	COIL:FXD 500 UH 5%	99800	2500-14	2
9140-0125	COIL:VAR 0.9-1.9 UH	28480	9140-0125	2
9140-0126	COIL:VAR 1.76-4.02	28480	9140-0126	2
9140-0137	COIL:FXD RF 1000UH	28480	9140-0137	1
9140-0138	COIL:FXD RF 180UH 5%	99800	9140-0138	1
9140-0142	COIL:FXD RF 2.2 UH	28480	9140-0142	1
9140-0143	COIL:FXD RF 3.3 UH	28480	9140-0143	1
9140-0170	COIL-FXD .15 UH 20% 350 MA	78526	11503M	1
9170-0029	CORE: FERRITE BEAD	02114	56-590-65/4A	2
9170-0059	MAGNETIC CORE:TOROID FERRITE	02114	396T125-303	3
05253-2007	BOARD:BLANK P.C. AMPLIFIER	28480	05253-2007	1
05253-6003	ASSY:STEP RECOVERY DIODE	28480	05253-6003	1
05253-6007	ASSY:AMPLIFIER	28480	05253-6007	1
5253A-65B	ASSY:HARMONIC GENERATOR	28480	5253A-65B	1
5253A-65C	ASSY:MIXER	28480	5253A-65C	1
05251-0002	BRACKET:METER	28480	05251-0002	1
05253-0005	PLATE:BOTTOM	28480	05253-0005	1
05253-0006	BRACKET:PANEL	28480	05253-0006	1
05253-2014	PANEL:FRONT	28480	05253-2014	1

See list of abbreviations in introduction to this section

Table 6-3. Manufacturer's Code

The following code numbers are from the Federal Supply Code for Manufacturers Cataloging Handbooks H4-1 (Name to Code) and H4-2 (Code to Name) and their latest supplements. The date of revision and the date of the supplements used appear at the bottom of each page. Alphabetical codes have been arbitrarily assigned to suppliers not appearing in the H4 handbooks.

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
00000	U.S.A. Common	Any supplier of U.S.	07115	Corning Glass Works	Bradford, Pa.	24655	General Radio Co.	West Concord, Mass.	73293	Hughes Products Division of	
00136	McCoy Electronics	Mount Holly Springs, Pa.		Electronic Components Dept.		26365	Gries Reproducer Corp.	New Rochelle, N.Y.		Hughes Aircraft Co.	Newport Beach, Calif.
00213	Sage Electronics Corp.	Rochester, N. Y.	07126	Digitran Co.	Pasadena, Calif.	26462	Grobet Frie Co. of America, Inc.	Carlstadt, N.J.	73445	Amperex Electronic Co., Div. of North	
00334	Humidair Co.	Colton, Calif.	07137	Transistor Electronics Corp.	Minneapolis, Minn.	26992	Hamilton Watch Co.	Lancaster, Pa.	73490	Beckman Helipot Corp.	So. Pasadena, Calif.
00335	Westrex Corp.	New York, N.Y.	07138	Westinghouse Electric Corp.		28480	Hewlett-Packard Co.	Palo Alto, Calif.	73506	Bradley Semiconductor Corp.	Hamden, Conn.
00373	Garlock Packing Co.,			Electronic Tube Div.	Elmira, N.Y.	33173	G.E. Receiving Tube Dept.	Owensboro, Ky.	73559	Carling Electric, Inc.	Hartford, Conn.
	Electronic Products Div.	Camden, N.J.	07149	Filmohm Corp.	New York, N. Y.	35434	Lectrohm Inc.	Chicago, Ill.	73682	George K. Garrett Co., Inc.	Philadelphia, Pa.
00656	Aerovox Corp.	New Bedford, Mass.	07233	Cinch-Graphik Co.	City of Industry, Calif.	36196	Stanwyck Corp.	Hawkesbury, Ontario, Canada	73734	Federal Screw Prod. Co.	Chicago, Ill.
00779	Amp, Inc.	Harrisburg, Pa.	07261	Avnet Corp.	Los Angeles, Calif.	37942	P.R. Mallory & Co., Inc.	Indianapolis, Ind.	73743	Fischer Special Mfg. Co.	Cincinnati, Ohio
00781	Aircraft Radio Corp.	Bloomington, N.J.	07263	Fairchild Semiconductor Corp.		39543	Mechanical Industries Prod. Co.	Akron, Ohio	73793	The General Industries Co.	Elyria, Ohio
00815	Northern Engineering Laboratories, Inc.	Burlington, Wis.				40920	Miniature Precision Bearings, Inc.	Keene, N.H.	73846	Goshen Stamping & Tool Co.	Goshen, Ind.
			07322	Minnesota Rubber Co.	Minneapolis, Minn.	42190	Muter Co.	Chicago, Ill.	73899	JFD Electronics Corp.	Brooklyn, N. Y.
00853	Sangamo Electric Company,		07387	The Birtcher Corp.	Los Angeles, Calif.	43990	C.A. Norgren Co.	Englewood, Colo.	73905	Jennings Radio Mfg. Co.	San Jose, Calif.
	Ordill Division (Capacitors)	Marion, Ill.	07700	Technical Wire Products	Springfield, N.J.	44655	Ohmite Mfg. Co.	Skokie, Ill.	74276	Signalite Inc.	Neptune, N.J.
00866	Goe Engineering Co.	Los Angeles, Calif.	07910	Continental Device Corp.	Hawthorne, Calif.	47904	Polaroid Corp.	Cambridge, Mass.	74455	J.H. Wines, and Sons	Winchester, Mass.
00891	Carl E. Holmes Corp.	Los Angeles, Calif.	07933	Rheem Semiconductor Corp.	Mountain View, Calif.	48620	Precision Thermometer and		74861	Industrial Condenser Corp.	Chicago, Ill.
01121	Allen Bradley Co.	Milwaukee, Wis.	07966	Shockley Semi-Conductor			Inst. Co.	Philadelphia, Pa.	74868	R.F. Products Division of Ampheno-	
01255	Litton Industries, Inc.	Beverly Hills, Calif.		Laboratories	Palo Alto, Calif.	49956	Raytheon Company	Lexington, Mass.		Borg Electronics Corp.	Danbury, Conn.
01281	TRW Semiconductors Inc.	Lawndale, Calif.	07980	Boonton Radio Corp.	Boonton, N.J.	52090	Rowan Controller Co.	Baltimore, Md.	74970	E.F. Johnson Co.	Waseca, Minn.
01295	Texas Instruments, Inc.		08145	U.S. Engineering Co.	Los Angeles, Calif.	54294	Shallcross Mfg. Co.	Selma, N.C.	75042	International Resistance Co.	Philadelphia, Pa.
			08289	Binn, Delbert, Co.	Pomona, Calif.	55026	Simpson Electric Co.	Chicago, Ill.	75173	Jones, Howard B., Division	
	Transistor Products Div.	Dallas, Texas	08358	Burgess Battery Co.		55933	Sonotone Corp.	Elmsford, N.Y.		of Cinch Mfg. Corp.	Chicago, Ill.
01349	The Alliance Mfg. Co.	Alliance, Ohio			Niagara Falls, Ontario, Canada.	55938	Sorenson & Co., Inc.	So. Norwalk, Conn.	75378	James Knights Co.	Sandwich, Ill.
01561	Chassi-Trak Corp.	Indianapolis, Ind.	08717	Sloan Company	Burbank, Calif.	56137	Spaulding Fibre Co., Inc.	Tonawanda, N.Y.	75382	Kulka Electric Corporation	Mt. Vernon, N. Y.
01589	Pacific Relays, Inc.	Van Nuys, Calif.	08718	Cannon Electric Co., Phoenix Div.	Phoenix, Ariz.	56289	Sprague Electric Co.	North Adams, Mass.	75818	Lenz Electric Mfg. Co.	Chicago, Ill.
01930	Amerock Corp.	Rockford, Ill.	08792	CBS Electronics Semiconductor		59446	Telex, Inc.	St. Paul, Minn.	75915	Littlefuse Inc.	Des Plaines, Ill.
01961	Pulse Engineering Co.	Santa Clara, Calif.		Operations, Div. of C.B.S., Inc.	Lowell, Mass.	59730	Thomas & Betts Co.	Elizabeth, N.J.	76005	Lord Mfg. Co.	Erie, Pa.
02114	Ferroxcube Corp. of America	Saugerties, N.Y.	08984	Mei-Rain	Indianapolis, Ind.	60741	Tripplett Electrical Inc.	Bluffton, Ohio	76210	C.W. Marwedel	San Francisco, Calif.
02286	Cole Mfg. Co.	Palo Alto, Calif.	09026	Babcock Relays, Inc.	Costa Mesa, Calif.	61775	Union Switch and Signal, Div. of		76433	Micamold Electronic Mfg. Corp.	Brooklyn, N.Y.
02660	Amphenol-Borg Electronics Corp.	Chicago, Ill.	09134	Texas Capacitor Co.	Houston, Texas		Westinghouse Air Brake Co.	Swissvale, Pa.	76487	James Millen Mfg. Co., Inc.	Malden, Mass.
02735	Radio Corp. of America, Semiconductor		09145	Atom Electronics	Sun Valley, Calif.	62119	Universal Electric Co.	Owosso, Mich.	76493	J.W. Miller Co.	Los Angeles, Calif.
	and Materials Div.	Somerville, N.J.	09250	Electro Assemblies, Inc.	Chicago, Ill.	63743	Ward-Leonard Electric Co.	Mt. Vernon, N.Y.	76530	Monadnock Mills	San Leandro, Calif.
02771	Vocaline Co. of America, Inc.		09569	Mallory Battery Co. of		64959	Western Electric Co., Inc.	New York, N.Y.	76545	Mueller Electric Co.	Cleveland, Ohio
				Canada, Ltd.	Toronto, Ontario, Canada	65092	Western Inst. Div. of Daystrom, Inc.	Newark, N.J.	76854	Oak Manufacturing Co.	Crystal Lake, Ill.
02777	Hopkins Engineering Co.	San Fernando, Calif.	10214	The Bristol Co.	Waterbury, Conn.	66295	Wittek Manufacturing Co.	Chicago 23, Ill.	77068	Bendix Pacific Division of	
03508	G.E. Semiconductor Products Dept.	Syracuse, N.Y.		General Transistor Western Corp.		66346	Wollensak Optical Co.	Rochester, N.Y.		Bendix Corp.	No. Hollywood, Calif.
03705	Apex Machine & Tool Co.	Dayton, Ohio	10411	Ti-Tal, Inc.	Berkeley, Calif.	70276	Allen Mfg. Co.	Hartford, Conn.	77075	Pacific Metals Co.	San Francisco, Calif.
03797	Eidema Corp.	El Monte, Calif.	10646	Carborundum Co.	Niagara Falls, N.Y.	70309	Allied Control Co., Inc.	New York, N.Y.	77221	Phaostro Instrument and	
03877	Transitron Electronic Corp.	Wakefield, Mass.	11236	CTS of Berne, Inc.	Berne, Ind.	70319	Allmetal Screw Prod. Co., Inc.	Garden City, N.Y.		Electronic Co.	South Pasadena, Calif.
03888	Pyrofilm Resistor Co.	Morristown, N.J.	11237	Chicago Telephone of California, Inc.				Chicago, Ill.	77250	Phoell Mfg. Co.	Chicago, Ill.
03954	Air Marine Motors, Inc.	Los Angeles, Calif.			So. Pasadena, Calif.	70485	Atlantic India Rubber Works, Inc.	Chicago, Ill.	77252	Philadelphia Steel and Wire Corp.	
04009	Arrow, Hart and Hegeman Elect. Co.		11312	Microwave Electronics Corp.	Palo Alto, Calif.	70563	Amperite Co., Inc.	New York, N.Y.			Philadelphia, Pa.
			11534	Duncan Electronic, Inc.	Santa Ana, Calif.	70903	Belden Mfg. Co.	Chicago, Ill.	77342	Potter and Brumfield, Div. of American	
04013	Taurus Corp.	Lambertville, N. J.	11711	General Instrument Corporation		70998	Bird Electronic Corp.	Cleveland, Ohio		Machine and Foundry	Princeton, Ind.
04062	Elenco Products Co.	New York, N.Y.		Semiconductor Division	Newark, N.J.	71002	Birnbach Radio Co.	New York, N.Y.	77630	Radio Condenser Co.	Camden, N.J.
04222	H-Q Division of Aerovox	Myrtle Beach, S.C.	11717	Imperial Electronic, Inc.	Buena Park, Calif.	71041	Boston Gear Works Div. of		77638	Radio Receptor Co., Inc.	Brooklyn, N.Y.
04298	Elgin National Watch Co.,		11870	Melabs, Inc.	Palo Alto, Calif.		Murray Co. of Texas	Quincy, Mass.	77764	Resistance Products Co.	Harrisburg, Pa.
	Electronics Division	Burbank, Calif.	12136	Philadelphia Handle Co.	Camden, N. J.	71218	Bud Radio Inc.	Cleveland, Ohio	77969	Rubbercraft Corp. of Calif.	Torrance, Calif.
04354	Precision Paper Tube Co.	Chicago, Ill.	12697	Clarostat Mfg. Co.	Dover, N.H.	71286	Camloc Fastener Corp.	Paramus, N.J.	78189	Shakeproof Division of Illinois	
04404	Dymec Division of Hewlett-Packard Co.	Palo Alto, Calif.	12859	Nippon Electric Co., Ltd.	Tokyo, Japan	71313	Allen D. Cardwell Electronic			Tool Works	Elgin, Ill.
04651	Sylvania Electric Prods., Inc.		12930	Delta Semiconductor Inc.	Newport Beach, Calif.		Prod. Corp.	Plainville, Conn.	78283	Signal Indicator Corp.	New York, N.Y.
	Electronic Tube Div.	Mountain View, Calif.	13103	Thermolloy	Dallas, Texas	71400	Bussmann Fuse Div. of McGraw-		78290	Struthers-Dunn Inc.	Pittman, N.J.
04713	Motorola, Inc., Semiconductor Prod. Div.		13396	Telefunken (G.M.B.H.)	Hannover, Germany		Edison Co.	St. Louis, Mo.	78452	Thompson-Bremer & Co.	Chicago, Ill.
		Phoenix, Arizona	13835	Midland Mfg. Co.	Kansas City, Kansas	71436	Chicago Condenser Corp.	Chicago, Ill.	78471	Tilley Mfg. Co.	San Francisco, Calif.
04732	Filtron Co., Inc., Western Div.	Culver City, Calif.	14099	Sem-Tech	Newbury Park, Calif.	71450	CTS Corp.	Elkhart, Ind.	78488	Stackpole Carbon Co.	St. Marys, Pa.
04773	Automatic Electric Co.	Northlake, Ill.	14193	Calif. Resistor Corp.	Santa Monica, Calif.	71468	Cannon Electric Co.	Los Angeles, Calif.	78493	Standard Thomson Corp.	Waltham, Mass.
04777	Automatic Electric Sales Corp.	Northlake, Ill.	14298	American Components, Inc.	Conshohocken, Pa.	71471	Cinema Engineering Co.	Burbank, Calif.	78553	Timmerman Products, Inc.	Cleveland, Ohio
04796	Sequoia Wire & Cable Co.	Redwood City, Calif.	14655	Cornell Dubilier Elec. Corp.	So. Plainfield, N.J.	71482	C.P. Clare & Co.	Chicago, Ill.	78790	Transformer Engineers	Pasadena, Calif.
04811	Precision Coil Spring Co.	El Monte, Calif.	14960	Williams Mfg. Co.	San Jose, Calif.	71590	Centrair Div. of Globe Union Inc.		78947	Ucinite Co.	Newtonville, Mass.
04870	P. M. Motor Company	Chicago 44, Ill.	15203	Webster Electronics Co. Inc.	Brooklyn, N.Y.			Milwaukee, Wis.	79142	Veeder Root, Inc.	Hartford, Conn.
05006	Twentieth Century Plastics, Inc.	Los Angeles, Calif.	15291	Adjustable Bushing Co.	N. Hollywood, Calif.	71616	Commercial Plastics Co.	Chicago, Ill.	79251	Wenco Mfg. Co.	Chicago, Ill.
			15772	Twentieth Century		71700	The Cornish Wire Co.	New York, N.Y.	79727	Continental-Wirt Electronics Corp.	
05277	Westinghouse Electric Corp.,			Coil Spring Co.	Santa Clara, Calif.	71744	Chicago Miniature Lamp Works	Chicago, Ill.			Philadelphia, Pa.
	Semi-Conductor Dept.	Youngwood, Pa.	15909	The Daven Co.	Livingstone, N.J.	71753	A.O. Smith Corp., Crowley Div.	West Orange, N.J.	79963	Zierick Mfg. Corp.	New Rochelle, N.Y.
05347	Ultratronics, Inc.	San Mateo, Calif.	16037	Spruce Pine Mica Co.	Spruce Pine, N. C.			Chicago, Ill.	80031	Meppo Division of Sessions	
05593	Illumitronic Engineering Co.	Sunnyvale, Calif.	16352	Computer Diode Corp.	Lodi, N. J.	71785	Cinch Mfg. Corp.	Chicago, Ill.		Clock Co.	Morristown, N.J.
05616	Cosmo Plastic		16688	De Jur-Amsco Corporation		71984	Dow Corning Corp.	Midland, Mich.	80120	Schnitzer Alloy Products	Elizabeth, N.J.
	(C/o Electrical Spec. Co.)	Cleveland, Ohio			Long Island City 1, N.Y.	72092	Eitel-McCullough, Inc.	San Bruno, Calif.	80130	Times Facsimile Corp.	New York, N.Y.
05624	Barber Colman Co.	Rockford, Ill.				72136	Electro Motive Mfg. Co., Inc.		80131	Electronic Industries Association	Any brand
05728	Tiffen Optical Co.		16758	Delco Radio Div. of G.M. Corp.	Kokomo, Ind.			Willimantic, Conn.		tube meeting EIA standards	Washington, D.C.
		Roslyn Heights, Long Island, N.Y.	17109	Thermometrics Inc.	Canoga Park, Calif.	71707	Coto Coil Co., Inc.	Providence, R.I.	80207	Unimax Switch, Div. of	
05729	Metropolitan Telecommunications Corp.,		17474	Tranex Company	Mountain View, Calif.	72354	John E. Fast & Co.	Chicago, Ill.		W.L. Maxson Corp.	Wallingford, Conn.
	Metro Cap. Division	Brooklyn, N.Y.	18486	Radio Industries	Des Plaines, Ill.	72619	Dialight Corp.	Brooklyn, N.Y.	80223	United Transformer Corp.	New York, N.Y.
05783	Stewart Engineering Co.	Santa Cruz, Calif.	18583	Curtis Instrument Inc.	Mt. Kisco, N.Y.	72656	General Ceramics Corp.	Keasbey, N.J.	80248	Oxford Electric Corp.	Chicago, Ill.
05820	Wakefield Engineering Inc.	Wakefield, Mass.	18873	E.I. DuPont and Co., Inc.	Wilmington, Del.	72699	General Instrument Corp.,		80294	Bourns Laboratories, Inc.	Riverside, Calif.
06004	The Bassick Co.	Bridgeport, Conn.	19315	Eclipse Pioneer, Div. of			Semiconductor Div.	Newark, N.J.	80411	Acro Div. of Robertshaw	
06175	Bausch and Lomb Optical Co.	Rochester, N.Y.	19500	Thomas A. Edison Industries,				Oakland, Calif.		Columbus 16, Ohio	
06402	E.T.A. Products Co. of America	Chicago, Ill.		Div. of McGraw-Edison Co.	West Orange, N.J.	72755	Drake Mfg. Co.	Chicago, Ill.	80486	All Star Products Inc.	Defiance, Ohio
06475	Western Devices, Inc.	Inglewood, Calif.	19701	Electra Manufacturing Co.	Kansas City, Mo.	72825	Hugh H. Eby Inc.	Philadelphia, Pa.	80509	Avery Adhesive Label Corp.	Monrovia, Calif.
06540	Amaton Electronic		20183	Electronic Tube Corp.	Philadelphia, Pa.	72928	Gudeman Co.	Chicago, Ill.	80583	Hammerlund Co., Inc.	New York, N.Y.
	Hardware Co. Inc.	New Rochelle, N. Y.	21226	Executive, Inc.	New York, N.Y.	72964	Robert M. Hadley Co.	Los Angeles, Calif.	80640	Stevens, Arnold, Co., Inc.	Boston, Mass.
06555	Beebe Electrical Instrument Co., Inc.		21520	Fanstee Metallurgical Corp.	No. Chicago, Ill.	72982	Erie Resistor Corp.	Erie, Pa.	81030	International Instruments, Inc.	
06751	U. S. Semcor Division of Nuclear Corp.		21335	The Fafnir Bearing Co.	New Britain, Conn.	73061	Hansen Mfg. Co., Inc.	Princeton, Ind.			New Haven, Conn.
	of America	Phoenix, Arizona	21964	Fed. Telephone and Radio Corp.	Clifton, N.Y.	73076	H.M. Harper Co.	Chicago, Ill.	81073	Grayhill Co.	LaGrange, Ill.
06812	Torrington Mfg. Co., West Div.	Van Nuys, Calif.	24446	General Electric Co.	Schenectady, N.Y.	73138	Helipot Div. of Beckman		81095	Triad Transformer Corp.	Venice, Calif.
07088	Kelvin Electric Co.	Van Nuys, Calif.	24455	G.E., Lamp Division	Nela Park, Cleveland, Ohio		Instruments, Inc.	Fullerton, Calif.	81312	Winchester Electronics Co., Inc.	Norwalk, Conn.

Galley 3 - Hewlett Packard Code List

00015-39
Revised: February, 1965From: FSC. Handbook Supplements
H4-1 Dated DECEMBER 1964
H4-2 Dated MARCH 1962

Table 6-3. Manufacturer's Code (cont'd)

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
81349	Military Specification	85474	R.M. Bracamonte & Co.	San Francisco, Calif.	93929	G. V. Controls	Livingston, N. J.	98220	Francis L. Mosley	Pasadena, Calif.
81415	Wilkor Products, Inc.	Cleveland, Ohio	85660	Koiled Kords, Inc.	New Haven, Conn.	93983	Insuline-Van Norman Ind., Inc.	Manhattan, N.Y.	98278	Microdot, Inc.	So. Pasadena, Calif.
81453	Raytheon Mfg. Co., Industrial Components Div., Industr. Tube Operations	Newton, Mass.	85911	Seamless Rubber Co.	Chicago, Ill.		Electronic Division	Manchester, N.H.	98291	Sealectro Corp.	Mamaroneck, N.Y.
81483	International Rectifier Corp.	El Segundo, Calif.	86197	Clifton Precision Products	Clifton Heights, Pa.	94137	General Cable Corp.	Bayonne, N.J.	98405	Carad Corp.	Redwood City, Calif.
81541	The Airpax Products Co.	Cambridge, Mass.	86579	Precision Rubber Products Corp.	Dayton, Ohio	94144	Raytheon Mfg. Co., Industrial Components Div., Receiving Tube Operation	Quincy, Mass.	98731	General Mills	Minneapolis, Minn.
81860	Barry Controls, Inc.	Watertown, Mass.	86684	Radio Corp. of America, RCA Electron Tube Div.	Harrison, N.J.	94145	Raytheon Mfg. Co., Semiconductor Div., California Street Plant	Newton, Mass.	98821	North Hills Electric Co.	Mineola, N.Y.
82042	Carter Parts Co.	Skokie, Ill.	87216	Philco Corporation (Lansdale Division)	Lansdale, Pa.	94148	Scientific Radio Products, Inc.	Loveland, Colo.	98925	Clevite Transistor Prod. Div. of Clevite Corp.	Waltham, Mass.
82142	Jeffers Electronics Division of Speer Carbon Co.	Du Bois, Pa.	87473	Western Fibrous Glass Products Co.	San Francisco, Calif.	94154	Tung-Sol Electric, Inc.	Newark, N.J.	98978	International Electronic Research Corp.	Burbank, Calif.
82170	Allen B. DuMont Labs, Inc.	Clifton, N.J.	87664	Van Waters & Rogers Inc.	Seattle, Wash.	94197	Curtiss-Wright Corp., Electronics Div.	East Paterson, N.J.	99109	Columbia Technical Corp.	New York, N.Y.
82209	Maguire Industries, Inc.	Greenwich, Conn.	87930	Tower Mfg. Corp.	Providence, R. I.	94222	Southco Div. of S. Chester Corp.	Lester, Pa.	99313	Varian Associates	Palo Alto, Calif.
82219	Sylvania Electric Prod. Inc. Electronic Tube Div.	Emporium, Pa.	88140	Cutler-Hammer, Inc.	Lincoln, Ill.	94310	Tru Ohm Prod. Div. of Model Engineering and Mfg. Co.	Chicago, Ill.	99515	Marshall Industries, Electron Products Division	Pasadena, Calif.
82376	Astron Co.	East Newark, N.J.	88220	Gould-National Batteries, Inc.	St. Paul, Minn.	94330	Wire Cloth Products Inc.	Chicago, Ill.	99707	Control Switch Division, Controls Co. of America	El Segundo, Calif.
82389	Switchcraft, Inc.	Chicago, Ill.	88698	General Mills, Inc.	Buffalo, N.Y.	94682	Worcester Pressed Aluminum Corp.	Worcester, Mass.	99800	Delevan Electronics Corp.	East Aurora, N.Y.
82647	Metals and Controls, Inc., Div. of Texas Instruments, Inc., Spencer Prods.	Attleboro, Mass.	89231	Graybar Electric Co.	Oakland, Calif.	95023	Philbrick Researchers, Inc.	Boston, Mass.	99848	Wilco Corporation	Indianapolis, Ind.
82866	Research Products Corp.	Madison, Wis.	89462	Waltes Kohnoor, Inc.	Cambridge, Mass.	95236	Allies Products Corp.	Miami, Fla.	99934	Renbrandt, Inc.	Boston, Mass.
82877	Rotron Manufacturing Co., Inc.	Woodstock, N.Y.	89473	General Electric Distributing Corp.	Schenectady, N.Y.	95238	Continental Connector Corp.	Woodside, N.Y.	99942	Hoffman Semiconductor Div. of Hoffman Electronics Corp.	Evanston, Ill.
82893	Vector Electronic Co.	Glendale, Calif.	89636	Carter Parts Div. of Economy Baler Co.	Chicago, Ill.	95263	Leecraft Mfg. Co., Inc.	New York, N.Y.	99957	Technology Instrument Corp. of Calif.	Newbury Park, Calif.
83053	Western Washer Mfr. Co.	Los Angeles, Calif.	89665	United Transformer Co.	Chicago, Ill.	95264	Lerco Electronics, Inc.	Burbank, Calif.			
83058	Carr Fastener Co.	Cambridge, Mass.	90179	U.S. Rubber Co., Mechanical Goods Div.	Passaic, N.J.	95265	National Coil Co.	Sheridan, Wyo.			
83086	New Hampshire Ball Bearing, Inc.	Peterborough, N.H.	90970	Bearing Engineering Co.	San Francisco, Calif.	95275	Vitramon, Inc.	Bridgeport, Conn.			
83125	Pyramid Electric Co.	Darlington, S.C.	91260	Connor Spring Mfg. Co.	San Francisco, Calif.	95348	Gordas Corp.	Bloomfield, N.J.			
83148	Electro Cords Co.	Los Angeles, Calif.	91345	Miller Dial & Nameplate Co.	El Monte, Calif.	95354	Methode Mfg. Co.	Chicago, Ill.			
83186	Victory Engineering Corp.	Springfield, N.J.	91418	Radio Materials Co.	Chicago, Ill.	95712	Dage Electric Co., Inc.	Franklin, Ind.			
83298	Bendix Corp., Red Bank Div.	Red Bank, N.J.	91506	Augal Brothers, Inc.	Attleboro, Mass.	95987	Weckesser Co.	Chicago, Ill.			
83315	Hubbell Corp.	Mundelein, Ill.	91637	Dale Electronics, Inc.	Columbus, Nebr.	96067	Huggins Laboratories	Sunnyvale, Calif.			
83330	Smith, Herman H., Inc.	Brooklyn, N.Y.	91662	Elco Corp.	Philadelphia, Pa.	96095	Hi-Q Division of Aerovox	Olean, N.Y.			
83385	Central Screw Co.	Chicago, Ill.	91737	Gremar Mfg. Co., Inc.	Wakefield, Mass.	96256	Thordarson-Meissner Div. of Maguire Industries, Inc.	Mt. Carmel, Ill.			
83501	Gavitt Wire and Cable Co., Div. of Amerace Corp.	Brookfield, Mass.	91827	K F Development Co.	Redwood City, Calif.	96296	Solar Manufacturing Co.	Los Angeles, Calif.			
83594	Burroughs Corp., Electronic Tube Div.	Plainfield, N.J.	91929	Minneapolis-Honeywell Regulator Co., Microswitch Div.	Freeport, Ill.	96330	Carlton Screw Co.	Chicago, Ill.			
83740	Eveready Battery	New York, N.Y.	91961	Nahm-Bros. Spring Co.	Oakland, Calif.	96341	Microwave Associates, Inc.	Burlington, Mass.			
83777	Model Eng. and Mfg., Inc.	Huntington, Ind.	92180	Tru-Connector Corp.	Peabody, Mass.	96501	Excel Transformer Co.	Oakland, Calif.			
83821	Loyd Scruggs Co.	Festus, Mo.	92196	Universal Metal Prod., Inc.	Bassett Puente, Calif.	97464	Industrial Retaining Ring Co.	Irvine, N.J.			
84171	Arco Electronics, Inc.	New York, N.Y.	92367	Elgeet Optical Co., Inc.	Rochester, N.Y.	97539	Automatic and Precision Mfg. Co.	Yonkers, N.Y.			
84396	A. J. Giesener Co., Inc.	San Francisco, Calif.	92607	Tinsolite Insulated Wire Co.	Tarrytown, N.Y.	97966	CBS Electronics, Div. of C.B.S., Inc.	Danvers, Mass.			
84411	Good All Electric Mfg. Co.	Ogallala, Neb.	93332	Sylvania Electric Prod. Inc., Semiconductor Div.	Woburn, Mass.	97979	Reon Resistor Corp.	Yonkers, N.Y.			
84970	Sarkes Tarzian, Inc.	Bloomington, Ind.	93369	Robbins and Myers, Inc.	New York, N.Y.	98141	Axel Brothers Inc.	Jamaica, N.Y.			
85454	Boonton Molding Company	Boonton, N.J.	93410	Stevens Mfg. Co., Inc.	Mansfield, Ohio	98159	Rubber Teck, Inc.	Gardena, Calif.			
85471	A. B. Boyd Co.	San Francisco, Calif.	93788	Howard J. Smith Inc.	Port Monmouth, N. J.						

THE FOLLOWING H-P VENDORS HAVE NO NUMBER ASSIGNED IN THE LATEST SUPPLEMENT TO THE FEDERAL SUPPLY CODE FOR MANUFACTURERS HANDBOOK.





J0000	Winchester Electronics, Inc.	Santa Monica, Calif.
0000F	Malco Tool and Die	Los Angeles, Calif.
0000M	Western Coil Div. of Automatic Ind., Inc.	Redwood City, Calif.
0000P	Ty-Car Mfg. Co., Inc.	Holliston, Mass.
0000Z	Willow Leather Products Corp.	Newark, N.J.
000AA	British Radio Electronics Ltd.	Washington, D.C.
000AB	ETA	England
000AC	Indiana General Corp., Elect. Div.	Indiana
000BB	Precision Instrument Components Co.	Van Nuys, Calif.
000MM	Rubber Eng. & Development	Hayward, Calif.
000NN	A "N" D Manufacturing Co.	San Jose 27, Calif.
000QQ	Cooltron	Oakland, Calif.
000SS	Control of Elgin Watch Co.	Burbank, Calif.
000WW	California Eastern Lab.	Burlingame, Calif.
000YY	S.K. Smith Co.	Los Angeles 45, Calif.

APPENDIX I - MANUAL CHANGES

This manual applies directly to the 5253B Frequency Converter having serial prefix 513. This manual with the following changes also applies to the 5253B Frequency Converters having serial prefix numbers 450, 321, and 311.

<u>Instrument Serial Prefix No.</u>	<u>Change No.</u>
450	1
311, 321	1, 2

CHANGE 1: Tables 6-1, Misc., Table 6-2

Change: Plate: Bottom from 05253-0005 to  Part No. 5253A-12E.
Bracket: Meter from 05251-0002 to  Part No. 5253A-12F.
Bracket: Panel from 05253-0006 to  Part No. 05253-0002.
Panel: Front from 05253-2014 to  Part No. 05253-2003.

CHANGE 2: Figure 5-5, Table 6-1.

Change: A1 from 05253-6007 to 5253A-65A

Replace schematic with Figure IA-1

Replace A1 portion of parts list with Table IA-1

Figure IA-1

Table IA-1. Reference Designation Index

Reference Designation	Stock No.	Description #	Note
A1	5253A-65A	ASSY:VIDEO AMPLIFIER	
A1C1	0160-0127	C:FXD 1UF OHM 20% 25VDCW	
A1C2	0160-0127	C:FXD 1UF OHM 20% 25VDCW	
A1C3	0180-0100	C:FXD ELECT TA 4.7UF 10% 35VDCW	
A1C4	0160-0137	C:FXD CER 0.33UF 20% 25VDCW	
A1C5	0160-0127	C:FXD 1UF OHM 20% 25VDCW	
A1C6	0160-0137	C:FXD CER 0.33UF 20% 25VDCW	
A1C7	0140-0176	C:FXD MICA 100 PF 2% 300 VDCW	
A1C8	0140-0203	C:FXD MICA 30PF 5% 500VDCW	
A1C9	0140-0193	C:FXD MICA 82 PF 5% 300 VDCW	
A1C10	0140-0191	C:FXD MICA 56 PF 5% 300 VDCW	
A1C11	0140-0204	C:FXD 47PF 5% NPO 500 VDCW	
A1C12	0150-0121	C:FXD .1MF 50VDCW	
A1C13	0160-0127	C:FXD 1UF OHM 20% 25VDCW	
A1C14	0160-0127	C:FXD 1UF OHM 20% 25VDCW	
A1C15	0140-0189	C:FXD MICA 5825 PF 2% 300 VDCW	
A1C16	0150-0121	C:FXD .1MF 50VDCW	
A1CR1	1901-0040	DIODE:SILICON	
A1CR2	1901-0040	DIODE:SILICON	
A1CR3	1901-0040	DIODE:SILICON	
L1	9140-0118	COIL:FXD 500 UH 5%	
L2	9140-0118	COIL:FXD 500 UH 5%	
A1L3	9140-0126	COIL:VAR 1.76-4.02	
A1L4	9140-0125	COIL:VAR 0.9-1.9 UHY	
A1L5	9140-0111	COIL:FXD RF 3.3UHY	
A1Q1	1850-0091	TRANSISTOR:GERMANIUM 2N2048 PNP	
A1Q2	1850-0091	TRANSISTOR:GERMANIUM 2N2048 PNP	
A1Q3	1850-0091	TRANSISTOR:GERMANIUM 2N2048 PNP	
A1Q4	1850-0091	TRANSISTOR:GERMANIUM 2N2048 PNP	
A1R1	0683-7525	R:FXD COMP 7500 OHMS 5% 1/4W	
A1R2	0683-1225	R:FXD 1200 OHM 5% 1/4W	
A1R3	0683-1225	R:FXD 1200 OHM 5% 1/4W	
A1R4	0683-3305	R:FXD COMP 33 OHMS 5% 1/4W	
A1R5	0683-1225	R:FXD COMP 1200 OHMS 5% 1/4W	
A1R6	0683-3615	R:FXD COMP 360 OHMS 5% 1/4W	
A1R7	0683-1025	R:FXD COMP 1000 OHMS 5% 1/4W	
A1R8	0684-2701	R:FXD 27 OHM 10% 1/4 W	
A1R9	0684-1511	R:FXD COMP 15K OHMS 10% 1/4W	
A1R10	0683-2225	R:FXD 2.2K OHM 5% 1/4W	
A1R11	0683-4725	R:FXD COMP 4700 OHMS 5% 1/4W	
A1R12	0683-4725	R:FXD COMP 4700 OHMS 5% 1/4W	
A1R13	0683-6815	R:FXD COMP 680 OHMS 5% 1/4W	
A1R14	0683-5115	R:FXD COMP 510 OHMS 5% 1/4W	
A1R15	0683-3915	R:FXD COMP 390 OHMS 5% 1/4W	
A1R16	0683-1025	R:FXD COMP 1000 OHMS 5% 1/4W	
A1R17	0683-1225	R:FXD 1200 OHM 5% 1/4W	
A1R18	0684-1041	R:FXD 100 K OHM 10% 1/4 W	
A1R19	0683-8205	R:FXD COMP 82 OHMS 5% 1/4W	

See list of abbreviations in introduction to this section

APPENDIX II - 5253A

IIA-1. INTRODUCTION.

IIA-2. The 5253A is basically the same as the 5253B except for frequency range. The 5253A measures from 100 to 500 Mc. The 5253B measures from 50 to 500 Mc. The frequency range of the 5253B was extended by changing the pick-up loop in the cavity. The 5253B manual will apply for most applications. Appendix II covers the differences between the two models and contains the necessary information for the operation and maintenance of the 5253A.

IIA-3. DESCRIPTION.

IIA-4. The Hewlett-Packard Model 5253A Frequency Converter is a plug-in unit which converts a Hewlett-Packard Model 5243L or 5245L Electronic Counter into a direct reading counter from 88 to 512 Mc.

IIA-5. The stability and accuracy of the basic counter are retained by multiplying a 10-Mc signal, derived from the 1-Mc internal time base of the counter, to a selectable harmonic frequency between 100 and 500 Mc. This known harmonic of 10 Mc is then heterodyned with the INPUT signal. If the resulting difference frequency is between 100 kc and 12 Mc (bandwidth of amplifier in plug-in), it is counted and displayed by the counter. The frequency of the INPUT signal is then indicated by the combination of the MIXING FREQUENCY control (in megacycles; front panel of plug-in) and the digital display of the counter (in megacycles).

IIA-6. A front panel meter, by monitoring the difference-frequency output of the plug-in to the counter,

aids in selecting the desired MIXING FREQUENCY and also in determining if INPUT signal amplitude is adequate for accurate frequency measurement.

IIA-7. OPERATING PROCEDURE.

IIA-8. NORMAL RANGE MEASUREMENTS.

IIA-9. Figure IIA-1 is the procedure to be used for measurement of frequencies from 100.1 to 512 Mc with INPUT signal amplitudes from 50 mv to 1 v RMS.

IIA-10. EXTENDED RANGE MEASUREMENTS.

IIA-11. The frequency of signals not within the normal range of 100.1 to 512 Mc, 50 mv to 1 v RMS, may be measured using the following procedures:


IIA-12. 88 TO 100.1 MC, 50 MV TO 1 V RMS. Perform steps 1 through 5 of Figure IIA-1. Then:

- a. Set mixing frequency control to slightly more than 110 Mc.
- b. Turn mixing frequency control slowly clockwise until level indicator meter first reaches a maximum reading in the green portion of the scale.
- c. Subtract counter display (in Mc) from reading of mixing frequency control (in Mc) for frequency of INPUT signal.

Table IIA-1. Specifications*

RANGE:	As converter for 5243L or 5245L counter, 88 Mc to 512 Mc, using mixing frequencies of 100 Mc to 500 Mc in 10 Mc steps
ACCURACY:	Retains accuracy of 5243L or 5245L counter
INPUT VOLTAGE RANGE:	50 mv to 1 v RMS
MAXIMUM INPUT:	2 v RMS or 100 vdc will not damage the instrument
INPUT IMPEDANCE:	Approximately 50 ohms
LEVEL INDICATOR:	Meter aids frequency selection; indicates output voltage level to counter
REGISTRATION:	Counter display is added to the converter dial reading
WEIGHT:	Net 5-1/2 lbs, shipping 9 lbs
ACCESSORY FURNISHED:	Ⓜ 10503A (AC-16K) Cable, 4 ft long, male BNC connectors

*When installed in Hewlett-Packard Model 5243L or Model 5245L Electronic Counter.

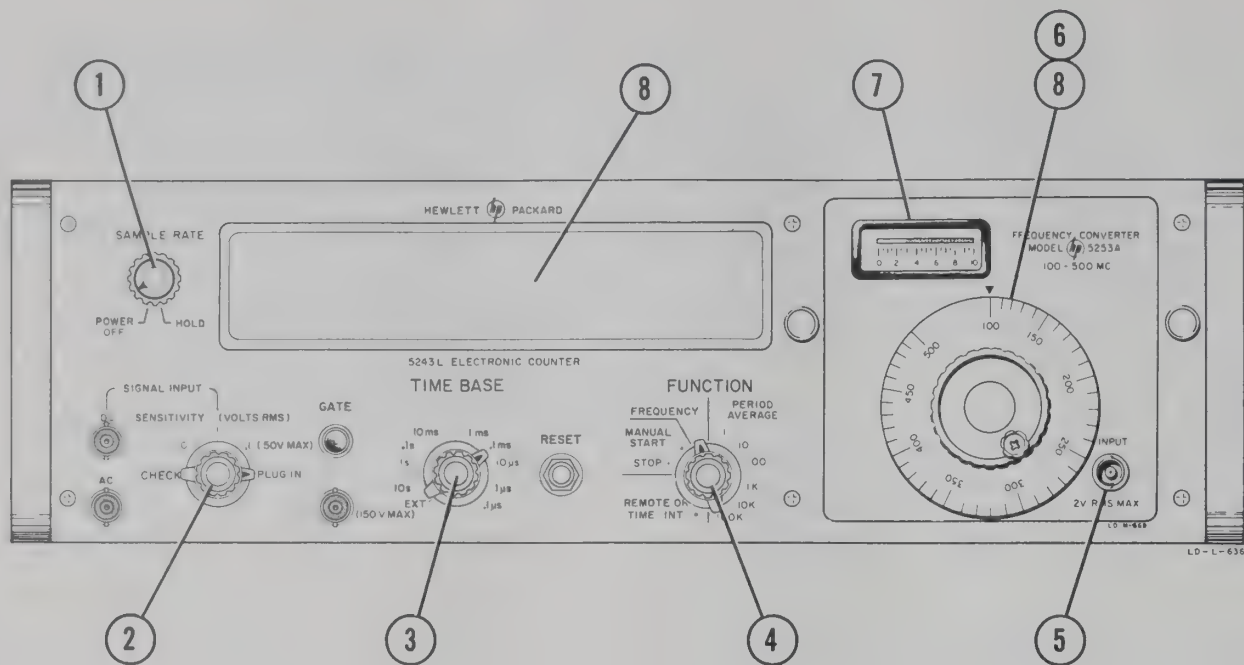

1. Turn SAMPLE RATE control slightly out of POWER OFF position.
2. Set SENSITIVITY to PLUG IN.
3. Set TIME BASE to .1 ms.*
4. Set FUNCTION to FREQUENCY.
5. Connect signal whose frequency is to be measured to INPUT of converter.
6. Set mixing frequency control to read slightly less than 100 mc.

7. Slowly turn mixing frequency control counter-clockwise until level indicator meter first reaches a maximum reading in the green portion of its scale.
8. Add counter display (in mc) to mixing frequency control reading (in mc) for frequency of INPUT signal.

* TIME BASE setting may vary, depending on desired resolution of INPUT signal frequency. See table 3-1.

Figure IIA-1. Frequency Measurement Procedure

IIA-13. 88 TO 512 MC, AMPLITUDE LESS THAN 50 MV RMS. The front panel level indicator meter indicates in the green portion of its scale only when converter is properly tuned and amplitude of INPUT signal is adequate for accurate frequency measurement. However, because of conservative specifications of both the converter and counter, frequencies may often be accurately measured when meter reads in the red portion of its scale. To make these extended range measurements:

a. Follow normal procedure (Figure IIA-1 or Paragraph IIA-12, depending upon frequency range) except that mixing frequency control should be tuned for first maximum reading on the level indicator meter, regardless of the color of region maximum.

b. Insert an external variable attenuator (such as Hewlett-Packard Model 355A or 355C) in the transmission line between the converter and the source of INPUT signal. Vary attenuation from 0 to 1 db during final step of frequency measurement procedure. If counter display does not change more than momentarily (during switching of attenuator), INPUT signal is above noise threshold and frequency measurement result is valid.

IIA-14. VIDEO AMPLIFIER ASSEMBLY (A1).

IIA-15. The output of the mixer circuit is amplified by transistors A1Q1 and A1Q2 and is fed to the 12-Mc low-pass filter network (see Figure IIA-2). This filter passes any signal frequency below approximately 12 Mc and attenuates all higher frequency signals. The low-pass filter output is amplified by A1Q3 and fed to the last transistor amplifier, A1Q4, which provides both the output to the counter and the drive for the level indicator meter. The limiter diode, A1CR1, prevents the amplitude of the video amplifier output signal from exceeding approximately 300 mv RMS so that counter input circuits will not be overloaded. The low frequency limit of the video amplifier, determined by the bypass and interstage coupling networks, is approximately 100 kc. The converter output signal to the counter, when converter is properly tuned, will be between approximately 100 kc and 12 Mc and will have an amplitude that is less than approximately 300 mv RMS.

IIA-16. LEVEL INDICATOR METER.

IIA-17. The dc current supply for the meter is produced by metering detector A1CR3 and smoothed by capacitor A1C16 (see Figure IIA-3). The value of shunt resistor A1R19 is selected to make level indicator meter M1 read at red-green border when amplitude of converter output to counter is in excess of the 100-mv RMS minimum signal amplitude normally required by the counter for accurate frequency measurement.

IIA-18. HARMONIC GENERATOR ADJUSTMENT.

IIA-19. To adjust the harmonic generator assembly, proceed as follows:

a. Remove converter from counter and reconnect to counter with Extension Cable, $\text{CP } 10506A$.

b. Connect VHF Signal Generator to converter INPUT and set to 472 Mc, CW, at 100 mv.

c. Connect RF Millivoltmeter to Test Point #13 (see Figure IIA-5).

d. Set converter mixing frequency control to 470 Mc, and tune for maximum reading on RF Millivoltmeter.

e. Vary output of VHF Signal Generator to make converter level indicator meter read at red-green border.

f. Using plastic tuning tool, tune A3C5 (see Figure IIA-5) for maximum reading on RF Millivoltmeter. Tune A3C5 through hole in harmonic generator assembly shield cover.

IIA-20. LOW PASS FILTER ADJUSTMENT.

IIA-21. To adjust the low pass filter in the video amplifier assembly, proceed as follows:

a. Remove converter from counter and reconnect to counter with Extension Cable, $\text{CP } 10506A$.

b. Connect VHF Signal Generator to converter INPUT and set to 110 Mc, CW, at 50 mv.

c. Connect RF Millivoltmeter to Test Point #13 (see Figure IIA-7).

d. Set converter mixing frequency control to 100 Mc and tune for maximum reading on RF Millivoltmeter.

e. Set Signal Generator to 118 Mc, CW, at 1 v.

f. Using plastic tool, adjust variable inductor A1L4 (see Figure IIA-4) for minimum reading of RF Millivoltmeter.

g. Set Signal Generator to 117 Mc, CW, at 1 v.

h. Using plastic tool, adjust variable inductor A1L3 (see Figure IIA-4) for minimum reading of RF Millivoltmeter.

i. Set Signal Generator to 115 Mc, CW, at 1 v.

j. Reading of RF Millivoltmeter should be less than 100 mv. If reading is above 100 mv, troubleshoot video amplifier assembly.

IIA-22. METER ADJUSTMENT.

a. Turn counter power off, remove converter from counter, and reconnect to counter with Extension Cable, $\text{CP } 10506A$.

b. Set VHF Signal Generator to 102 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Set counter controls as shown in Figure IIA-1. Counter should display approximately 2 Mc.

d. Vary VHF Generator output to make level indicator meter read at red-green border.

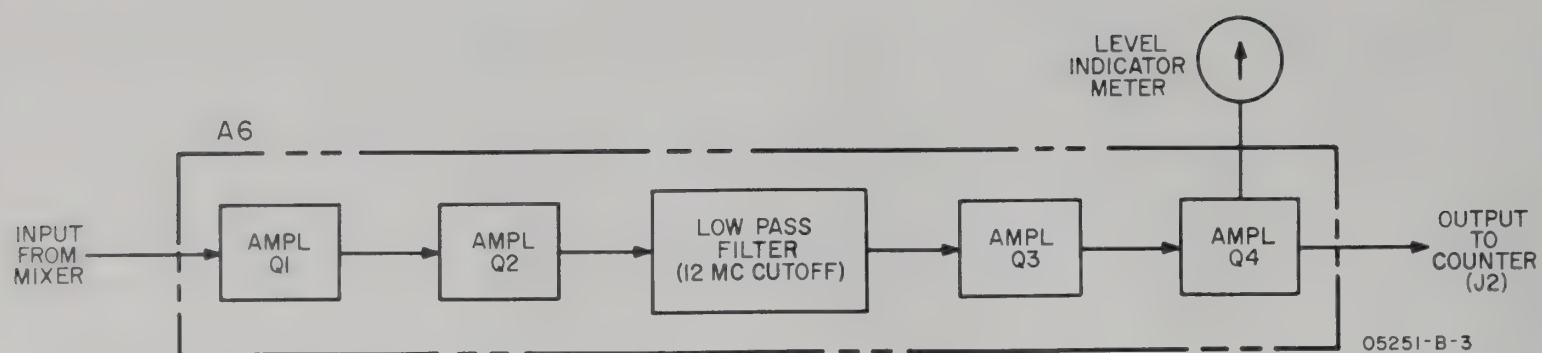


Figure IIA-2. Video Amplifier (A6)

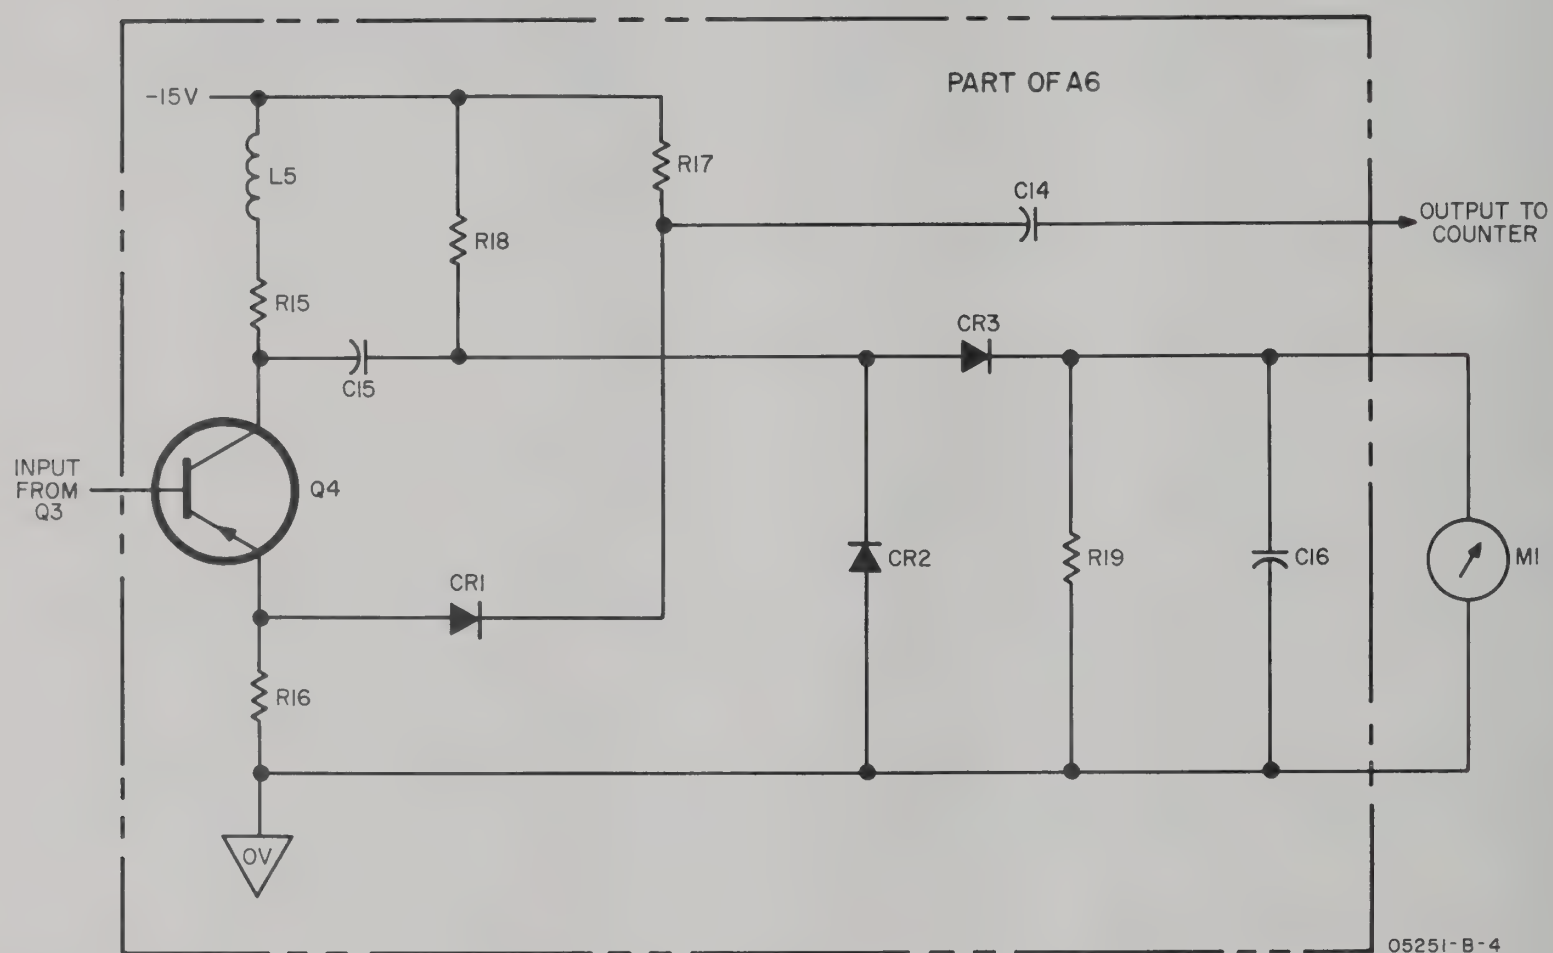


Figure IIA-3. Level Indicator Meter Circuit

e. Using RF Millivoltmeter, measure voltage at Test Point #13. Voltage should be between 100 mv and 130 mv. If not, change value of resistor A1R19 to change voltage to between 100 mv and 130 mv. If voltage is too high, increase value of A1R19. If voltage is too low, decrease value of A1R19. Repeat steps d and e after changing value of A1R19.

IIA-23. MECHANICAL ADJUSTMENT OF METER ZERO .

IIA-24. TRUE SIGNAL LEVEL INDICATION. Level indicator meter is adjusted at the factory for proper mechanical zero. However, normal aging of meter components may change indicated zero level. To insure accuracy of input signal level indication, periodic adjustment of meter zero may be necessary.

IIA-25. ZERO-SET. When meter is properly zero-set, pointer rests over the zero calibration mark at the left-hand end of meter scale when converter is (1) at normal operating temperature, (2) in normal operating position, and (3) without power. Proceed as follows:

a. Allow counter and converter to operate for one hour to permit meter movement to reach normal operating temperature.

b. Turn counter off and allow one minute for all capacitors to discharge.

c. Remove converter from counter to enable access to rear of meter.

d. Remove adhesive-backed-paper cover from meter zero-adjustment access hole on top-rear of meter.

e. Carefully insert small tool in access hole and engage adjustment fork.

f. Vary setting of adjustment fork until meter reads zero.

g. Remove tool and replace adhesive-backed paper cover on access hole. This completes meter zero adjustment procedure.

IIA-26. SENSITIVITY CHECK.

a. Turn counter power off, remove converter from counter, and reconnect to counter with Extension Cable, Φ 10506A.

b. Set VHF Signal Generator to 102 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Adjust controls as shown in Figure IIA-2.

d. Set converter mixing frequency control to 100 Mc. Counter should display approximately 2 Mc.

e. Using RF Millivoltmeter, measure output of converter at Test Point #13 (see Figure IIA-7). Voltage should be at least 100 mv.

f. Repeat above steps c, d, and e with VHF Generator frequency of 472 Mc and converter mixing frequency control set to 470 Mc. Converter output to counter, as measured by RF Millivoltmeter, should be at least 100 mv.

g. A similar check may be made at any frequency within the range of the Model 5253A. Converter output to counter should be at least 100 mv when difference frequency is between 100 kc and 12 Mc and converter is properly tuned.

IIA-27. METER ACCURACY CHECK.

a. Turn counter power off, remove converter from counter, and reconnect to counter with Extension Cable, Φ 10506A.

b. Set VHF Signal Generator to 102 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Set controls as shown in Figure IIA-1. Set converter mixing frequency control to 100 Mc. Counter should display approximately 2 Mc.

d. Vary output of VHF Signal Generator for converter level indicator to make meter read at red-green border.

e. Using RF Millivoltmeter, measure converter output to counter at Test Point #13. Voltage should be between 100 mv and 130 mv. If not, see Paragraph IIA-21 for meter calibration adjustment procedure.

IIA-28. LOW PASS FILTER CHECK.

a. Turn counter power off, remove converter from counter and reconnect to counter with Extension Cable, Φ 10506A.

b. Set VHF Signal Generator to 110 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Set controls as shown in Figure IIA-1. Set converter mixing frequency control to 100 Mc. Counter should display approximately 10 Mc.

d. Connect RF Millivoltmeter to Test Point #13. Vary output of VHF Signal Generator for RF Millivoltmeter reading of 100 mv. Note output level of VHF Signal Generator.

e. Set VHF Signal Generator to 115 Mc at same output level as noted in step d above. Converter output to counter, as shown on RF Millivoltmeter, should not exceed 50 mv. If converter output to counter is greater than 50 mv, see Paragraph IIA-20 for low pass filter adjustment procedure.

IIA-29. IN-CABINET PERFORMANCE CHECK.

a. Turn counter power off and install converter.

b. Set VHF Signal Generator to 102 Mc, CW, at 50 mv and connect to INPUT of converter.

c. Set controls as shown in Figure IIA-1. Counter should display approximately 2 Mc.

d. Set VHF Signal Generator to any frequency between 88 Mc and 512 Mc with output of 50 mv. Counter should display correct frequency at any frequency within this range.

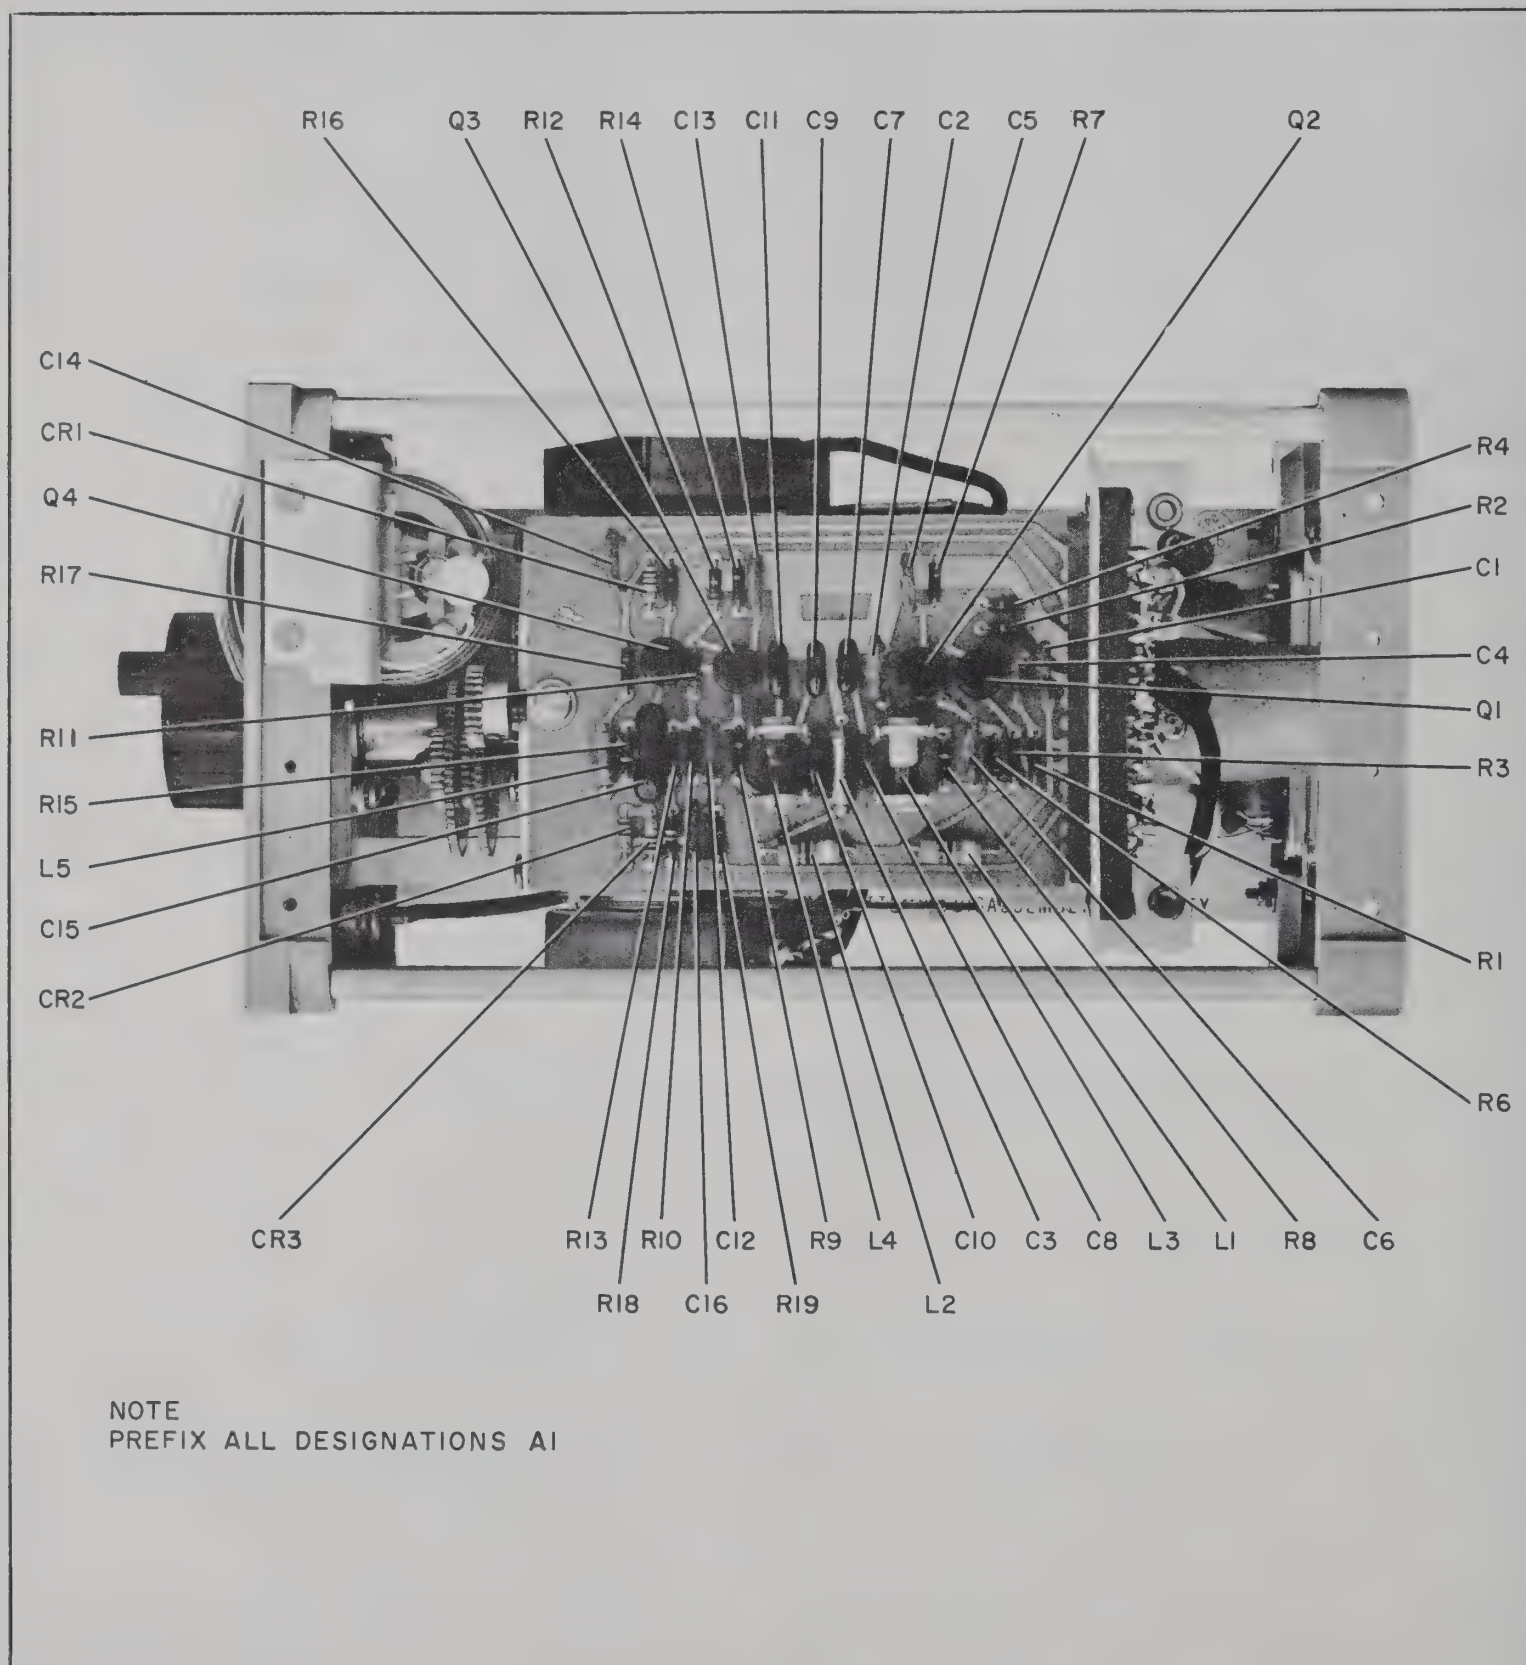


Figure IIA-4. Model 5253A, Top View

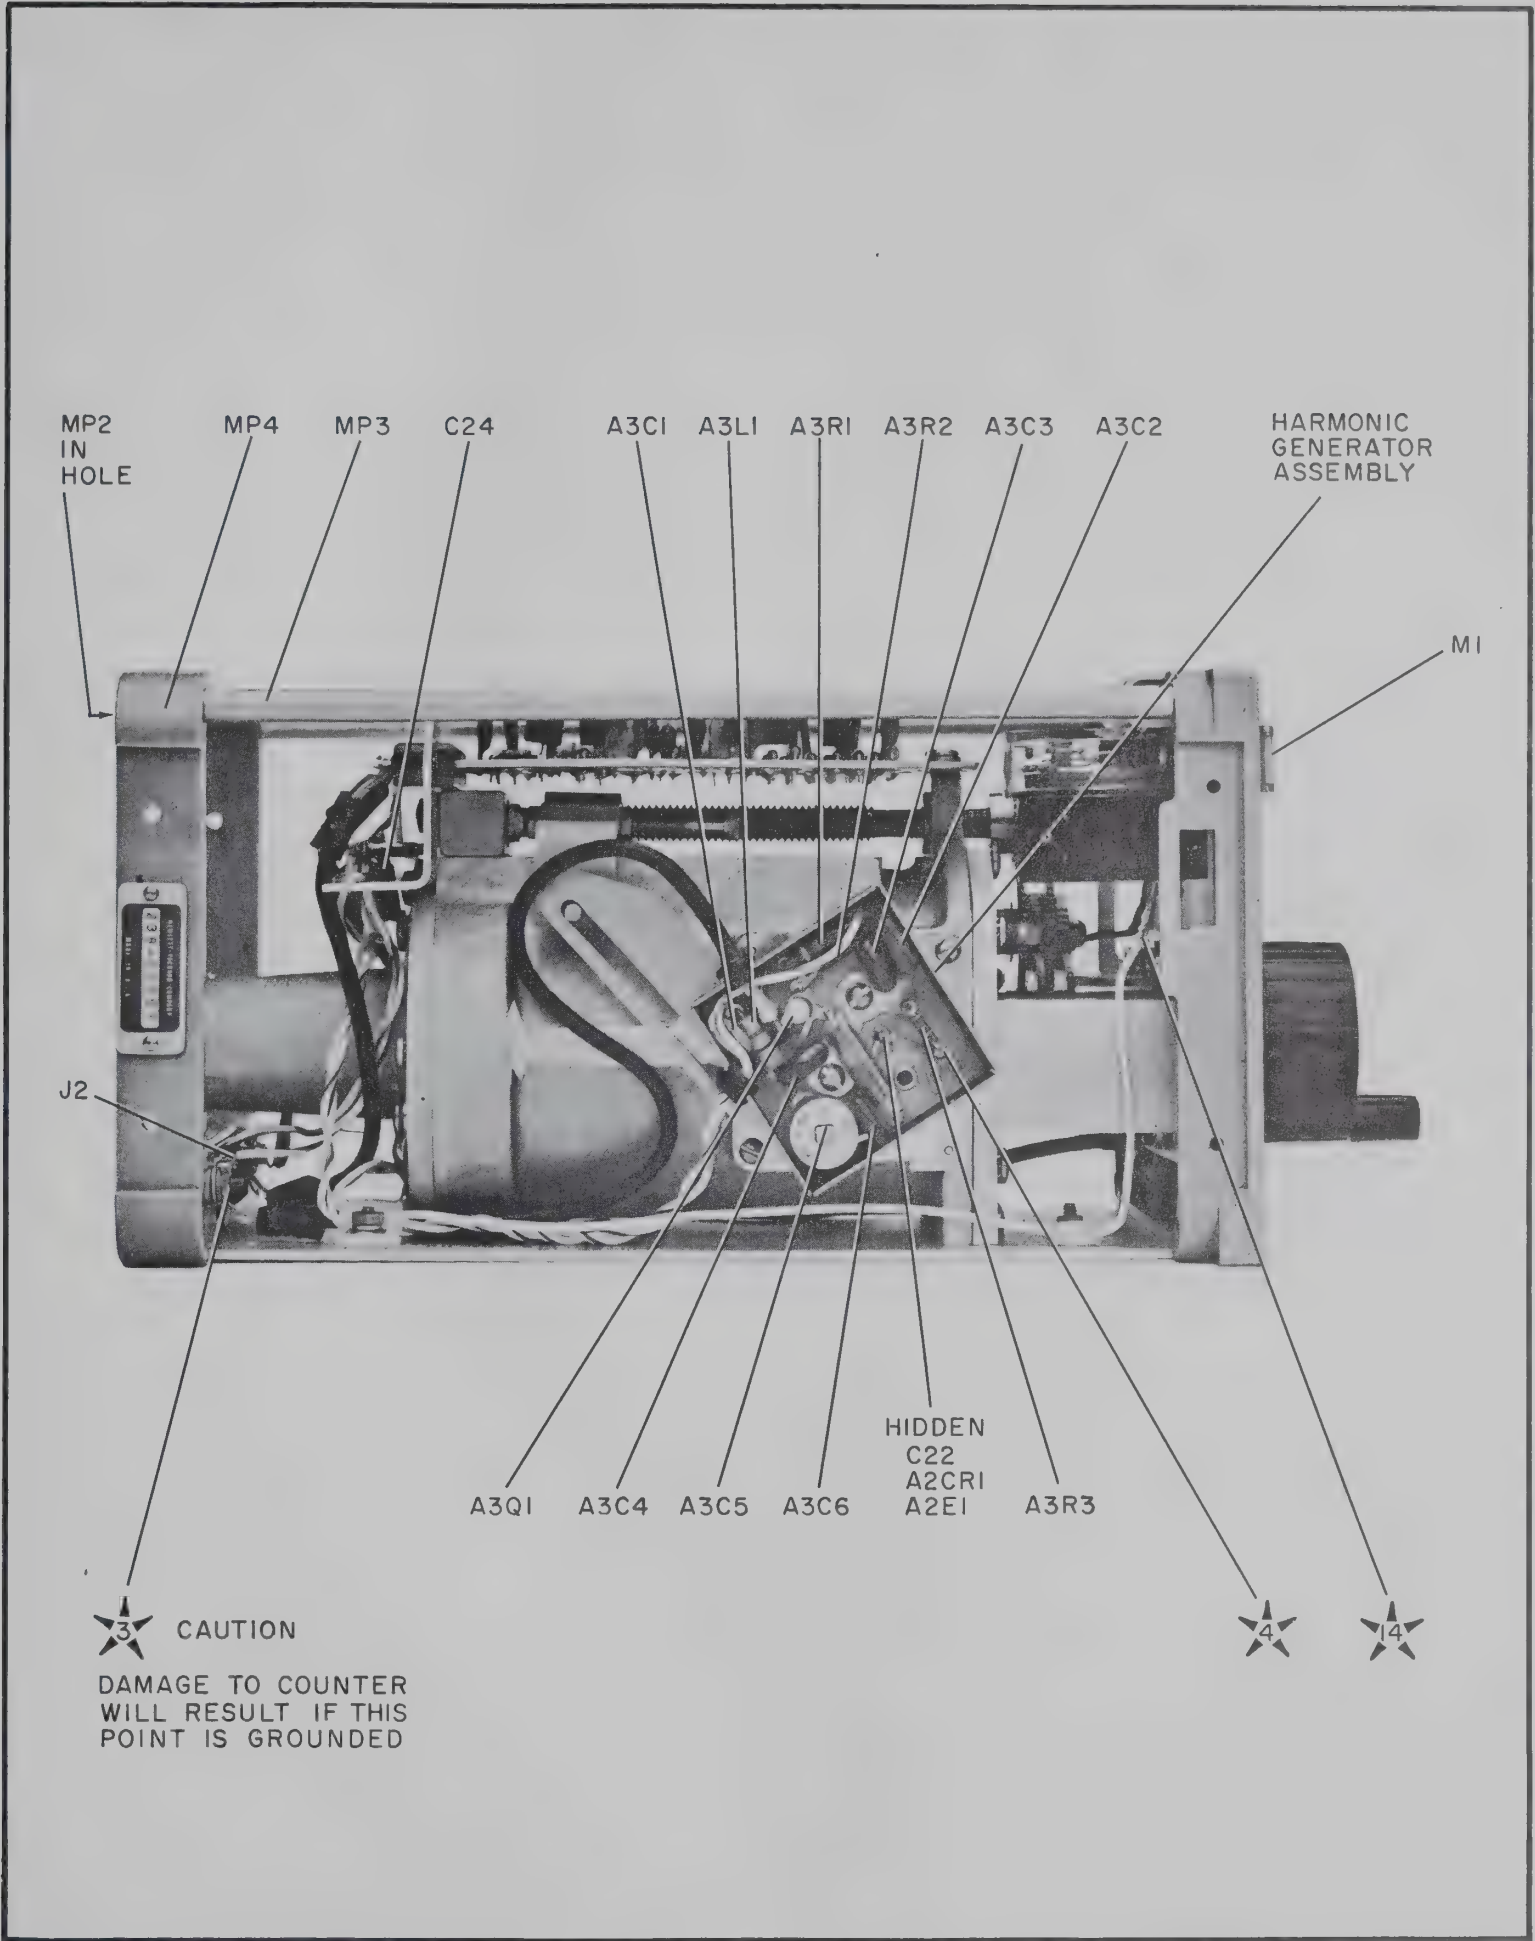


Figure IIA-5. Left Side View

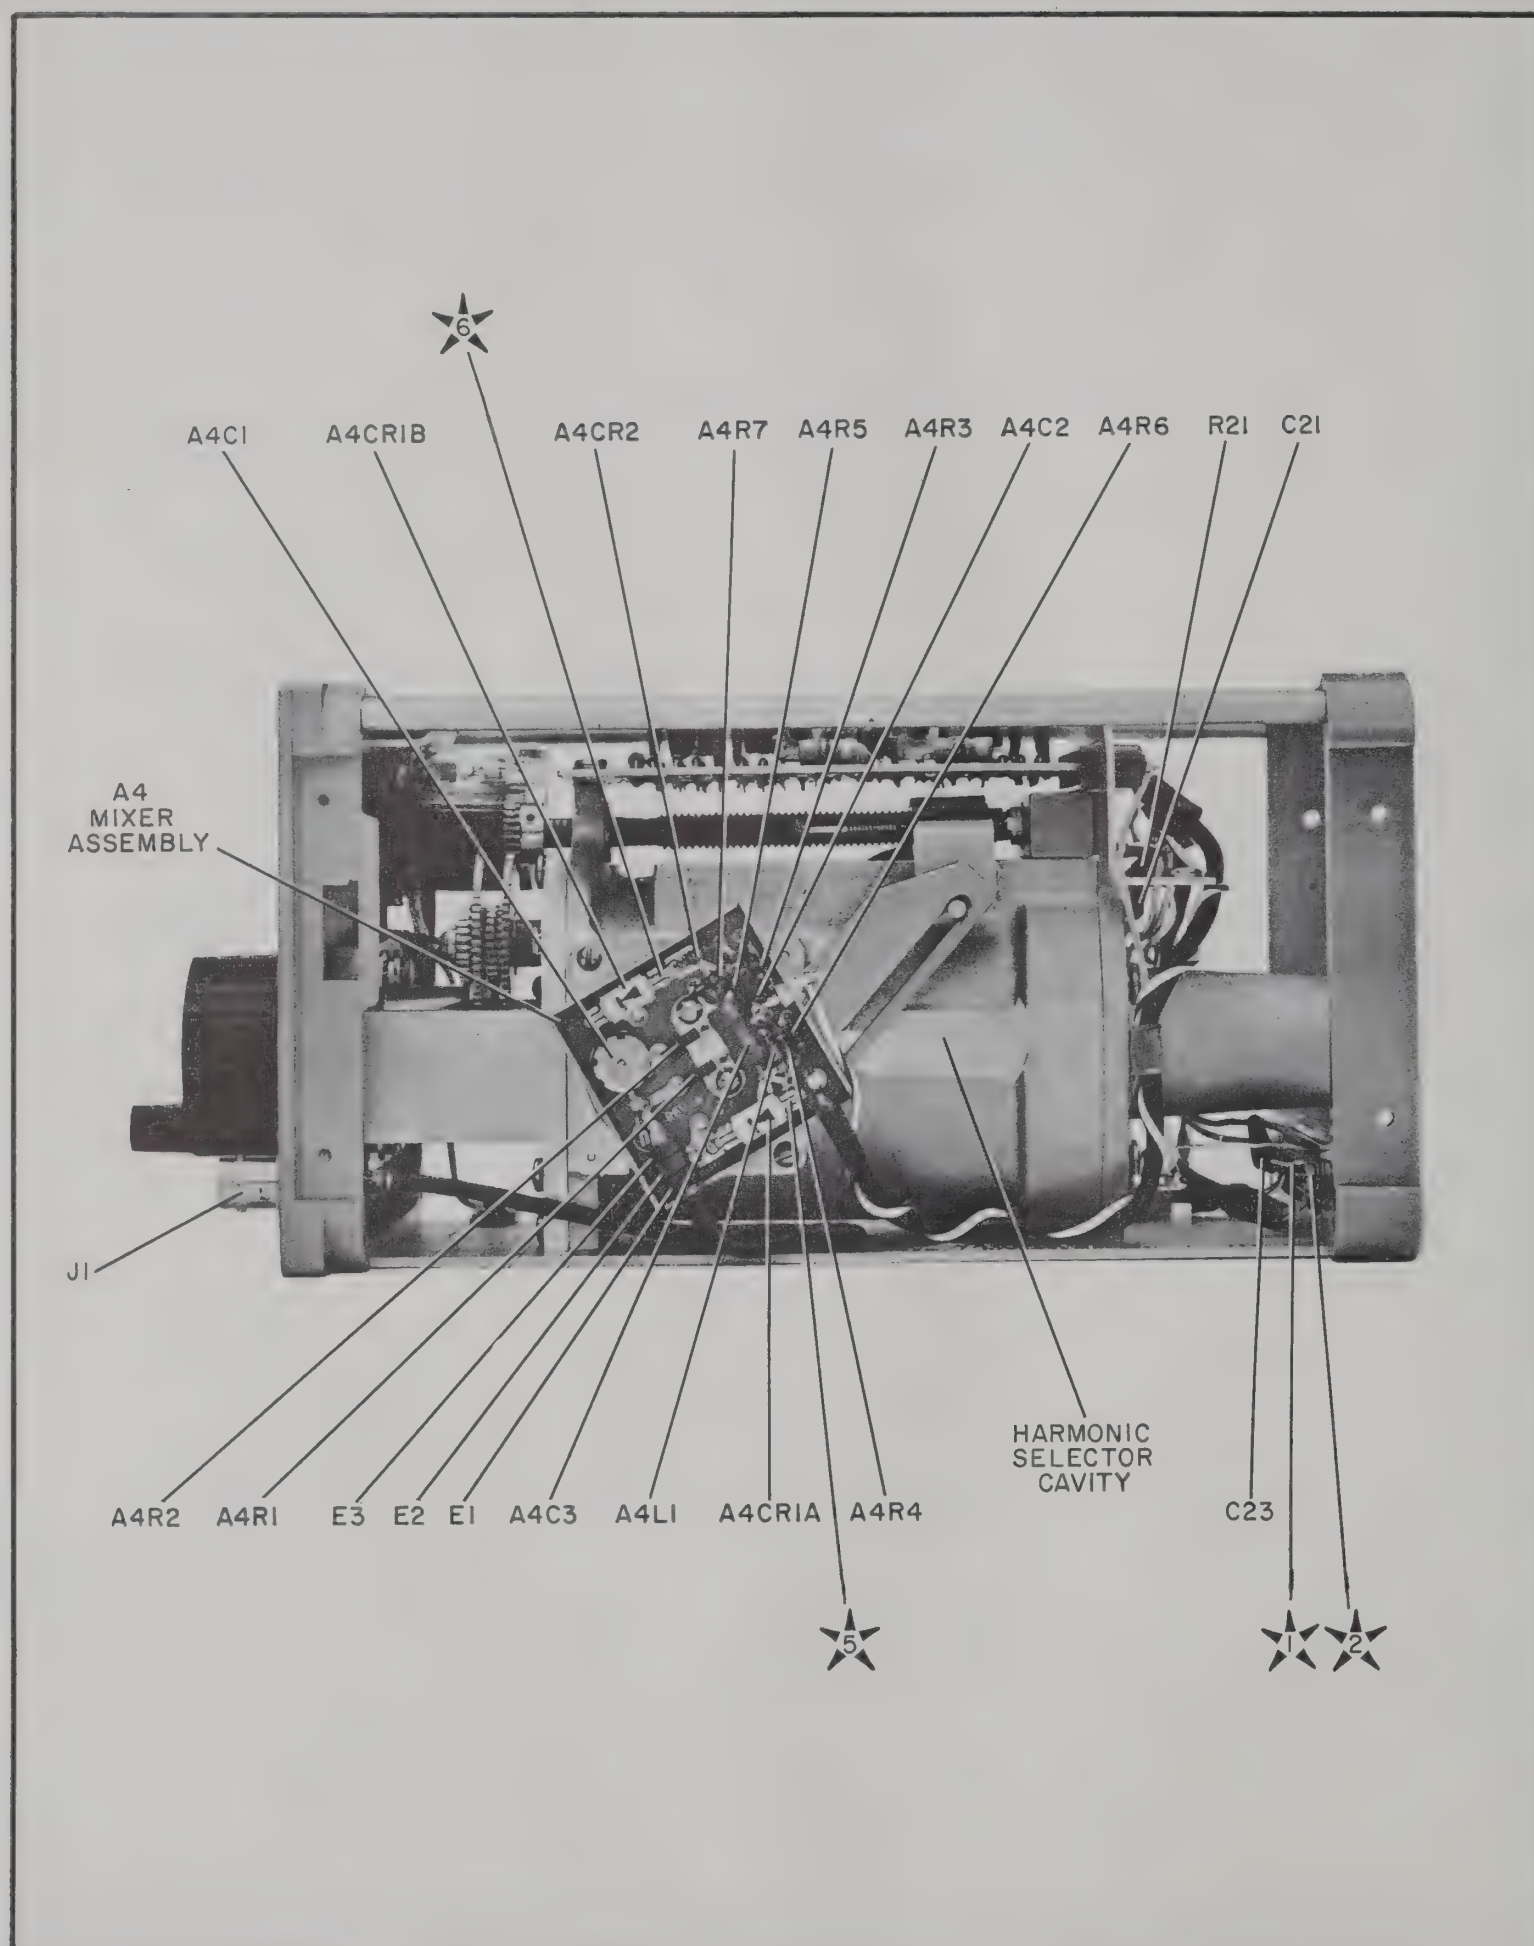


Figure IIA-6. Right Side View

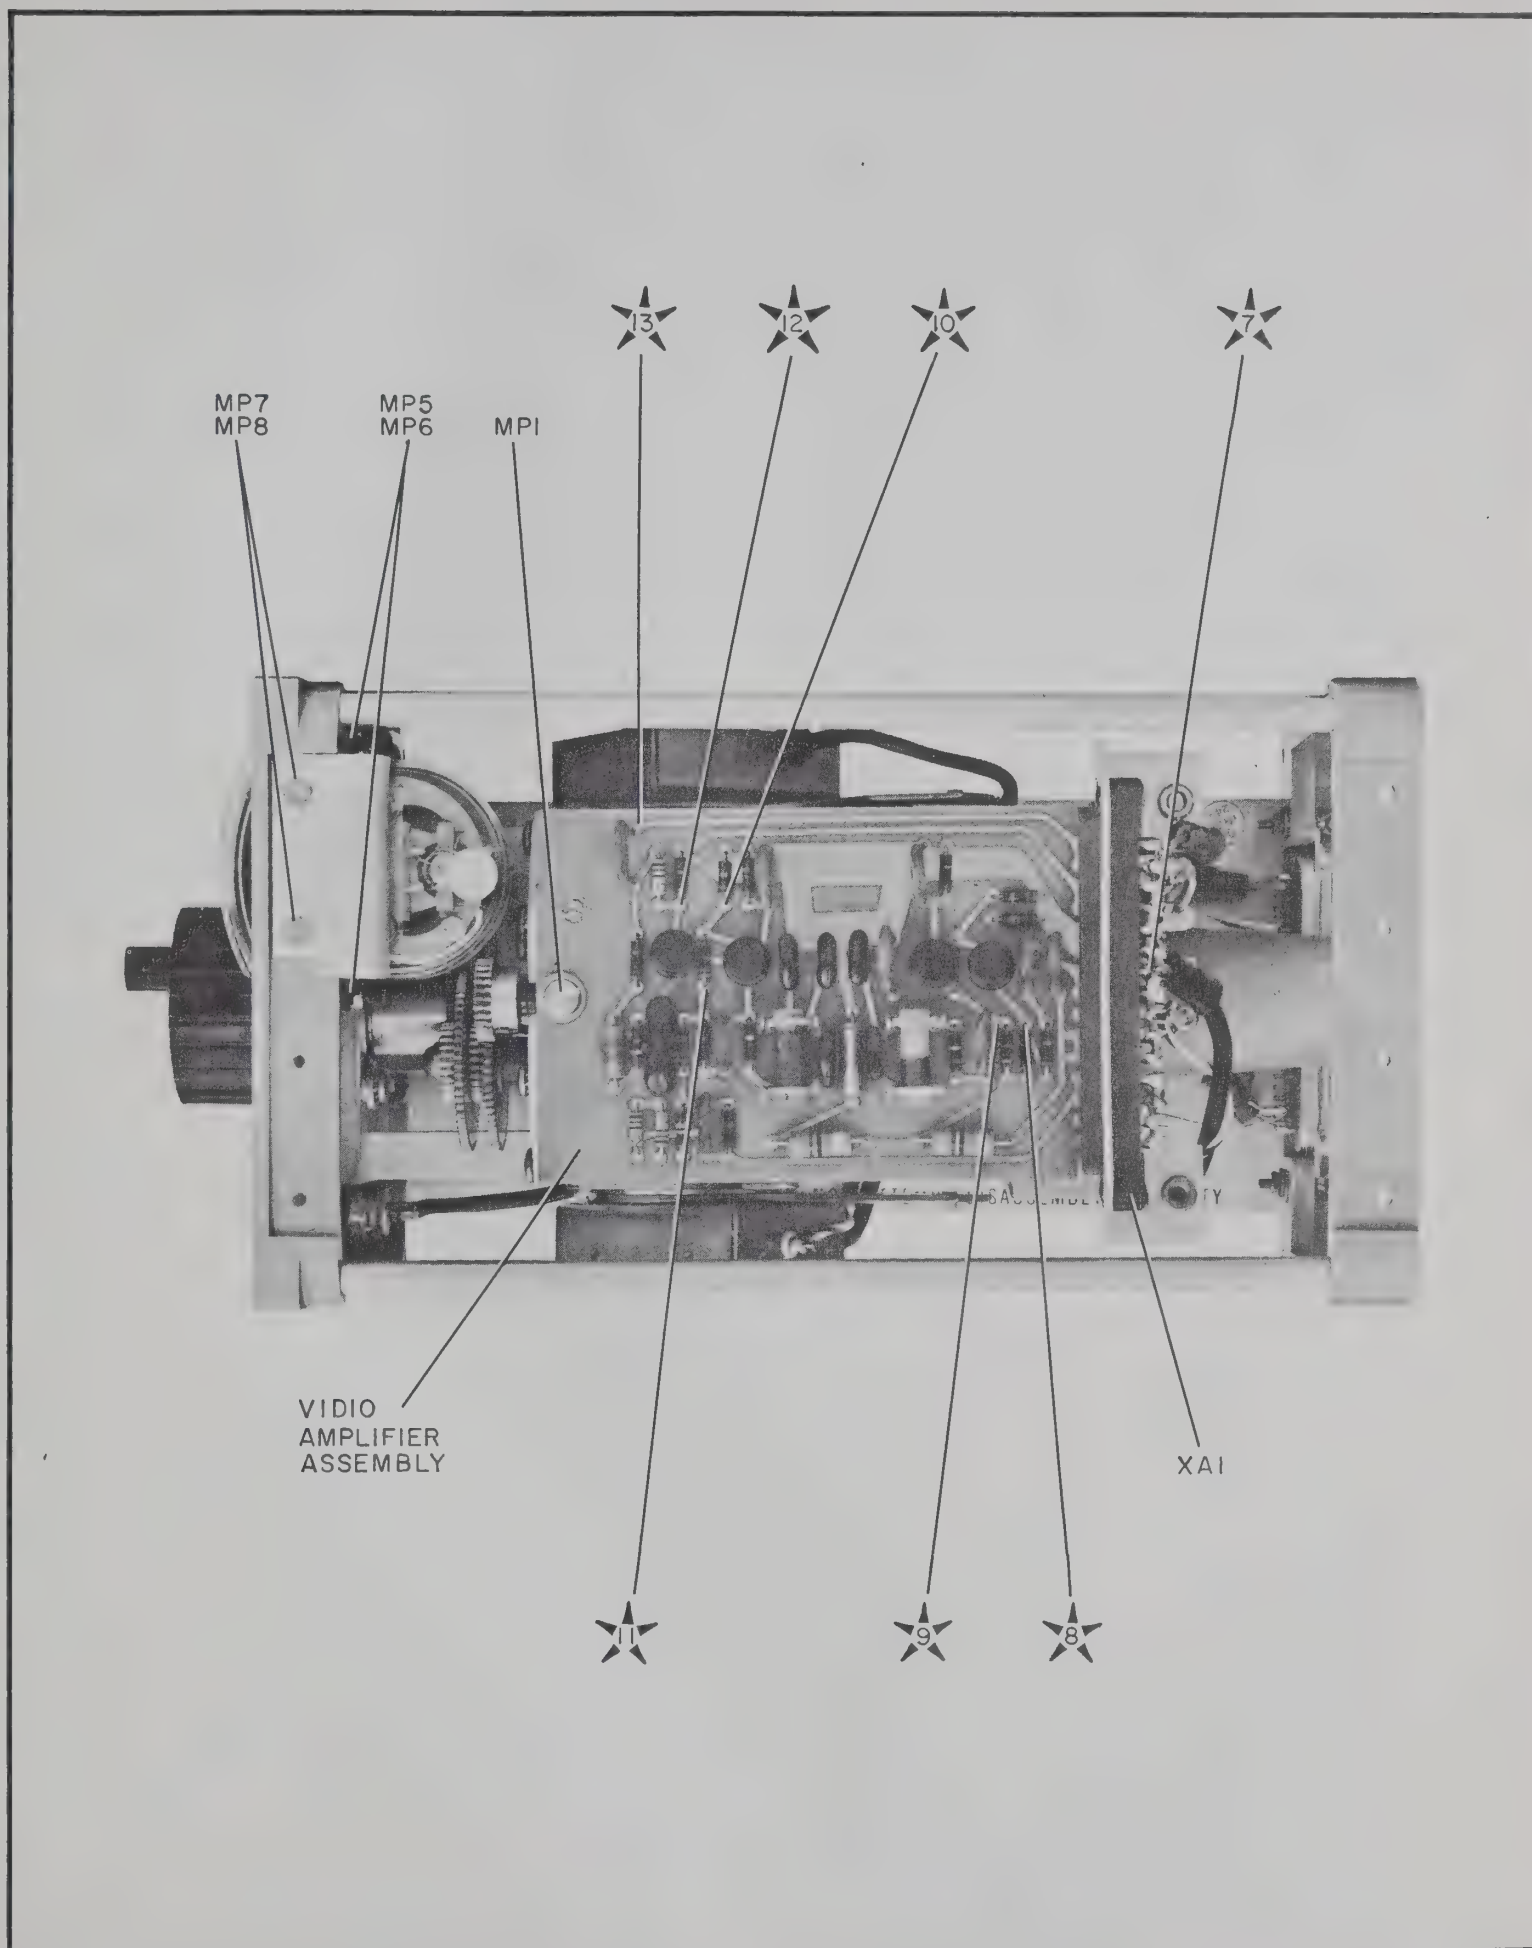


Figure IIA-7. Top View - Test Points

Table IIA-2. Troubleshooting Procedure

All voltages given are approximate and may vary from instrument to instrument because of variations in component characteristics.

TEST EQUIPMENT: hp Model 411A RF Millivoltmeter with hp 11022A (formerly 411A-21B) Pen Type Probe Tip,
 hp Model 412A DC VTVM

REMOVE hp 5253A FROM COUNTER; SELF-CHECK COUNTER	See counter manual for self-check procedure.
CONNECT hp 5253A TO COUNTER WITH EXTENSION CABLE, hp 10506A (formerly AC-16Y)	Extension cable available from hp ; see parts list.
① +20 VDC ② -15 VDC	Checks power supplied to plug-in from counter; see counter manual for power supply adjustment procedure.
③ + 6 VDC 2 VAC	Checks 10-Mc drive of harmonic generator.
④ + 2 VDC - 2 VAC	Checks generator diode drive. Voltages vary widely because of both the detuning effect of voltmeter probe and the variable value of A3R3. DC voltage may be either + or -, depending upon factory determined generator diode orientation.
⑤ +100 MV DC ⑥ +100 MV DC	Voltages vary widely because of diode characteristics. Voltages are 0 VDC when diode shorted, and +20 VDC when diode open. Voltages should be approximately equal because of matched characteristics.

CONNECT SIGNAL GENERATOR TO hp 5253A.
 SET GENERATOR TO 102 MC, CW, 100 MV.
 SET COUNTER CONTROLS AND 5253A TO
 MEASURE FREQUENCY OF INPUT SIGNAL.

⑦ 5 MV RMS	This voltage is total harmonic energy output of mixer and varies widely.
⑧ -6 VDC 15 MV RMS	Checks bias and amplification of A1Q1
⑨ -10 VDC 200 MV RMS	Checks bias and amplification of A1Q2
⑩ -4 VDC 15 MV RMS	General check of low pass filter section
⑪ -9 VDC 500 MV RMS	Checks bias and amplification of A1Q3
⑫ -8.5 VDC 300 MV RMS	Checks operation of A1Q4
⑬ 0 VDC 200 MV RMS	Checks operation of limiter, A1CR1
⑭ 0 MV DC WHEN METER READS AT LEFT END OF SCALE; 50 MV DC WHEN METER READS FULL SCALE; 15 MV DC WHEN TEST POINT #13 IS 100 MV RMS, AND METER READS AT RED-GREEN BORDER.	Checks accuracy of meter circuit in relation to output to counter

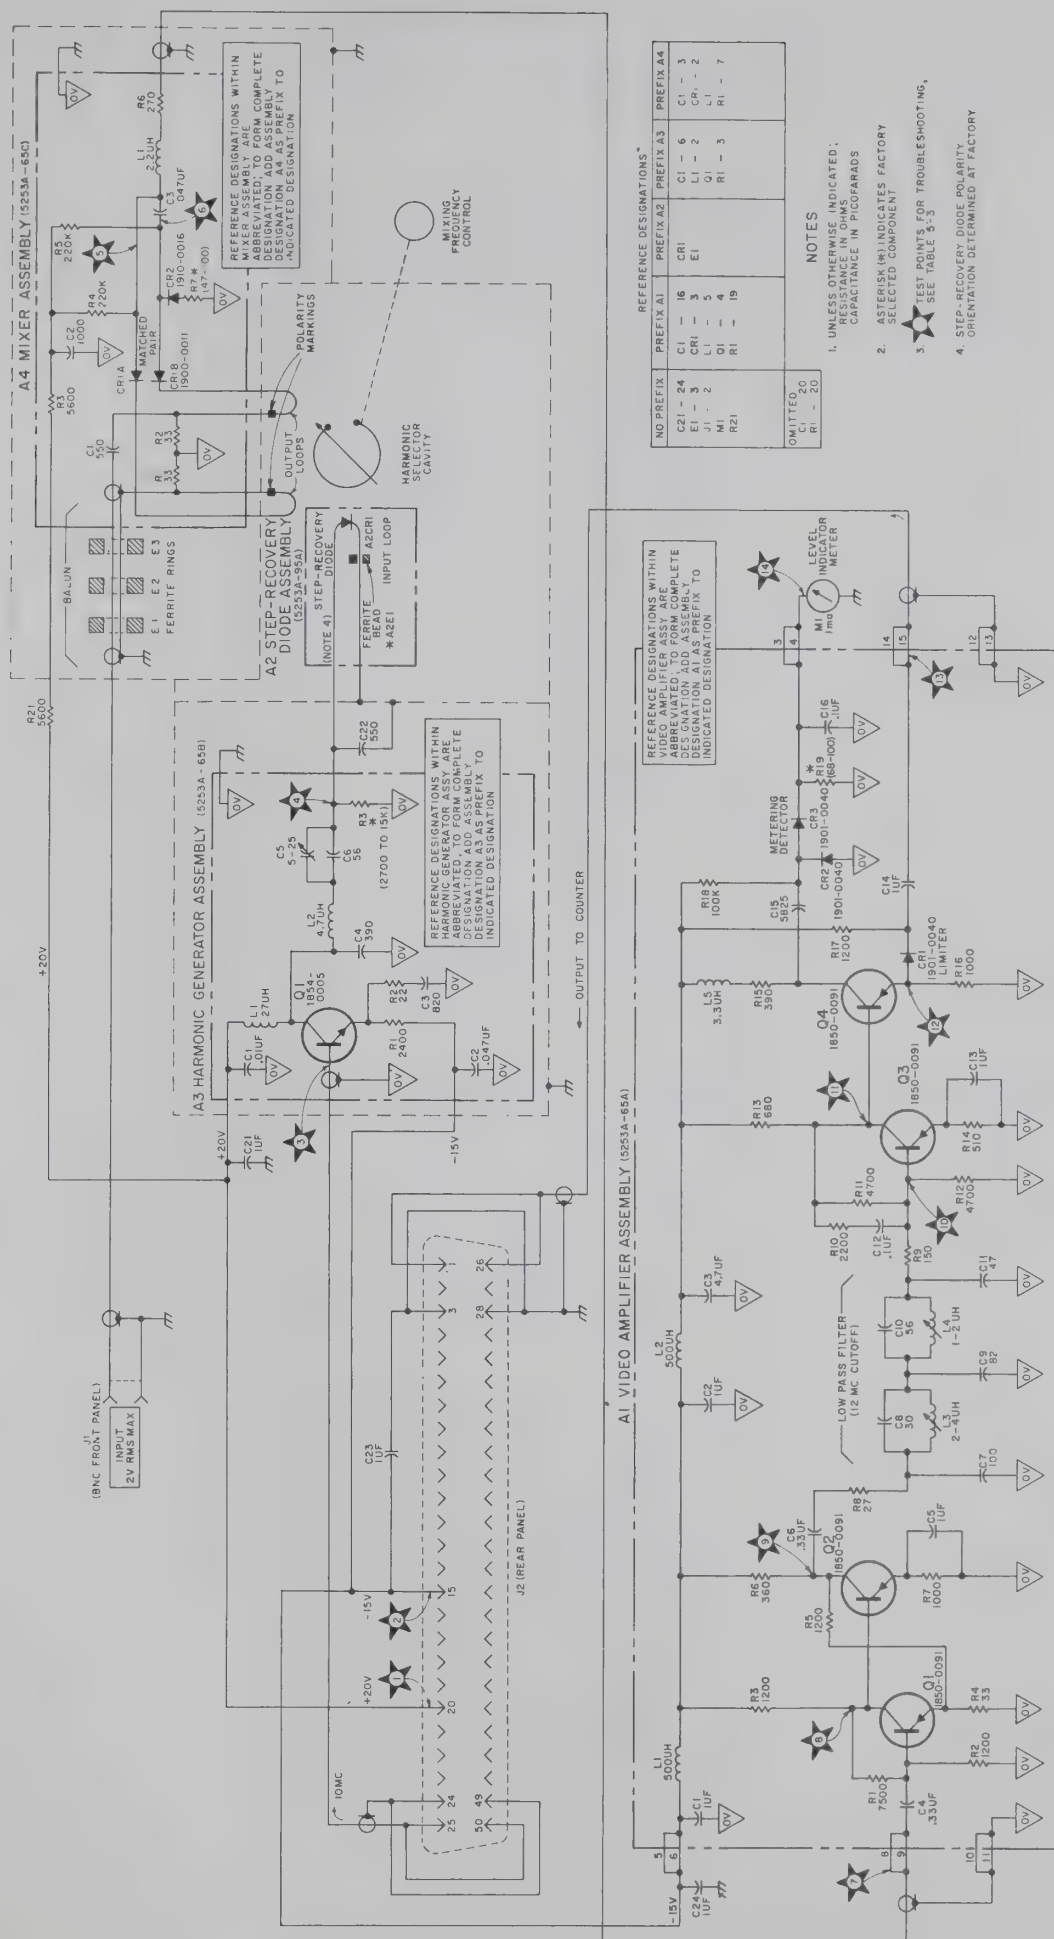


Figure IIA-8. Schematic Diagram

Table IIA-3. Reference Designation Index

Reference Designation	Stock No.	Description #	Note
A1	5253A-65A	ASSY:VIDEO AMPLIFIER	
A1C1	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
A1C2	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
A1C3	0180-0100	C:FXD ELECT TA 4.7 UF 10% 350VDCW	
A1C4	0160-0137	C:FXD CER 0.33 UF 20% 25VDCW	
A1C5	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
A1C6	0160-0137	C:FXD CER 0.33 UF 20% 25VDCW	
A1C7	0140-0176	C:FXD MICA 100 PF 2% 300VDCW	
A1C8	0140-0203	C:FXD MICA 30 PF 5% 500VDCW	
A1C9	0140-0193	C:FXD MICA 82 PF 5% 300VDCW	
A1C10	0140-0191	C:FXD MICA 56 PF 5% 300VDCW	
A1C11	0140-0204	C:FXD MICA 47 PF 5% NPO 500VDCW	
A1C12	0150-0121	C:FXD CER 0.1 UF +80-20% 50VDCW	
A1C13	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
A1C14	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
A1C15	0140-0189	C:FXD MICA 5825 PF 2% 300VDCW	
A1C16	0150-0121	C:FXD CER 0.1 UF +80-20% 50VDCW	
A1CR1	1901-0040	DIODE:SILICON	
A1CR2	1901-0040	DIODE:SILICON	
A1CR3	1901-0040	DIODE:SILICON	
A1L1	9140-0118	COIL:500MH 5%	
A1L2	9140-0118	COIL:500 MH 5%	
A1L3	9140-0126	COIL:VAR 1.76-4.02 UH	
A1L4	9140-0125	COIL:VAR 0.9-1.9 UH	
A1L5	9140-0111	COIL:FXD RF 3.3 UH	
A1Q1	1850-0091	TRANSISTOR:GERMANIUM PNP 2N2048	
A1Q2	1850-0091	TRANSISTOR:GERMANIUM PNP 2N2048	
A1Q3	1850-0091	TRANSISTOR:GERMANIUM PNP 2N2048	
A1Q4	1850-0091	TRANSISTOR:GERMANIUM PNP 2N2048	
A1R1	0683-7525	R:FXD COMP 7500 OHM 5% 1/4W	
A1R2	0683-1225	R:FXD COMP 1200 OHM 5% 1/4W	
A1R3	0683-1225	R:FXD COMP 1200 OHM 5% 1/4W	
A1R4	0683-3305	R:FXD COMP 33 OHM 5% 1/4W	
A1R5	0683-1225	R:FXD COMP 1200 OHM 5% 1/4W	
A1R6	0683-3615	R:FXD COMP 360 OHM 5% 1/4W	
A1R7	0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	
A1R8	0684-2701	R:FXD COMP 27 OHM 10% 1/4W	
A1R9	0684-1511	R:FXD COMP 150 OHM 10% 1/4W	
A1R10	0683-2225	R:FXD COMP 2.2K OHM 5% 1/4W	
A1R11	0683-4725	R:FXD COMP 4700 OHM 5% 1/4W	
A1R12	0683-4725	R:FXD COMP 4700 OHM 5% 1/4W	
A1R13	0683-6815	R:FXD COMP 680 OHM 5% 1/4W	
A1R14	0683-5115	R:FXD COMP 510 OHM 5% 1/4W	
A1R15	0683-3915	R:FXD COMP 390 OHM 5% 1/4W	
A1R16	0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	
A1R17	0683-1225	R:FXD COMP 1200 OHM 5% 1/4W	
A1R18	0684-1041	R:FXD COMP 100K OHM 10% 1/4W	
A1R19	0683-8205	R:FXD COMP 82 OHM 5% 1/4W	
		FACTORY SELECTED PART;TYPICAL VALUE GIVEN	

See list of abbreviations in introduction to this section

Table IIA-3. Reference Designation Index (Cont'd)

Reference Designation	Stock No.	Description #	Note
A2	5253A-95A	ASSY:STEP RECOVERY DIODE NOT RECOMMENDED FOR FIELD REPLACEMENT	
A2CR1	1901-0120	DIODE:STEP RECOVERY,SPECIALLY SELECTED PART.	
A2E1		CORE:TOROID,SPECIALLY SELECTED PART.	
A3	5253A-65B	ASSY:HARMONIC GENERATOR	
A3C1	0150-0093	C:FXD CER 0.01 UF +80-20% 100VDCW	
A3C2	0170-0094	C:FXD MY 0.047 UF 20% 50VDCW	
A3C3	0140-0151	C:FXD MYCA 820 PF 2% 300VDCW	
A3C4	0140-0200	C:FXD MICA 390 PF 5% 300VDCW	
A3C5	0130-0016	C:VAR CER 5-25 PF NPO	
A3C6	0140-0191	C:FXD MICA 56 PF 5% 300VDCW	
A3L1	9140-0107	COIL:FXD RF 27 UH	
A3L2	9140-0025	COIL:FXD RF 4.7 UH	
A3R1	0686-2425	R:FXD COMP 2400 OHM 5% 1/2W	
A3R2	0683-2205	R:FXD COMP 22 OHM 5% 1/4W	
A3R3	0683-5625	R:FXD COMP 5600 OHM 5% 1/4W FACTORY SELECTED PART;TYPICAL VALUE GIVEN	
A4	5253A-65C	ASSY:MIXER DOES NOT CONTAIN A4CR1, ORDER SEPARATELY	
A4C1	0140-0069	C:FXD MICA 550 PF 10% 500VDCW	
A4C2	0150-0050	C:FXD CER 1000 PF 600VDCW	
A4C3	0170-0040	C:FXD MY 0.047 UF 10% 200VDCW	
A4CR1	1900-0011	DIODE:SILICON 1N4168M, MATCHED PAIR	
A4CR2	1910-0016	DIODE:GERMANIUM 1 MICROSEC 60 WIV	
A4L1	9140-0142	COIL:FXD RF 2.2 UH	
A4R1	0683-3305	R:FXD COMP 33 OHM 5% 1/4W	
A4R2	0683-3305	R:FXD COMP 33 OHM 5% 1/4W	
A4R3	0684-5621	R:FXD COMP 5.6K OHM 10% 1/4W	
A4R4	0683-2245	R:FXD COMP 220K OHM 5% 1/4W	
A4R5	0683-2245	R:FXD COMP 220K OHM 5% 1/4W	
A4R6	0683-2715	R:FXD COMP 270 OHM 5% 1/4W	
A4R7	0683-6205	R:FXD COMP 62 OHM 5% 1/4W FACTORY SELECTED APRT;TYPICAL VALUE GIVEN	
C21	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
C22	0140-0069	C:FXD MICA 550 PF 10% 500VDCW	
C23	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
C24	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
E1	9170-0059	CORE:TOROID	
E2	9170-0059	CORE:TOROID	
E3	9170-0059	CORE:TOROID	
J1	1250-0102	CONNECTOR:BNC	
J2	1251-0099	CONNECTOR:50-PIN MINIATURE	
R21	0684-5621	R:FXD COMP 5600 OHM 10% 1/4W	
XA1	1251-0135	CONNECTOR:15 CONTACTS	

See list of abbreviations in introduction to this section

Table IIA-4. Replaceable Parts

Stock No.	Description #	Mfr.	Mfr. Part No.	TQ
5253A-65A	ASSY:VIDEO AMPLIFIER	28480	5253A-65A	1
5253A-65B	ASSY:HARMONIC GENERATOR	28480	5253A-65B	1
5253A-65C	ASSY:MIXER	28480	5253A-65C	1
5253A-95A	ASSY:STEP RECOVERY DIODE	28480	5253A-95A	1
0130-0016	C:VAR CER 5-25 PF NPO	28480	0130-0016	1
0140-0069	C:FXD MICA 550 PF 10% 500VDCW	00853	TYPE M100 E10	2
0140-0151	C:FXD MICA 820 PF 2% 300VDCW	04062	DM15F 821G	1
0140-0176	C:FXD MICA 100 PF 2% 300VDCW	04062	DM15F 101G 300V	1
0140-0189	C:FXD MICA 5825 PF 2% 300VDCW	04062	DM20F 5825G	1
0140-0191	C:FXD MICA 56 PF 5% 300VDCW	04062	DM15E 560J 300V	2
0140-0193	C:FXD MICA 82 PF 5% 300VDCW	04062	DM15E 820J 300V	1
0140-0200	C:FXD MICA 390 PF 5% 300VDCW	04062	DM15F 391J 300V	1
0140-0203	C:FXD MICA 30 PF 5% 500VDCW	04062	DM15E 300J 500V	1
0140-0204	C:FXD MICA 47 PF 5% NPO 500VDCW	04062	DM15E 470J	1
0150-0050	C:FXD CER 1000 PF 600VDCW	18486	TYPE E	1
0150-0093	C:FXD CER 0:01 UF +80-20% 100VDCW	91418	TA	1
0150-0121	C:FXD CER 0:1 UF +80-20% 50VDCW	56289	5C50A	2
0160-0127	C:FXD CER 1:0 UF 20% 25VDCW	56289	5C13	8
0160-0137	C:FXD CER 0.33 UF 20% 25VDCW	56289	5C10	2
0170-0040	C:FXD MY 0:047 UF 10% 200VDCW	56289	192P47392	1
0170-0094	C:FXD MY 0.047 UF 20% 50VDCW	84411	TYPE 602	1
0180-0100	C:FXD ELECT TA 4.7 UF 10% 35VDCW	56289	1500475X9035B2	1
0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	01121	CB 1025	2
0683-1225	R:FXD COMP 1200 OHM 5% 1/4W	01121	CB 1225	4
0683-2205	R:FXD COMP 22 OHM 5% 1/4W	01121	CB 2205	1
0683-2225	R:FXD COMP 2.2K OHM 5% 1/4W	01121	CB 2225	1
0683-2245	R:FXD COMP 220K OHM 5% 1/4W	01121	CB 2245	2
0683-2715	R:FXD COMP 270 OHM 5% 1/4W	01121	CB 2715	1
0683-3305	R:FXD COMP 33 OHM 5% 1/4W	01121	CB 3305	3
0683-3615	R:FXD COMP 360 OHM 5% 1/4W	01121	CB 3615	1
0683-3915	R:FXD COMP 390 OHM 5% 1/4W	01121	CB 3915	1
0683-4725	R:FXD COMP 4700 OHM 5% 1/4W	01121	CB 4725	2
0683-5115	R:FXD COMP 510 OHM 5% 1/4W	01121	CB 5115	1
0683-5625	R:FXD COMP 5600 OHM 5% 1/4W	01121	CB 5625	1
0683-6205	R:FXD COMP 62 OHM 5% 1/4W	01121	CB 6205	1
0683-6815	R:FXD COMP 680 OHM 5% 1/4W	01121	CB 6815	1
0683-7525	R:FXD COMP 7500 OHM 5% 1/4W	01121	CB 7525	1
0683-8205	R:FXD COMP 82 OHM 5% 1/4W	01121	CB 8205	1
0684-1041	R:FXD COMP 100K OHM 10% 1/4W	01121	CB 1041	1
0684-1511	R:FXD COMP 150 OHM 10% 1/4W	01121	CB 1511	1
0684-2701	R:FXD COMP 27 OHM 10% 1/4W	01121	CB 2701	1
0684-5621	R:FXD COMP 5600 OHM 10% 1/4W	01121	CB 5621	2
0686-2425	R:FXD COMP 2400 OHM 5% 1/2W	01121	EB 2425	1
1250-0102	CONNECTOR:BNC	91737	1250-0102	1
1251-0099	CONNECTOR:50-PIN MINIATURE	02660	57-10500	1
1251-0135	CONNECTOR:15-CONTACTS	95354	SD 615UR	1
1850-0091	TRANSISTOR:GERMANIUM PNP 2N2048	87216	2N2048	4
1900-0011	DIODE:SILICON 1N4168M MATCHED PAIR	93332	1N4168M	1
1901-0040	DIODE:SILICON	28480	1901-0040	3
1910-0016	DIODE:GERMANIUM 1 MICROSEC 60 WIV	28480	1910-0016	1
9140-0025	COIL:FXD RF 4.7 UH	28480	9140-0025	1
9140-0107	COIL:FXD RF 27 UH	28480	9140-0107	1
9140-0111	COIL:FXD RF 3.3 UH	28480	9140-0111	1
9140-0118	COIL:500 MH 5%	99800	2500-14	2
9140-0125	COIL:VAR 0.9-1.9 UH	28480	9140-0125	1
9140-0126	COIL:VAR 1.76-4.02 UH	28480	9140-0126	1
9140-0142	COIL:FXD RF 2.2 UH	28480	9140-0142	1
9170-0059	CORE:TOROID	02114	396T125-102	3

See list of abbreviations in introduction to this section

SALES AND SERVICE OFFICES

UNITED STATES and CANADA

ALABAMA

Huntsville, 35802
2003 Byrd Spring Rd. S.W.
(205) 881-4591
TWX: 510-579-2204

ALASKA

Bellevue, Wash. 98004
11656 N.E. 8th Street
(206) 454-3971
TWX: 910-443-2303

ARIZONA

Scottsdale, 85251
3009 No. Scottsdale Rd.
(602) 945-7601
TWX: 602-949-0111

Tucson, 85716
232 So. Tucson Blvd.
(602) 623-2564
TWX: 602-792-2759

CALIFORNIA

North Hollywood, 91604
3939 Lankershim Blvd.
(213) 877-1282 and 766-3811
TWX: 910-499-2170

Sacramento, 95821
2591 Carlsbad Ave.
(916) 482-1463
TWX: 916-444-8683

San Diego, 92106
1055 Shafter Street
(714) 223-8103
TWX: 714-276-4263

Palo Alto, 94303
1101 Embarcadero Rd.
(415) 327-6500
TWX: 910-373-1280

COLORADO

Englewood, 80110
7965 East Prentice
(303) 771-3455
TWX: 910-935-0705

CONNECTICUT

Middletown, 06457
589 Saybrook Rd.
(203) 346-6611
TWX: 710-428-2036

FLORIDA

Miami, 33125
2907 Northwest 7th St.
(305) 635-6461

Orlando, 32803
621 Commonwealth Ave.
(305) 425-5541
TWX: 305-841-2568

St. Petersburg, 33708
410-150th Ave., Madeira Beach
(813) 391-0211 and 391-1829
TWX: 813-391-0666

GEORGIA

Atlanta, 30305
3110 Maple Drive, N.E.
(404) 233-1141
TWX: 810-751-3283

HAWAII

North Hollywood, Calif. 91604
3939 Lankershim Blvd.
(213) 877-1282
TWX: 910-499-2170

ILLINOIS

Skokie, 60076
5500 Howard Street
(312) 677-0400
TWX: 910-223-3613

INDIANA

Indianapolis, 46205
3919 Meadows Dr.
(317) 546-4891
TWX: 317-635-4300

LOUISIANA

New Orleans
(504) 522-4359

MARYLAND

Baltimore, 21207
6660 Security Blvd.
(301) 944-5400
TWX: 710-862-0850

Rockville, 20852
12303 Twinbrook Pkwy.
(301) 427-7560
TWX: 710-828-9684

MASSACHUSETTS

Burlington, 01803
Middlesex Turnpike
(617) 272-9000
TWX: 710-332-0382

MICHIGAN

Southfield, 48076
24315 Northwestern Hwy.
(313) 353-9100
TWX: 313-357-4425

MINNESOTA

St. Paul, 55114
2459 University Ave.
(612) 646-7881
TWX: 910-563-3734

MISSOURI

Kansas City, 64114
9208 Wyoming Place
(816) 333-2445
TWX: 910-771-2087

St. Louis, 63144
2812 South Brentwood Blvd.
(314) 644-0220
TWX: 910-760-1670

NEW JERSEY

Eatontown, 07724
(201) 747-1060

Englewood, 07631
391 Grand Avenue
(201) 567-3933
TWX: 510-230-9709

NEW MEXICO

Albuquerque, 87108
6501 Lomas Blvd., N.E.
(505) 255-5586
TWX: 910-989-1655

Las Cruces, 88001
114 S. Water Street
(505) 526-2486
TWX: 910-983-0550

NEW YORK

New York, 10021
236 East 75th Street
(212) 879-2023
TWX: 710-581-4376

Rochester, 14623
39 Saginaw Drive
(716) 473-9500
TWX: 510-253-5981

Poughkeepsie, 12601
82 Washington Street
(914) 454-7330
TWX: 914-452-7425

Syracuse, 13211
5858 East Molloy Rd.
(315) 454-2486
TWX: 710-541-0482

Endicott, 13764
1219 Campville Rd.
(607) 754-0050
TWX: 510-252-0890

NORTH CAROLINA

High Point, 27262
1923 N. Main Street
(919) 882-6873
TWX: 510-926-1516

OHIO

Cleveland, 44129
5579 Pearl Road
(216) 884-9209
TWX: 216-888-0715

Dayton, 45409
1250 W. Dorothy Lane
(513) 298-0351
TWX: 513-944-0090

OKLAHOMA

Oklahoma City
(405) 235-7062

PENNSYLVANIA

Camp Hill
(717) 737-6791

West Conshohocken, 19428
144 Elizabeth Street
(215) 248-1600 and 828-6200
TWX: 518-660-8715

Monroeville, 15146
Monroe Complex
Building 2
Suite 2
Moss Side Blvd.
(412) 271-5227
TWX: 710-797-3650

TEXAS

Dallas, 75209
P.O. Box 7166, 3605 Inwood Rd.
(214) 357-1881
TWX: 910-861-4081

Houston, 77027
P.O. Box 22813, 4242 Richmond Ave.
(713) 667-2407
TWX: 713-571-1353

UTAH

Salt Lake City, 84115
1482 Major St.
(801) 486-8166
TWX: 801-521-2604

VIRGINIA

Richmond, 23230
2112 Spencer Road
(703) 282-5451
TWX: 710-956-0157

WASHINGTON

Bellevue, 98004
11656 N.E. 8th St.
(206) 454-3971
TWX: 910-443-2303

GOVERNMENT CONTRACTING OFFICE

San Antonio, Texas 78226
Hewlett-Packard
Contract Marketing Division
225 Billy Mitchell Road
(512) 434-4171
TWX: 512-571-0955

CANADA

Montreal, Quebec
Hewlett-Packard (Canada) Ltd.
8270 Mayrand Street
(514) 735-2273
TWX: 610-421-3484
Telex: 01-2819

Ottawa, Ontario
Hewlett-Packard (Canada) Ltd.
1762 Carling Avenue
(613) 722-4223
TWX: 610-562-1952

Toronto, Ontario
Hewlett-Packard (Canada) Ltd.
1415 Lawrence Avenue West
(416) 249-9196
TWX: 610-492-2382

Vancouver, B.C.
Hewlett-Packard (Canada) Ltd.
2184 W. Broadway
(604) 738-7520
TWX: 610-922-5059

SALES AND SERVICE OFFICES INTERNATIONAL - Electronic Equipment

ARGENTINA

Mauricio A. Suarez
Telecomunicaciones
Carlos Calvo 224
Buenos Aires
Tel. (30-6312) (34-9087)

AUSTRALIA

Sample Electronics (Vic) Pty., Ltd.
9-11 Cremorne Street
Richmond E.1, Victoria
Tel. 42-4757

Sample Electronics (N.S.W.) Pty, Ltd.
4 Grose Street
Glebe, New South Wales
Tel. 69-6338

AUSTRIA

Unilabor H.m.b.H.
Wissenschaftliche Instrumente
Rummelhardtgasse 6/3
P.O. Box 33, Vienna IX/71
Tel. 426 181

BELGIUM

Hewlett-Packard Benelux S.A.
20-24 rue de l'Hopital
Brussels
Tel. 11 22 20

BRAZIL

Ciental Importacao e Comercio Ltda.
Rua des Eliseu Guilherme, 62
Sao Paulo 8
Tel. 70-2318

CHILE

Hector Calcagni
Casilla 13942
Santiago
Tel. 6.42.26

DENMARK

Tage Olsen A/S
Ronnegade 1
Copenhagen 0
Tel. 29 48 00

FINLAND

INTO O/Y
Meritullinkatu 11
P.O. Box 153
Helsinki
Tel. 6 11 33

FRANCE

Hewlett-Packard France
150 Boulevard Massena
Paris 13
Tel. 707 97 19

Hewlett-Packard France
2 rue Tete d'Or
Lyon, 6 - Rhone
Tel. 52 35 66

GERMANY

Hewlett-Packard Vertriebs-GmbH
Kurfürstenstrasse 95
Frankfurt a. Main
Tel. 52 00 36

Hewlett-Packard Vertriebs-GmbH
Reginfriedstrasse 13, Munich 9
Tel. 49 51 21

Hewlett-Packard Vertriebs-GmbH
Beim Strohhaus 26/28
Hamburg 1
Tel. 24 05 51

Hewlett-Packard Vertriebs-GmbH
(Technisches Büro)
Herrenberger Strasse 110
Böblingen, Württemberg
Tel. 6971

Hewlett-Packard Vertriebs-GmbH
Lietzenburger Strasse 30
1 Berlin W 30
Tel. 24 86 36

Hewlett-Packard Vertriebs-GmbH
Achenbachstrasse 15
4 Düsseldorf 1,
Tel. 68 52 58

GREECE

K. Karayannis
Klaftmonos Square
Athens 124
Tel. 230 301

INDIA

The Scientific Instrument Co., Ltd.
6, Tej Bahadur Sapru Road
Allahabad 1
Tel. 2451

The Scientific Instrument Co., Ltd.
240, Dr. Dadabhai Naoroji Road
Bombay 1
Tel. 26-2642

The Scientific Instrument Co., Ltd.
11 Esplanade East, Calcutta 1
Tel. 23-4129

The Scientific Instrument Co., Ltd.
30 Mount Road, Madras 1
Tel. 86339

The Scientific Instrument Co., Ltd.
B-7, Ajmeri Gate Extn.
New Delhi 1
Tel. 271053

IRAN

Telecom, Ltd.
P.O. Box 1812
Teheran
Tel. 43850, 48111

ISRAEL

Electronics & Engineering Ltd.
Division of Motorola Israel Ltd.
16, Kremenetski Street, Tel-Aviv
Tel. 35021

ITALY

Hewlett-Packard Italiana S.p.A.
Viale Lunigiana 46, Milan
Tel. 69 15 84

Hewlett-Packard Italiana S.p.A.
Palazzo Italia
Piazza Marconi 25, Rome-Eur
Tel. 591 2544

JAPAN

Yokogawa-Hewlett-Packard Ltd.
59, 1-chome
Yoyogi
Shibuya-ku
Tokyo,
Tel. 370-2281

Yokogawa-Hewlett-Packard Ltd.
8, Umeda
Kita-ku, Osaka City
Tel. 313-0091

Yokogawa-Hewlett-Packard Ltd.
4, 3-chome
Himeikadori
Chigusa-ku, Nagoya City
Tel. 751-8545

KOREA

American Trading Co., Korea, Ltd.
Seoul P.O. Box 1103
112-35 Sokong-Dong
Jung-ku, Seoul
Tel. 3.7049, 3.7613

LEBANON

Constantin E. Macridis
Clemenceau Street
Clemenceau Center
Beirut
Tel. 220846

NETHERLANDS

Hewlett-Packard Benelux, N.V.
23 Burg, Roellstraat
Amsterdam, W.
Tel. (020) 13 28 98

NEW ZEALAND

Sample Electronics (N.Z.) Ltd.
8 Matipo Street
Onehunga S.E. 5, Auckland
Tel. 565-361

NORWAY

Morgenstjerne & Co. A/S
Ingeniofirma
6 Wessels Gate, Oslo
Tel. 20 16 35

PAKISTAN

Mushko & Company, Ltd.
Oosman Chambers
Victoria Road
Karachi 3, West Pakistan
Tel. 54601

Mushko & Company, Ltd.
Zirat Chambers
31, Jinnah Avenue
Dacca, East Pakistan
Tel. 80058

PANAMA

Electronico Balboa, S.A.
P.O. Box 4929
Panama City
Tel. 3-0833

PERU

Fernando Ezeta B
Av. Petit Thouars 4719
Mira Flores, Lima
Tel. 5-0346

PORTUGAL

Telectra
Rua Rodrigo da Fonseca 103
P.O. Box 2531, Lisbon 1
Tel. 68 60 72

PUERTO RICO

San Juan Electronics, Inc.
Ponce de Leon No. 150, Stop 3
Pta. de Tierra Sta., San Juan
Tel. 725-3342

SPAIN

Ataio Ingenieros
Enrique Lareta 12
Madrid, 16
Tel. 235 43 44-5

SOUTH AFRICA

F.H. Flanter & Co. (Pty.), Ltd.
Rosella House
Buitencingle Street
Cape Town
Tel. 3-3817

F.H. Flanter & Co. (Pty.), Ltd.
P.O. Box 200, Bramley
775 Pretoria Main Road
Wynberg, Transvaal
Tel. 40-6871

SWEDEN

HP Instrument AB
Centralvagen 28
Solna Centrum
Tel. 08-83 08 30

HP Instrument AB
Box 4028
Indunagatan 28A
Möndal 4
Tel. 27 68 00

SWITZERLAND

Max Paul Frey
Wankdorffeldstrasse 66
Berne
Tel. (031) 42 00 78

TAIWAN

Hwa Sheng Electronic Co., Ltd.
P.O. Box 1558
21 Nanking West Road
Taipei
Tel. 46076, 45936

TURKEY

Telekom Engineering Bureau
P.O. Box 376 - Galata
Istanbul
Tel. 49 40 40

UNITED KINGDOM

Hewlett-Packard Ltd.
Dallas Road
Bedford, England
Tel. 68052

VENEZUELA

Citec, C.A.
Edif. Arisan-Of. No. 4
Avda. Francisco de Miranda
Chacaito
Caracas
Tel. 71.88.05

YUGOSLAVIA

Belram S.A.
83 Avenue des Mimosas
Brussels 15, Belgium
Tel. 35 29 58

**For Sales and Service
Assistance in Areas Not
Listed Contact:**

EUROPE

Hewlett-Packard, S.A.
54 Route des Acacias
Geneva, Switzerland
Tel. (022) 42.81.50

ELSEWHERE

Hewlett-Packard
1501 Page Mill Road
Palo Alto, California 94304, U.S.A.
Tel. (415) 326-7000

